


Service Manual



AUTOMOTIVE CONSUMER ELECTRONICS CQ-DFX888/777LEN

High-Power CD Player / RDS Receiver with Changer Control

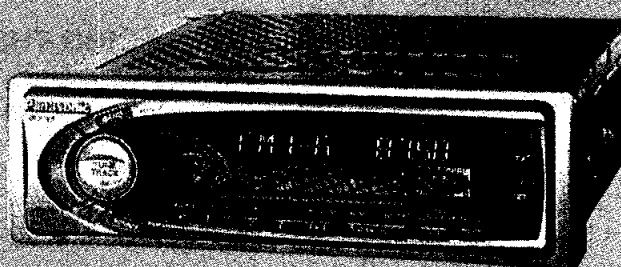

< CQ-DFX888LEN >

Specifications*

General

Power Supply	: DC 12V (11V - 16V), Test Voltage 14.4V Negative Ground
Tone Controls	: Bass ; ± 12 dB at 100Hz Treble ; ± 12 dB at 10kHz
Current Consumption	: Less than 2.5A (CD mode, 0.5W 4-Speaker)
Maximum Power Output	
CQ-DFX888LEN	: 60W $\times$ 4 (at 4 Ω)
CQ-DFX777LEN	: 40W $\times$ 4 (at 4 Ω)
Power Output	
CQ-DFX888LEN	: 30W $\times$ 4 (DIN45 324, at 4 Ω)
CQ-DFX777LEN	: 20W $\times$ 4 (DIN45 324, at 4 Ω)
Center Speaker Output	: 5W (Only for CQ-DFX888LEN)
Speaker Impedance	: 4-8 Ω
Pre-Amp Output Voltage	
CQ-DFX888LEN	: 4V (CD mode)
CQ-DFX777LEN	: 2V (CD mode)
Pre-Amp Output Impedance	: 600 Ω
Sub-Woofer Output Voltage	: 4V (Only for CQ-DFX888LEN)

FM Stereo Radio

Frequency Range	: 87.5 - 108MHz
Usable Sensitivity	: 6dB/ μ V(S/N 30dB)

MW Radio

Frequency Range	: 531 - 1,602kHz
Usable Sensitivity	: 28dB/ μ V(S/N 20dB)

LW Radio

Frequency Range	: 153 - 279kHz
Usable Sensitivity	: 32dB/ μ V(S/N 20dB)

CD Player

Sampling Frequency	: 8 times oversampling
Pick-Up Type	: Astigma 3-beam
Light Source	: Semiconductor laser
Wavelength	: 780nm
Frequency Response	: 20Hz to 20,000Hz (± 1 dB)
Signal to Noise Ratio	: 96dB
Wow and Flutter	: Below measurable limits
Channel Separation	: 75dB

Center Speaker System (Only for CQ-DFX888LEN)

Maximum Power Input	: 45W
Voice coil Impedance	: 4 Ω

Dimensions**

: 178(W) $\times$ 50(H) $\times$ 150(D)mm

Weight**

: 1.5kg (CQ-DFX888LEN)
: 1.6kg (CQ-DFX777LEN)

* Specifications and the design are subject to possible modification without notice due to improvements

** Dimensions and Weight shown are approximate.

©1999 Matsushita Communication Industrial Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.

Panasonic


(Recycled Paper)

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

	Page
DIMENSIONS	1
FEATURES	1
REPLACEMENT FUSE	1
MAINTENANCE	1
RADIO ALIGNMENT	1
CD DECK ALIGNMENT	1
LABEL INDICATIONS AND THEIR LOCATIONS	2
LASER PRODUCTS	2
PRECAUTIONS	2
< OPERATING INSTRUCTIONS >	
Power and Sound Controls	3, 4
Radio Basics	4
RDS Reception	5, 6
Compact Disc Player Basics	7
CD Changer Basics	7, 8
Remote Control Basics	8
Anti-Theft System	8, 9
Installation Guide	9, 10
Electrical Connection	10
Speaker Connection	10
WIRING CONNECTION	11
BLOCK DIAGRAM	12
WIRING DIAGRAM (Display)	13
WIRING DIAGRAM (CD Servo)	14
WIRING DIAGRAM (Main)	15
SCHEMATIC DIAGRAM (Display)	16
SCHEMATIC DIAGRAM (CD Servo)	17
SCHEMATIC DIAGRAM (Main:DFX888LEN)	18
SCHEMATIC DIAGRAM (Main:DFX777LEN)	19
SCHEMATIC/WIRING DIAGRAM (Sub.)	20
SCHEMATIC/WIRING DIAGRAM (DC-DC)	21
TERMINALS DESCRIPTION	22,23
PACKAGE AND IC BLOCK DIAGRAM	24~27
REPLACEMENT PARTS LIST	28 ~ 39, 41
EXPLODED VIEW (Unit)	40
EXPLODED VIEW (CD Deck)	42

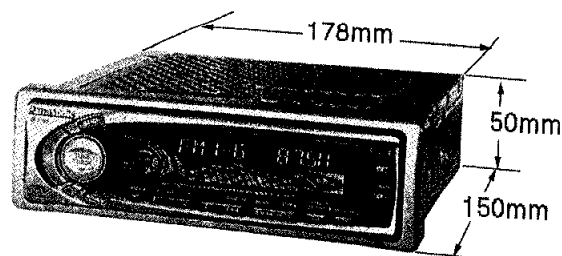DIMENSIONS**FEATURES**

- 8bit-times oversampling 1bit DAC system.
- Digital servo for reliable playback.
- PLL (Phase Locked Loop) synthesized tuning.
- 18-FM, 6-AM presets with preset scan.
- Intelligent volume control.
- Removable face plate.

REPLACING THE FUSE

Use fuses of the same specified rating (15A). Using different substitutes or fuses with higher ratings, or connecting the unit directly without a fuse, could cause fire or damage to the stereo unit.

MAINTENANCE

Your product is designed and manufactured to ensure a minimum of maintenance. Use a soft cloth for routine exterior cleaning. Never use benzine, thinner, or other solvent.

RADIO ALIGNMENT

Do not align the AM and FM package blocks. When the package block is necessary, it will be supplied already aligned at the factory.

CD DECK ALIGNMENT

This model has no servo alignment points because microcomputer controls the servo circuit.


Note:

This operating instruction manual is for two models CQ-DFX888LEN and CQ-DFX777LEN. The differences between these models are mentioned below. All illustrations throughout this manual represent model CQ-DFX888LEN unless otherwise specified.

Operating Controls	MODEL	CQ-DFX888LEN	CQ-DFX777LEN
Output Power		60W	40W
Sub-Woofer		Yes (4V)	None
Spectrum Analyzer		Yes	None
Level Meter		None	Yes
3•DSB		4 Speakers + Center Speaker	4 Speakers
LCD Color		Multi	Blue
Pre-out Level		4V	2V


- Label Indications and Their Locations
- Warnetiketten und deren Anbringungsort
- Indications portées les étiquettes et emplacement

- APPAREIL À LASER DE CLASSE 1
- KLASSE 1 LASER APPARAT
- LUOKAN 1 LASERPLAITE

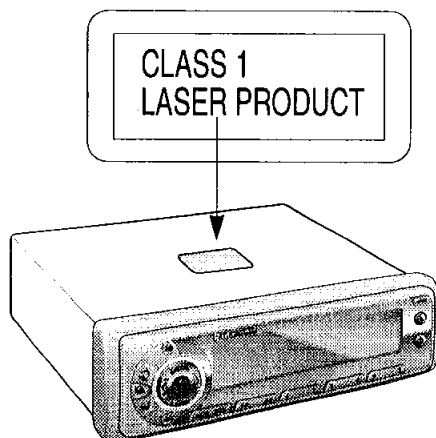

VORSICHT!

UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET IST, NICHT DEM LASERSTRAHL AUSSETZEN.

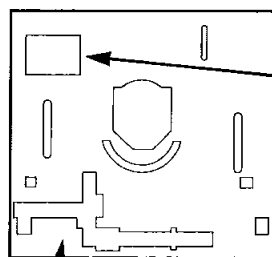

DANGER! Invisible laser radiation when open. Avoid direct exposure to beam.
ADVARSEL! Usynligt laserlys udsendes ved åbning. Undgå direkte bestråling.
VARO! Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä kasto säteeseen.
VARNING! Ösynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.
ADVERSEL! Usynlig laserstrålning når deksel åpnes og sikkerhedslås brytes. Unngå eksponering for strålen.

- Caution Mark
- Warnzeichen
- Marque d'avertissement
- Waarschuwingsteken
- Varningsmärke
- Marca di precauzione
- Marka de advertencia

- Deck Ass'y (Upper Side)
- Geräteansicht (Oberseite)
- Assemblage de la table lecture (Côté supérieur)
- Dekkbevestig (Bovenkant)
- Däcksenhet (Topp)
- Gruppo della piastra (Lato superiore)
- Conjunto de la platina (Lado superior)

Laser Products

Caution:

This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not take apart this unit or attempt to make any changes yourself.

This unit is a very intricate device that uses a laser pickup to retrieve information from the surface of compact discs. The laser is carefully shielded so that its rays remain inside the cabinet. Therefore, never try to disassemble the player or alter any of its parts since you may be exposed to laser rays and dangerous voltages.

Laser products:

Wave Length 780 nm
 Laser Power No hazardous radiation is emitted with safety protection.

Precautions (ISO connector)


- Wiring for the power connector conforms to the arrangement of standard ISO connectors.
- In case of some car types, the arrangement of connector may differ from the standard ISO as shown in Table 1, even though ISO connectors are adapted.

Table 1

Fig. 1 Pin No.	A4	A7
Car for standard ISO	Battery (permanent 12 V supply)	"IGN" or "ACC" (switched 12 V supply)
In case of Car type A	"IGN" or "ACC" (switched 12 V supply)	Battery (permanent 12 V supply)
In case of Car type B	No Connection	Battery (permanent 12 V supply)



- Make sure the ISO connector arrangement in your car side is as same as the standard ISO. (Table 1, Fig. 1)
- In case of arrangement for Car type A or B, change connections of the red/yellow leads at the re-connectable joint (f) as shown in Fig.1.

Fig.1

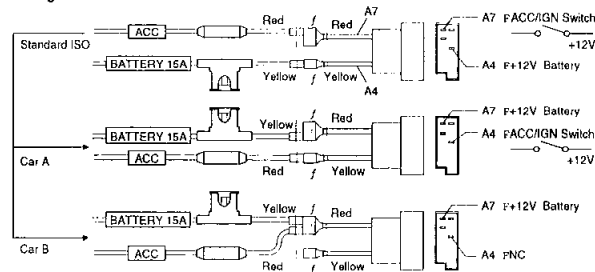

- After fix the connections, the part (f) should be insulated with electrical tape to keep away from unit damage.


Power and Sound Controls

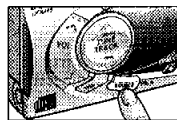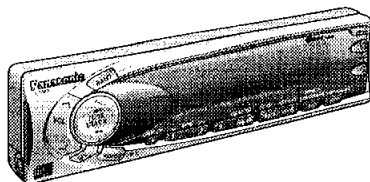

Power

Turn the key in the ignition until the accessory indicator lights. Press [SOURCE](PWR) to switch on the power. Press and hold [SOURCE](PWR) again for more than 2 seconds to switch off the power.

Note: When the power is switched on for the first time, a demonstration message appears on the display. To cancel this display, press [P](DISP/CT).

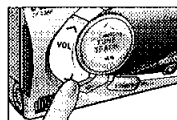


Volume

• Press [^VOL] or [V/VOL] to increase or decrease the volume.

VOL 20 — Volume Level (0 to 40)

• Press [^VOL] or [V/VOL] for more than 0.5 second to change the numeric level in sequence.

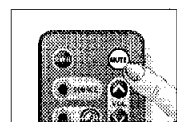

Mute (Only for remote control)


• Press [MUTE] to mute the sound completely.

• Press [MUTE] again to cancel.

3•DSB (3-Dimensional Surround and Super Bass)

3•DSB and Loudness Combination

Press [3•D] to change the combination of the 3•DSB and loudness as follows.



3•DSB Effect Level

• Press and hold [3•D] for more than 2 seconds when 3•DSB is on, and 3•DSB effect level can be adjusted (except during radio mode using the Virtual Stereo Effect).

• Press [^VOL] or [V/VOL] to select one of the 10 volume levels (0 - 9).

3•DSB Center Speaker Volume (Only for CQ-DFX888LEN)

• Press and hold [3•D] until "EFFECT" appears on the display when 3•DSB is on (except during radio mode using the Virtual Stereo Effect).

• Press [^TUNE] or [V/TUNE] to change to the volume adjustment mode for center speaker.



• Press [^VOL] or [V/VOL] to select one of 8 levels (0 to 7) for the center speaker volume.

Notes:

- The spread of sound produced by the conventional 3•DSB can be further increased by using the center speaker.
- The center speaker sounds only when the 3•DSB is turned on (except in Virtual Stereo Effect mode).


3•DSB System

It is a new sound system combining 3-dimensional sound from two front speakers with rear channel super bass when receiving stereo broadcast. 3•DSB also gives you a sound with Virtual Stereo Effect from 4ch speakers when receiving AM monaural broadcast or FM broadcast in the monaural mode. The 3•DSB employs Spatializer™ ICs of Desper Products, Inc.

Notes:



- If no operation is performed in the audio mode for 5 seconds (or 2 seconds in the VOL mode), the display will return from the audio mode to the regular operation mode.
- This unit is equipped with an anti-volume-blast circuit which serves as an automatic volume level adjuster so that you will not be deafened by sudden loud volume. This system operates as follows. When [SOURCE](PWR) is first pressed to switch the unit on, the volume level is low. After that, the volume level will gradually return to the same level as the one before the power was turned off last time. The anti-volume-blast circuit will not work when the volume level is set lower than position 20 on the display.

Power and Sound Controls (continued)

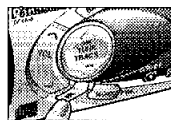


Audio Mode

Press [SEL] to change the audio mode setting as follows.



Bass and Treble

Press [SEL] to change to the bass (or treble) mode. Press [^VOL] or [V/VOL] to increase or decrease the bass (or treble) level.



Balance

Press [SEL] to change to the balance mode. Press [^VOL] or [V/VOL] to shift the sound volume to the right or left speakers.



Fader

Press [SEL] to change to the fader mode. Press [^VOL] or [V/VOL] to shift the sound volume to the front or rear speakers.



Selecting the Auxiliary Source

Press [SOURCE] to change to the AUX input mode.

AUX IN


Canceling the AUX input mode

Press [SOURCE] in the AUX mode to resume the tuner mode.

Note: If no operation is performed in the audio mode for 5 seconds (or 2 seconds in the VOL mode), the display will return from the audio mode (BAS/TRE/BAL/FAD/SUB) to the regular operation mode.

Sub-Woofer

<Only for CQ-DFX888LEN>




Sub-Woofer Volume

(Only for CQ-DFX888LEN)


Press [SEL] to change to the sub-woofer volume mode. Press [^VOL] or [V/VOL] to increase or decrease the sub-woofer volume.

SUBW 4

Sub-Woofer
Volume Level: MUTE (0) to 8




Display Controls

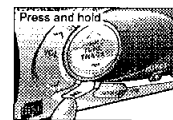


Change to the Display Control Mode

- 1) Press and hold [SEL] for more than 2 seconds to change to the display control mode.
- 2) Press [SEL] to change the display control mode as follows.

For CQ-DFX888LEN



For CQ-DFX777LEN




* See page 42 about Security Indicator.

Power and Sound Controls (continued)

Display Controls (continued)

<Only for CQ-DFX888LEN>



Spectrum Analyzer Display Switching


(Only for CQ-DFX888LEN)

Press [SEL] in the display control mode to change to the spectrum analyzer change mode. Press [^TUNE] to change the spectrum analyzer setting as follows.



([V TUNE] : opposite direction)


<Only for CQ-DFX777LEN>




Level Meter

(Only for CQ-DFX777LEN)

Press [SEL] in the display control mode to change to the level meter change mode. Press [^TUNE] to change the level meter setting as follows.



([V TUNE] : opposite direction)



Dimmer

Press [SEL] in the display control mode to change to the dimmer change mode. Press [V TUNE] to change the dimmer level setting as follows.





([^ TUNE] : opposite direction)

Note: If no operation is performed in the display control mode for 5 seconds, the display will return from the display control mode to the previous mode.


22

Radio Basics

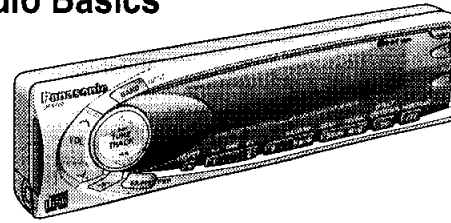


Tuner Mode

Press [SOURCE] to change the operation mode setting as follows.




FM 1 87.50




Band

Press [BAND] to change the band setting as follows.




The stereo indicator lights during reception of a stereo broadcast.



Manual Tuning

Press [^TUNE] or [V TUNE] to tune in a higher or lower frequency.

FM 1 87.50




Seek Tuning

Press and hold [^TUNE] or [V TUNE] for more than 0.5 second, then release it. Tuning will automatically stop when the signals of the next broadcast station are received.

Radio Basics (continued)


Preset Station Setting

FM1, FM2, FM3 and AM (LW/MW) can save maximum 6 stations each in their preset station memories.



Manual Station Preset


- (1) Press [BAND] to select a desired band.
- (2) Use manual or seek tuning to find a station which is to be preset in the memory.
- (3) Press and hold one of the preset buttons [1] to [6] for more than 2 seconds until the display blinks.

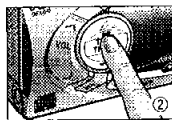

FM 1 1 87.50

Preset Number

Note: You can change the memory presetting by repeating the above procedure.

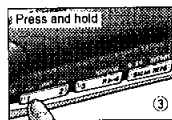

Tuning in a Preset Station


Press the corresponding preset buttons [1] to [6] to tune in a preset station.



Auto Station Preset

Select the band, press and hold [BAND](AUTO P) for more than 2 seconds (Auto Preset Memory).

- The 6 strongest available stations will be automatically saved in the memory on preset buttons [1] to [6].
- Once set, the preset stations are sequentially scanned for 5 seconds each.
- Press the corresponding preset button for the broadcast you want to listen to.



Caution: To ensure safety, never attempt to preset stations while you are driving.



24

MONO/LOCAL Selection

- At the MONO setting, the amount of interference heard when weak signals are received from an FM broadcast station is significantly decreased.
- At the LOCAL setting, the station search stops automatically as soon as strong signals are received.


① FM broadcasts

Press and hold [PTY](MONO/LOC) to change the mode until the desired mode is reached, then release it.



② AM broadcasts

Press [PTY](MONO/LOC) to switch on and off the Local mode as follows.



23

25

RDS (Radio Data System) Reception

Many FM stations are broadcasting added data compatible with RDS. This radio set offers convenient functions using such data.

AF (Alternative Frequency)

When receiving condition becomes poor, an RDS station with the same program will be automatically selected.

EON (Enhanced Other Networks)

When EON data is received, the EON indicator lights and the TA and AF functions are expanded. TA: Traffic information from not only the station now tuned in to but also other stations of the same network can be received.

AF: The frequency list of the RDS stations preset by received EON data is updated.

TA (Traffic Announcement)

When an FM station that periodically provides the latest traffic information is received, the TP indicator lights. If TA ON is set, FM traffic information automatically interrupts your listening to a CD, CD changer or AUX until it ends, then you will listen again to whatever you have been listening to.

Best Station Research

If a preset RDS station is in poor condition of reception when you try to tune in to it, the best frequency is selected from the AF list of that station.

REG (Region)

The AF, Best Station Research, PI Seek functions will be as follows:

REG ON: The frequency changes only with the same regional program. This function is mainly used while driving in the same area, for example, in a city.



REG OFF: The frequency changes even with a different regional program if the station is in the same network. The broadcast may be different depending on the case. This function is mainly used when driving far from one region to another.

WHAT PROVIDES EON CAPABILITIES

EON lets the radio set take advantage of RDS information much more than before. It constantly updates the AF list of all presets, including the station currently tuned in to. So, even if you change preset far from home, you will be able to receive the same station at an alternative frequency, or another station serving the same program if any. EON also keeps track of locally available TP stations for quick reception.

Note: When you're in "AF ON" mode, auto preset memory only works for RDS station. When in "TA ON" mode, it only works for TP stations. To make auto preset for ordinary stations, cancel AF mode and change to TA off in advance.

A. Basic Operation in RDS Reception (PS, AF, CT, PI)

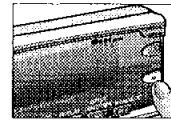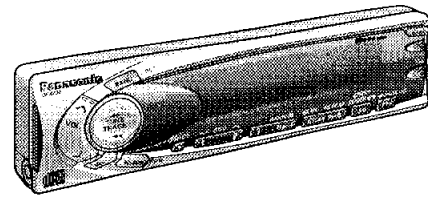


RDS Reception

Press [AF] when receiving a station in the FM1, FM2 or FM3 band.

- The operating mode changes to AF ON or AF OFF, respectively.

33C R4

- Select AF ON if you wish to use the AF network of an RDS station. Best station research is activated at the same time.
- Select AF OFF if the AF network of an RDS station is not necessary.



Changing AF Mode

Press [AF] to change AF ON and activate best station research at the same time. (3 seconds maximum)

AF 1 ON

..... AF 1 Mode

AF 2 ON

..... AF 2 Mode

AF OFF

..... AF OFF Mode

Notes:


- Default mode is AF1.
- AF1 has a low level of AF operating sensitivity in urban areas. Therefore, AF does not frequently operate even if sensitivity is temporarily lowered between skyscrapers, for example.
- AF2 is for suburban areas with a higher level of sensitivity than AF1.

26

27

RDS (Radio Data System) Reception (continued)

For Seek Tuning, RDS Station Preset, Tuning in a RDS preset station, and Auto RDS Station Preset, please refer to Radio Basics (pages 23 to 25).

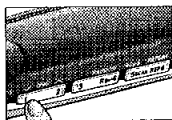

RDS Seek Tuning (PI seek)

The PI seek function may be used if an RDS station selected from the memory is poor in receiving condition. Press the preset button again for the station now tuned in to.



PI Seek: If Best Station Research fails in selecting the best station, the PI seek function operates to automatically tune in to the same program.




Region (REG) Switching

Press and hold [AF] (REG) for more than 2 seconds in AF mode to alternately select between REG ON and REG OFF.

REG ON


Note: If you wish to stay with the same program, keep REG ON. If you keep REG OFF, there is a higher possibility of returning in to an AF station in better receiving condition. The relationship of the PI seek function with REG ON and REG OFF is as described above.



Changing Display

Press [DISP/CT] to change the display as follows.

(Frequency display continues for only 3 seconds, returning to PS display after that.)








Clock Time (CT) System

The CT (24-hour) system may not properly operate in areas where RDS CT service is not available. Once CT service is received, the CT system keeps operating. "NO CT" appears on the display in areas where no CT service is available.

FM 1 CT 12:30

Clock Display

Press [DISP/CT] to indicate the clock display.

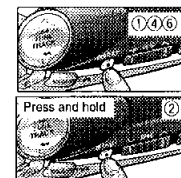

Initial Time Setting



Press [BAND] to change to AM mode.

- Press [DISP/CT]. "NO CT" appears on the display.
- Press and hold [DISP/CT] again for more than 2 seconds, "hours" blinks and the time setting mode is activated.
- To set hours, press [TUNE] or [V/TUNE]. Hold [TUNE] or [V/TUNE] change numbers rapidly.
- Press [DISP/CT] again for minutes setting.
- To set minutes, press [TUNE] or [V/TUNE].
- After setting the time, press [DISP/CT].

Notes:

- If CT display is kept on, it remains on even if [SOURCE] (PWR) and accessory are turned off and back on again.
- In other modes, press [DISP/CT] to get RDS CT-service.

B. TP Reception

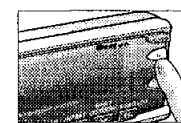

Select traffic information (TA on) mode

Press [TA] to switch on and keep it there when you wish to listen to traffic information. Press [TA] again to switch off.

33C R4

Volume Setting (Only for TA on mode)

Adjust the volume as desired using [VOL] or [V/VOL] while receiving traffic announcement. (TA)

After volume for traffic announcement (TA) is set, the difference between normal volume and TA volume is automatically stored in the memory (up to 5 levels) so that next traffic information will be received at the preceding TA volume which may be higher or lower than normal volume.

Normal volume can be changed up to 5 levels upward or downward. If an adjusted level of volume is over 40 or less than 0, any further change will not be made.

When receiving a station other than TP station (including EON stations)

A traffic information station is automatically searched for and the radio automatically stops the next available TP station.

EON Capabilities:

EON lets the radio take advantage of much more RDS information than before. It constantly updates the AF lists for all switch presets far from home, you will receive an alternative frequency for the same station, or another station carrying the same program, when such exists. EON also keeps track of locally available TP station.

33C R4


Press [TA]

33C R4

28

29

RDS (Radio Data System) Reception (continued)




TP Seek Tuning

Press [TUNE] or [V-TUNE] for more than 0.5 second, then release. The radio automatically stops at the next available TP station.




Auto TP Station Preset

Press and hold [BAND](AUTO-P) for more than 2 seconds. The six strongest available TP stations are automatically saved in the memory on the preset button [1] to [6]. Once saved, the preset stations are sequentially scanned for 5 seconds each.

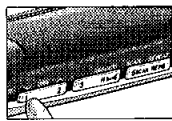

Tuning in a TP Station Preset

Press any of the preset buttons [1] to [6] that you want to listen to. And then Boost Station Research function is activated to automatically select the strongest available frequency for the TP station (through the built-in frequency) lists. If reception is weak.




Muting TA on

Press and hold [TA] for more than 2 seconds to light "TA on". Then traffic announcement (TA) function is activated to operate, allowing you to listen to only Traffic Program whenever it is available.

Muting TA on canceling (Muting TA on - TA on)
Press [TA] again.
Or press [VOL] to increase the volume level.


TP Auto Search

If receiving conditions are poor when TA is on during muting and if there is no other alternative frequency in the same network, a traffic announcement station in good receiving condition is automatically searched for.



CD/CD-C/AUX TA on

Press [TA] during CD, CD changer, AUX mode. When TA on mode is selected while listening to the source in that mode, wait for Traffic Announcement to begin.




Switching to TA off Mode

Select either one of the following steps.

- Press [TA] when TA is on.
- Press and hold [TA] for more than 2 seconds when Muting TA is on.
- Press [TA] when CD/CD-C/AUX TA is on.


C. PTY Reception

(There are some areas where PTY service may not be available.)

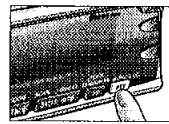

Switching to PTY mode

Press [PTY] to select PTY display mode, and the PTY of the broadcast now received appears on the display.





"NO PTY" appears on the display if there is no corresponding program type.




Changing PTY Display Language

Press [DISP/CT] in PTY mode to alternate the language between English and Swedish.



Program Type Selection

Press [TUNE] or [TUNE] to select the program type as follows.

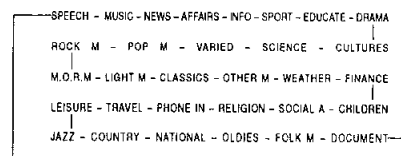

When a desired selection has been made, press [BAND]. Then automatic seek will start to tune in to the station broadcasting the selected program type.

Note:

Seek tuning does not operate as long as "NO PTY" appears on the display.

30

31

RDS (Radio Data System) Reception (continued)





TABLE of PTY CODE and Program Type

Press any of the preset buttons [1] to [6] according to your preference. Those buttons already have the program types as follows. (Default setting)


<PRESET PTY>

Preset No.	1	2	3	4	5	6
Program Type	NEWS	SPEECH	SPORT	POP MUSIC	CLASSICS	MUSIC
Display	NEWS 1	SPEECH 2	SPORT 3	POP M 4	CLASSICS 5	MUSIC 6
	NEWS	AFFAIRS INFO EDUCATE DRAMA CULTURES SCIENCE VARIED WEATHER FINANCE CHILDREN SOCIAL A RELIGION TRAVEL LEISURE DOCUMENT	SPORT	POP M	CLASSICS	ROCK M M.O.R.M LIGHT M OTHER M JAZZ COUNTRY NATIONAL OLDIES FOLK M




Program Type Preset

Press and hold one of the buttons [1] to [6] for more than 2 seconds to preset the desired program type selection in the button.



Tuning in a PTY Preset Station

Press any of the preset buttons [1] to [6] that you want to listen to.



Searching for PTY

- 1) Select the desired station from preset in the preset number buttons [1] to [6]. Then, the preset PTY and that preset number appear on the display for 5 seconds.




- 2) While the desired type from 6 presets appears on the display, take either of the following two steps.


A) Press the same preset button again.

B) Press [BAND].

If the desired PTY station is available, it is directly received. If it is not, "NO PTY" blinks and the radio returns to the station that was received before the search.



Press the same button again to cancel.



Canceling of PTY Mode

Press [PTY] to cancel.

The set returns to the state existing before PTY mode while the receiving frequency remains unchanged.

Emergency Announcement Reception

(Some areas are not covered by emergency announcement service.)


If an emergency announcement is broadcast in muting TA on/CD/CD changer/AUX mode, the radio is automatically selected to receive the emergency announcement. "ALARM" blinks.

32

33

Compact Disc Player Basics

Caution:
Only 12 cm CD is available for this unit.

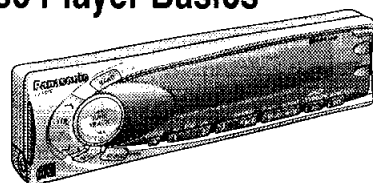

Mode Selection

While a disc is inserted, press [SOURCE] to change the operation mode as follows.

Tuner → CD player (When a CD is inserted) → CD changer control → AUX (When a CD changer is connected)

To Start the CD Player

- ① Press [OPEN] to open the front panel.
- ② With the label side up, insert the disc and playback starts automatically.
- ③ Close the front panel manually. Play will start automatically.

Caution: When the front panel is opened, do not force it down and do not put anything on it because these may result in damage to the unit.

Note: While inserting a CD, the volume decreases to 0 level (MUTE). And the volume is back to the previous level when the front panel is closed completely.

Note: While a disc is inserted, " " indicator lights.

Stopping and Ejecting a Disc


- ① Press [OPEN] to open the front panel.
- ② Press [▲] to stop CD play, and the disc will be quietly ejected from the CD slot.

Caution: When ejecting a CD, do not close the front panel until the CD is ejected and removed from the CD slot completely.

Note: While ejecting a CD, the volume decreases to 0 level (MUTE). And the volume is back to the previous level when the front panel is closed completely.

Selecting a Track

- Press [▶▶TRACK] once to go to the next track.
- Press [◀◀TRACK] once to play from the beginning of the track you are listening to. Press twice to play the previous track.
- Press repeatedly to skip the desired number of tracks.



Searching a Track

- Press and hold [◀◀TRACK] or [▶▶TRACK] for more than 0.5 second to activate reverse through or fast forward a track.
- Release [◀◀TRACK] or [▶▶TRACK] to resume the regular CD play.

Repeating a Track

- Press [6](REP) to repeat the current selection.

CD 03 2'01"

- Press [6](REP) again to cancel.

Random Selection

- Press [4](R ▶). A random selection of music is played from all available tracks.

CD 03 2'01"

- Press [4](R ▶) again to cancel.

Note: When [6](REP) is pressed in the random mode, random play stops and repeat play starts.

Scanning a Disc


- Press [5](SCAN). The display will blink and the first 10 seconds of each track on the disc will play in order.

CD 03 8'01"

- Press [5](SCAN) again to cancel.

Changing the Display

Press [•](DISP/CT) to change the display as follows.



34



35

CD Changer Basics

When the unit is connected with a CD text recognizable CD changer (CX-DP9061EN, for example), CD text can appear on the display.

Note:

The CD changer functions work for a product equipped with the optional CD changer unit (sold separately).

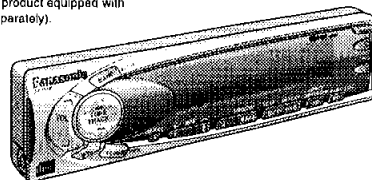

Starting the CD Changer

Once the CD changer has been connected, press [SOURCE] to change to the CD changer mode as follows. When a disc magazine is inserted, CD play starts automatically.

Tuner → CD player (When a CD is inserted) → CD changer control → AUX (When a CD changer is connected)

1-01 0'10"

Disc Selection

Press [1](V/DISC) or [2](^/DISC) to select a disc in descending or ascending order.

3-01 12'34"


Then, the selected disc will start to play from the first track.

Track Selection

- Press [▶▶TRACK] to advance to the next track.
- Press [◀◀TRACK] to start play from the beginning of the track now playing.
- Press [▶▶TRACK] or [◀◀TRACK] repeatedly to skip the desired number of tracks.

Track Search

- Press and hold [▶▶TRACK] or [◀◀TRACK] for more than 0.5 second to advance or reverse through a track.
- Release [▶▶TRACK] or [◀◀TRACK] to resume regular CD changer play from the released position.




Track Repeat

- Press [6](REPEAT) to repeat the current selection.

3-01 12'34"

- Press [6](REPEAT) again to cancel.




Disc Repeat

- Press and hold [6](REPEAT) for more than 2 seconds to repeat the current disc selection.

3-01 12'34"

- Press and hold [6](REPEAT) for more than 2 seconds again to cancel.

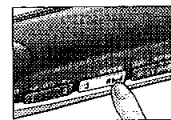

Track Random

- Press [4](RANDOM). All the available tracks on all discs in the magazine will be played in a random sequence.

3-01 12'34"

- Press [4](RANDOM) again to cancel.



Disc Random

- Press and hold [4](RANDOM) for more than 2 seconds. All the available tracks on the current disc will be played in a random sequence.

3-01 12'34"

- Press and hold [4](RANDOM) for more than 2 seconds again to cancel.

Note: When [6](REPEAT) is pressed in the random mode, random play stops and repeat play starts.

Track Scan

- Press [5](SCAN). The display blinks and the first 10 seconds of each track on the discs play in sequence.

3-01 12'34"

- Press [5](SCAN) again to cancel.

Disc Scan

- Press and hold [5](SCAN) for more than 2 seconds. The 1st track of all the discs in the magazine is played for 10 seconds each.


3-01 12'34"

- Press and hold [5](SCAN) for more than 2 seconds again to cancel.

36


37

CD Changer Basics (continued)

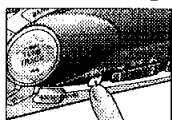

Changing the Display

Press [DIS/PICT] to change the display as follows.



Disc Title Example

CELINE D

Track Title Example

JE ERDIS

When [DIS/PICT] is pressed for more than 2 seconds while the Track Title or Disc Title appears on the display, the Title display scroll can be switched on or off. (Default: the Title display scroll on)

Notes:

- Track title or disc title appears on the display only when the unit is connected to a CD changer that can recognize CD text (CX-DP9061EN, for example).
- "NO TITLE" appears on the display if a disc which does not support the text display has been loaded.

Error Display Messages for CD/CD Changer


E1	Appears on the display when the compact disc is dirty or upside down. The disc will be ejected automatically.
E2	Appears on the display when compact disc is scratched. The disc will be ejected automatically.
E3	Appears on the display when the compact disc stops operating for some reason. Please eject the CD. If the error message E3 is still displayed, please turn off the car engine (ACC off) and remove the fuse from yellow lead for 1 minute. Then reinstall the fuse.
0000	Appears on the display when there is no disc in the magazine.

38

Remote Control Basics

Battery Replacement:

- Remove the battery holder. Take hold of the holder at position B and pull it out to remove the battery by pushing position A in the direction shown by the arrow.
- Replace the battery. Set a new battery properly with its (+) side facing up as shown in the figure.
- Insert the battery holder. Push in the battery holder back into its original position.

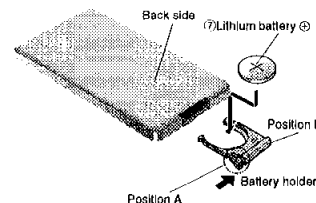

Battery Notes:

Remove and dispose of an old battery immediately.

Battery Information:

- Battery type: Panasonic Lithium battery (CR2025)
- Battery Life: 6 months with normal use (at room temperature)


Caution:

Improper use of batteries may cause overheating, explosion or ignition, resulting in injury or fire. Battery leakage may cause damage to the unit.

- Do not disassemble or short the battery. Do not throw a battery into a fire.
- Keep batteries out of the reach of children to avoid the risk of accidents.

Main Controls:

For details of each function, refer to the pages in parentheses. Some of the functions may not be usable even if they are shown.

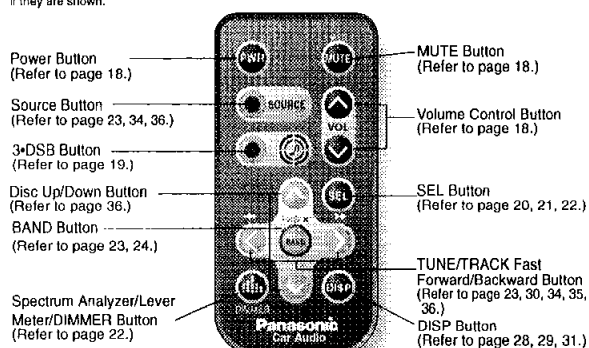

39

Anti-Theft System

This unit is equipped with a removable face plate. By removing this face plate, the radio becomes totally inoperable. The security indicator will blink.

To Remove the Removable Face Plate

- Switch off the power.
- Press [OPEN]. The face plate will be opened.

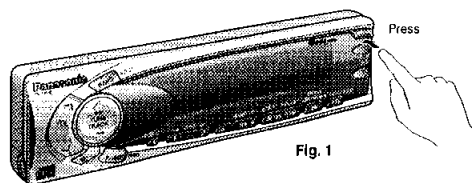


Fig. 1

- Push the face plate to either the right or left, then pull it out toward you.

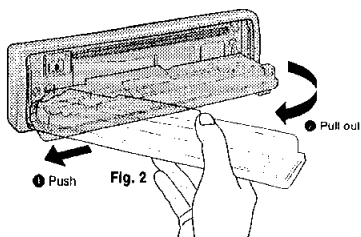


Fig. 2

- As shown in Fig. 3, gently push the lower side of the case and open its cover. Keep the face plate in the case. Then, you can bring the plate safely.

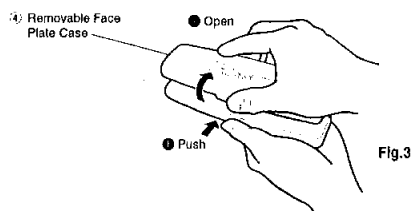


Fig. 3

To install the Removable Face Plate

- Fit either the right or left hole in the face plate over the main unit's pin, and fit it over on the other side while pushing it.

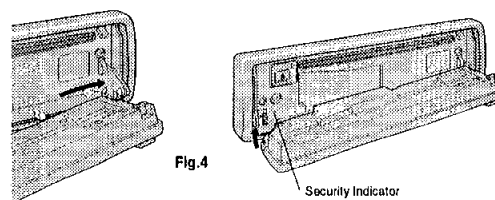


Fig. 4

- After fitting the face plate holes, move the face plate up and down a few times to make sure that it has been fitted securely.

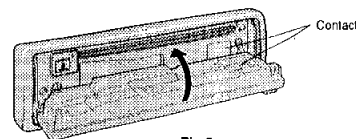


Fig. 5

- Close the front panel and press the right side of face plate until "click" is heard.

Cautions:

- Before removing the face plate, make sure the power is off.
- This face plate is not water-proof. Do not expose it to water or excessive moisture.
- Do not remove the face plate while driving your car.
- Do not place the face plate on the dashboard or nearby areas where the temperature rises to high levels.
- Do not touch the contacts on the face plate or on the main unit, since this may result in poor electrical contacts.
- If dirt or other foreign substances get on the contacts, wipe them off with clean, dry cloth.
- Do not apply a strong downward force onto the face plate and do not put anything on it while it is open, or it might be damaged.

40

41

Anti-Theft System (continued)

Security Indicator


The security indicator blinks when the removable face plate is removed from the unit.

Activate Security Indicator

1. (1) Press and hold [SEL] for more than 2 seconds to change to the display control mode when the power is on.
2. Press [SEL] in the display control mode to change to the security indicator mode. (See page 21.)
3. Press [^TUNE] or [vTUNE] to turn the security indicator on or off.
(Default: The security indicator is on.)

Note: "LED ON" appears on the display when the security indicator is on.

2. To check whether the unit is set in the LED ON mode, make sure that the security indicator blinks when the removable face plate is removed.

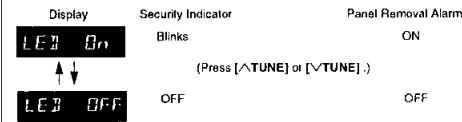

Note: If no operation is performed in the display control mode for 5 seconds, the display will return from the display control mode to the previous mode.

Panel Removal Alarm

This alarm sounds to warn you not to forget to remove the panel before leaving your car. This function is activated when the security indicator is on.

Installation

Preparation

- Before installation check the radio operation with antenna and speakers.
- Disconnect the cable from the negative (-) battery terminal (see caution below).
- Unit should be installed in a horizontal position with the front end up at a convenient angle, but not more than 30°.

Caution:

For installation to cars with trip or navigational computers, all electronic memory settings previously registered in the computer will be lost when the battery terminal is disconnected. For this type of car, battery could not be disconnected. Therefore, extra care should be taken to prevent short circuiting.

In-dash Installation

Installation Opening

In-dash installation can be done if the car's dashboard has an opening for this unit as shown in Fig. 1. The car's dashboard should have a thickness of 4.5mm - 6mm in order to make the installation of the unit.




Fig. 1

Installation Precautions

This product, if possible, should be installed by a professional installer.

In case of difficulty, please consult your nearest authorized Panasonic Service Center.

1. This system is to be used only in a 12-volt, DC battery system (car) with negative ground.
2. Follow the electrical connections on pages 47 to 48 carefully. Failure to do so may result in damage to the unit.
3. Connect the power lead after other connections are made.
4. Be sure to connect the YELLOW lead to the positive terminal (+) of the battery or fuse block (BAT) terminal.
5. Insulate all exposed wires to prevent short circuiting.
6. Secure all loose wires after installing the unit.
7. Please carefully read the operating and installation instructions of the respective equipment before connect.

Supplied Hardwares

No.	Item	Diagram	Q'ty	No.	Item	Diagram	Q'ty
(1)	Mounting Collar		1	(7)	Lithium Battery		1
(2)	Mounting Bolt (5 mm)		1	(8)	ISO Antenna Adaptor		1
(3)	Power Connector		1	(9)	Center Speaker (Only for CQ-DFX888LEN)		1
(4)	Removable Face Plate Case		1	(10)	Center Speaker Extension Cord (Only for CQ-DFX888LEN)		1
(5)	Remote Control Unit		1	(11)	Magic Tape (Only for CQ-DFX888LEN)		2
(6)	Trim Plate		1				


Installation (continued)

Installation Procedures

Note: Disconnect the cable from the negative (-) battery terminal.


1. Secure the Mounting Collar (1).

Insert Mounting Collar (1) into the dashboard, and bend the mounting tabs out with a screwdriver.

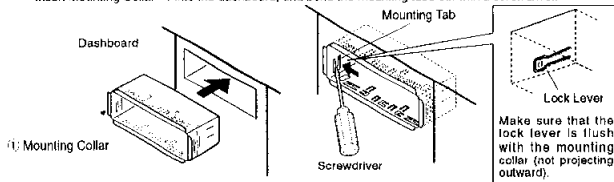

2. Secure the rear of the unit.

- a) Check the electrical connections by referring to this operating instructions.
- b) Connect Mounting Bolt (2), using a suitable wrench.
- c) Insert Power Connector (3) to the unit.

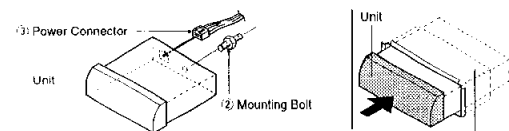


- d) Insert the unit into Mounting Collar (1) and push it in until "click" is heard.
- e) Secure the rear of the unit to the car by either of the two recommended methods.

■ Using the Rear Support Strap (Optional)

Affix one end of the Rear Support Strap to the rear of the unit, and the other end to the Fire Wall of Car, or some other metallic area.

■ Using the Rubber Cushion (Optional)

(If there is an existing Rear Support Bracket on the Fire Wall of Car.) Cover Mounting Bolt (2) on the rear of the unit with Rubber Cushion, and mount it into the existing Rear Support Bracket.

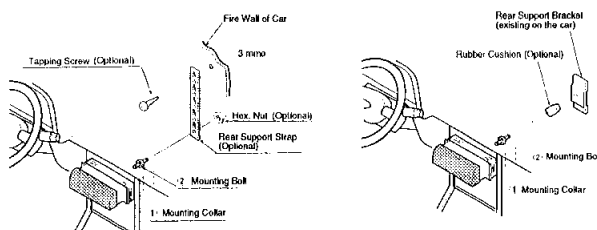


3. Insert Trim Plate (6).


4. After installation reconnect the negative (-) battery terminal.

To Remove the Unit

- a) Remove the removable face plate. (See page 40.)
- b) Remove Trim Plate (6) with a screwdriver as shown in the figure.

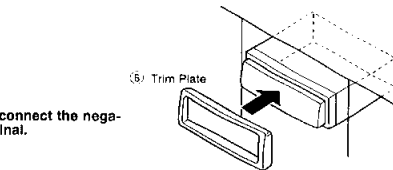

- c) Pull out the unit while pushing the lock lever using screwdriver. (Fig. 1, Fig. 2)
- d) Remove the unit pulling with both hands. (Fig. 3)

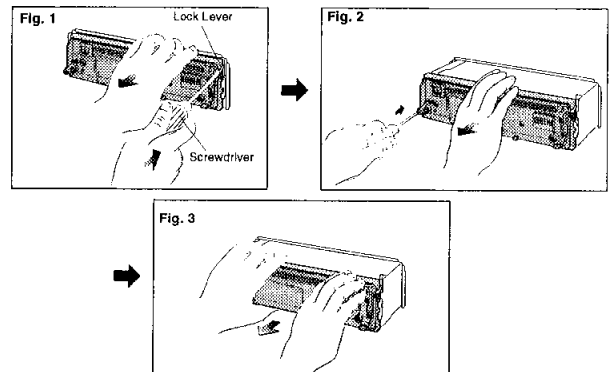

Installation (continued)

Mounting the Center Speaker (Only for DFX-888LEN)

- Attach the two pieces of magic tape (hook side) to the rear of the Center Speaker (Fig. 1).
- Attach the other two pieces of magic tape (loop side) on a flat surface of the dashboard as close as possible to the center (Fig. 2).
- Connect the speaker cord referring to the electrical connection and mount the Center Speaker (Fig. 2).

Fig. 1


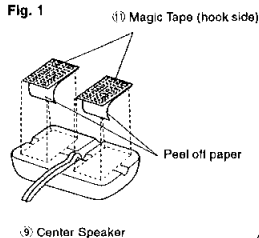


Fig. 2

Mount the Center Speaker (9) as close as possible to the center.

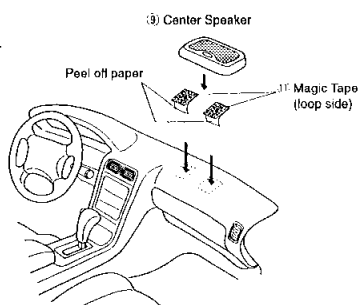


Note: A magic tape fastener has two sides. One is provided with loops and the other with hooks that hook into the loops.

Electrical Connections

Cautions:

- Confirm the note on page 4, and make connections to the connectors on car side.
- To prevent damage to the unit, be sure to follow the connection diagram below.
- Remove the covering of the leads about 5 mm long from their end before connecting. (the cords except for ISO connector's cords)
- Do not insert the power connector into the unit until the wiring is completed.
- Be sure to insulate any exposed wires from a possible short-circuit from the car chassis. Bundle all cables and keep cable terminals free from touching any metal parts.

Cable Wiring Diagram

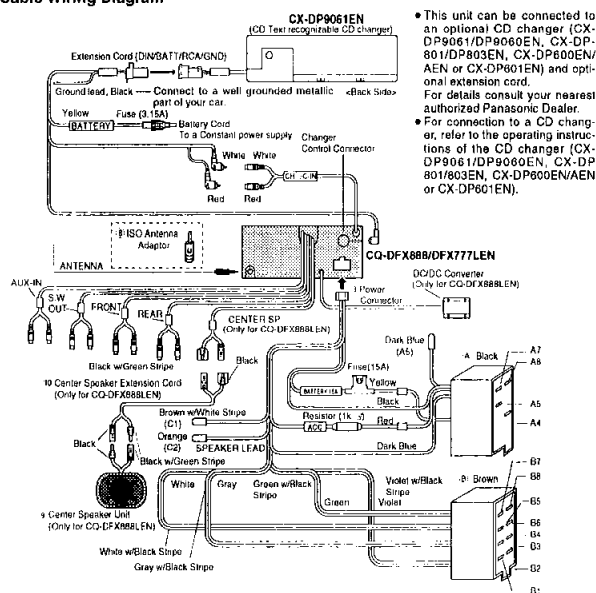

46

47

Electrical Connections (continued)

Loudspeakers (connector B)

	Left +	Left -	Right +	Right -
Front	B5 (White)	B6 (White w/Black Stripe)	B3 (Gray)	B4 (Gray w/Black Stripe)
Rear	B7 (Green)	B8 (Green w/Black Stripe)	B1 (Violet)	B2 (Violet w/Black Stripe)

A4

BATTERY LEAD (To Battery of Car) (Yellow)
Connect to the "BAT" terminal on the fuse block of the car.
The power should be supplied continuously to the yellow leads regardless of the on/off position of the ignition key.

A8

GROUND LEAD (Black)
Connect to a well grounded metallic part of your car.

C1

Not Used

A5

MOTOR ANTENNA RELAY CONTROL LEAD (Dark Blue)
(To Motor Antenna) (Max. 500mA)
This lead is not intended for use with switch actuated power antenna.
AMP-RELAY CONTROL POWER LEAD
This lead is for connection to Panasonic power amplifier.

C2

TELEPHONE MUTE LEAD (Orange)
(To car telephone mute line)
TELEPHONE MUTE
The telephone mute lead, if connected to the car telephone mute line, will activate the muting circuit and the sound from the speakers cannot be heard while the telephone conversation is in progress.
Note: This telephone mute lead is for connection only to the radio mute line. Be sure to ascertain this because it will not work with other type of output system.

A7


POWER LEAD (Red)
Connect to the "radio" power line of the car or to the "IGN" or "ACC" terminal of the fuse block.

Speaker Connections


Cautions:

1. Use ungrounded speakers only.
2. The speakers to be used with this unit should be able to handle more than 60W (CQ-DFX888LEN), 40W (CQ-DFX777LEN) of audio power. If an optional amplifier is used, the speakers should be able to handle the maximum output power of the amplifier. Use of speakers with small input ratings can cause damage to the speakers.
3. The speaker impedance should be 4 $\pm$ 2 ohms. If the impedance is too large or too small, it affects the output and may cause damage to the speakers or this unit.
4. Do not use 3-wire type speaker system having a common earth lead. Never connect the speaker cord to the body of the car. This unit uses the BTCL circuit, so each speaker should be connected separately using parallel vinyl insulated cords.
5. The speaker cords and the power amplifier unit should be kept away (about 30cm apart) from the antenna and antenna extension cord.
6. Follow the connection diagram below carefully. Failure to do so may cause damage to both unit and speakers.

- Unit will be damaged if speakers (Front, Rear) are not connected properly.



- Do not connect more than one speaker to one set of speaker leads.




NOTE: Recommended External AMP Combination (Example)

Preamp out (rear/front)	- CY-M9054 (4ch system)
Sub-Woofers out	- CY-M9054 (2ch system)
	or
	- CY-M7052 (1ch system)

48

49


WIRING CONNECTION

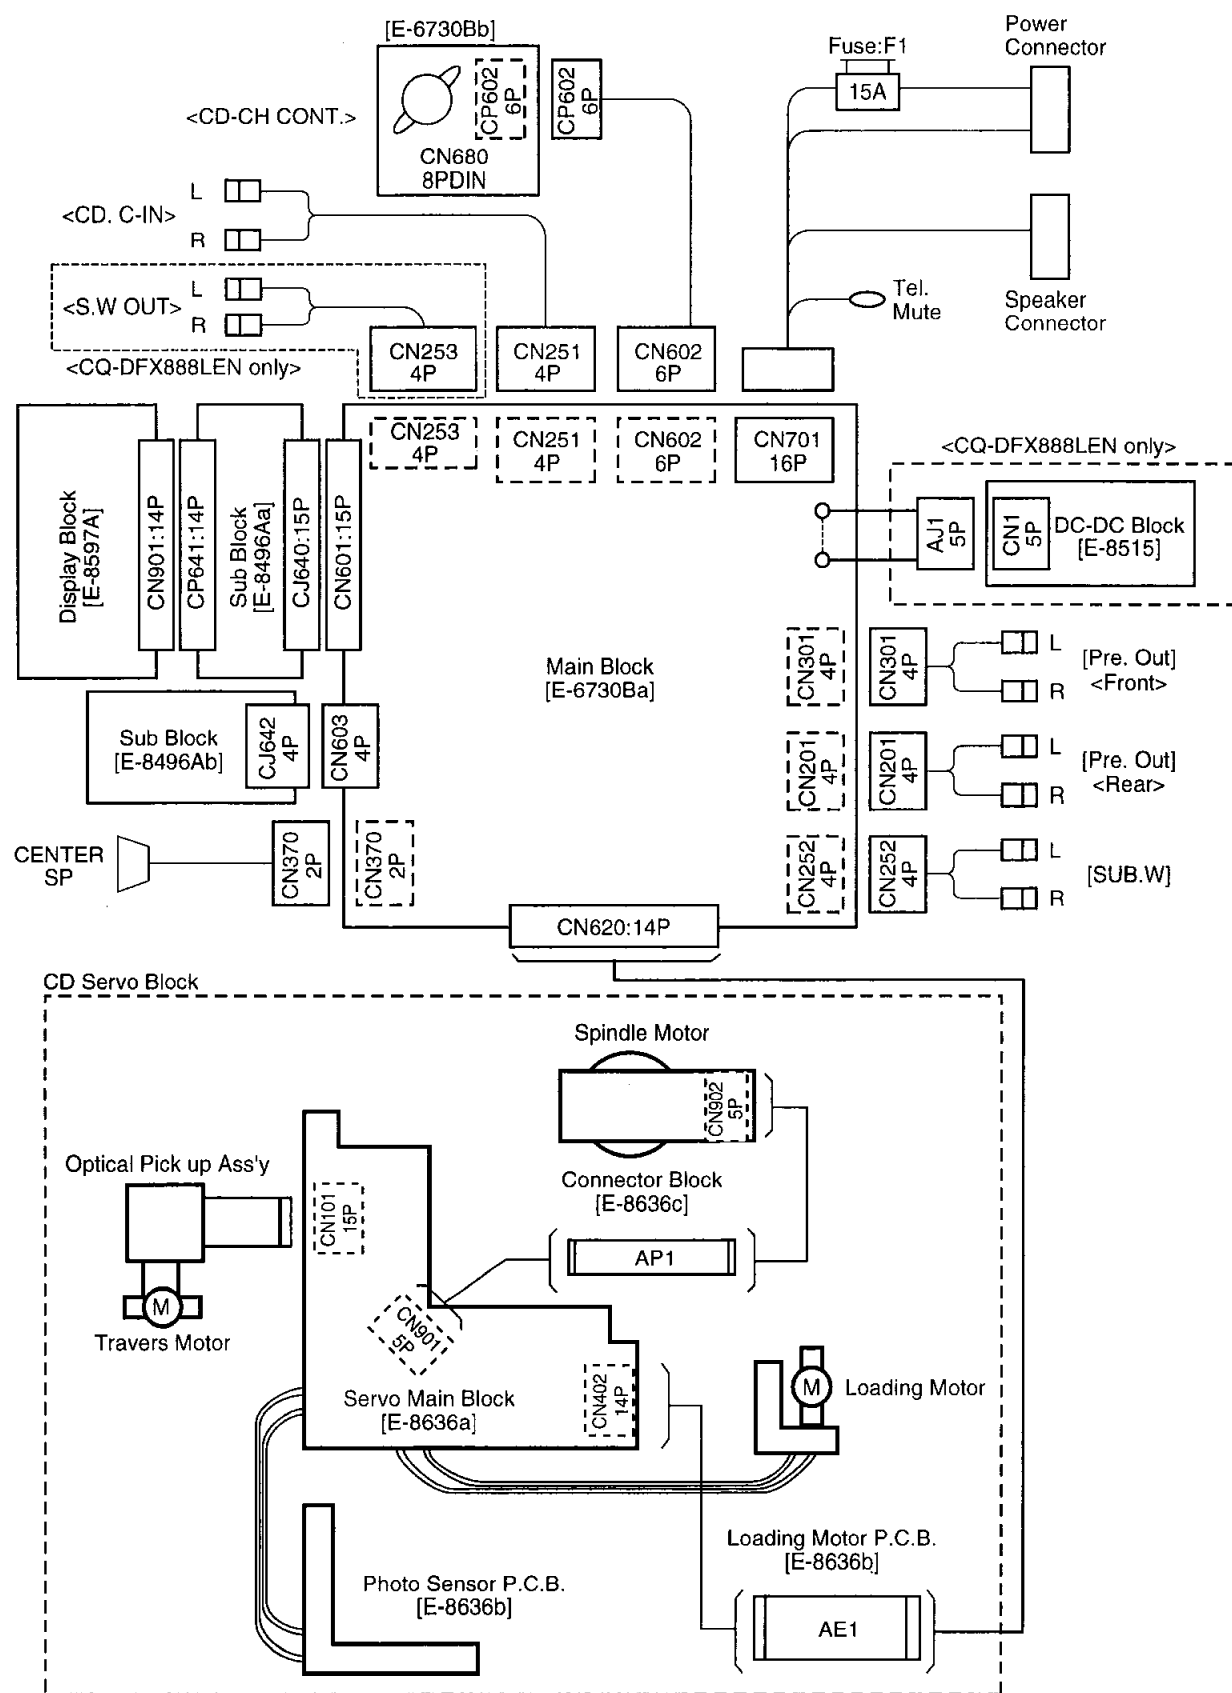

<Note> :


- This mark shows a Ref. No. of connector
- This mark shows a mounting position of connector.

BLOCK DIAGRAM MODELS CQ-DFX888/777LEN

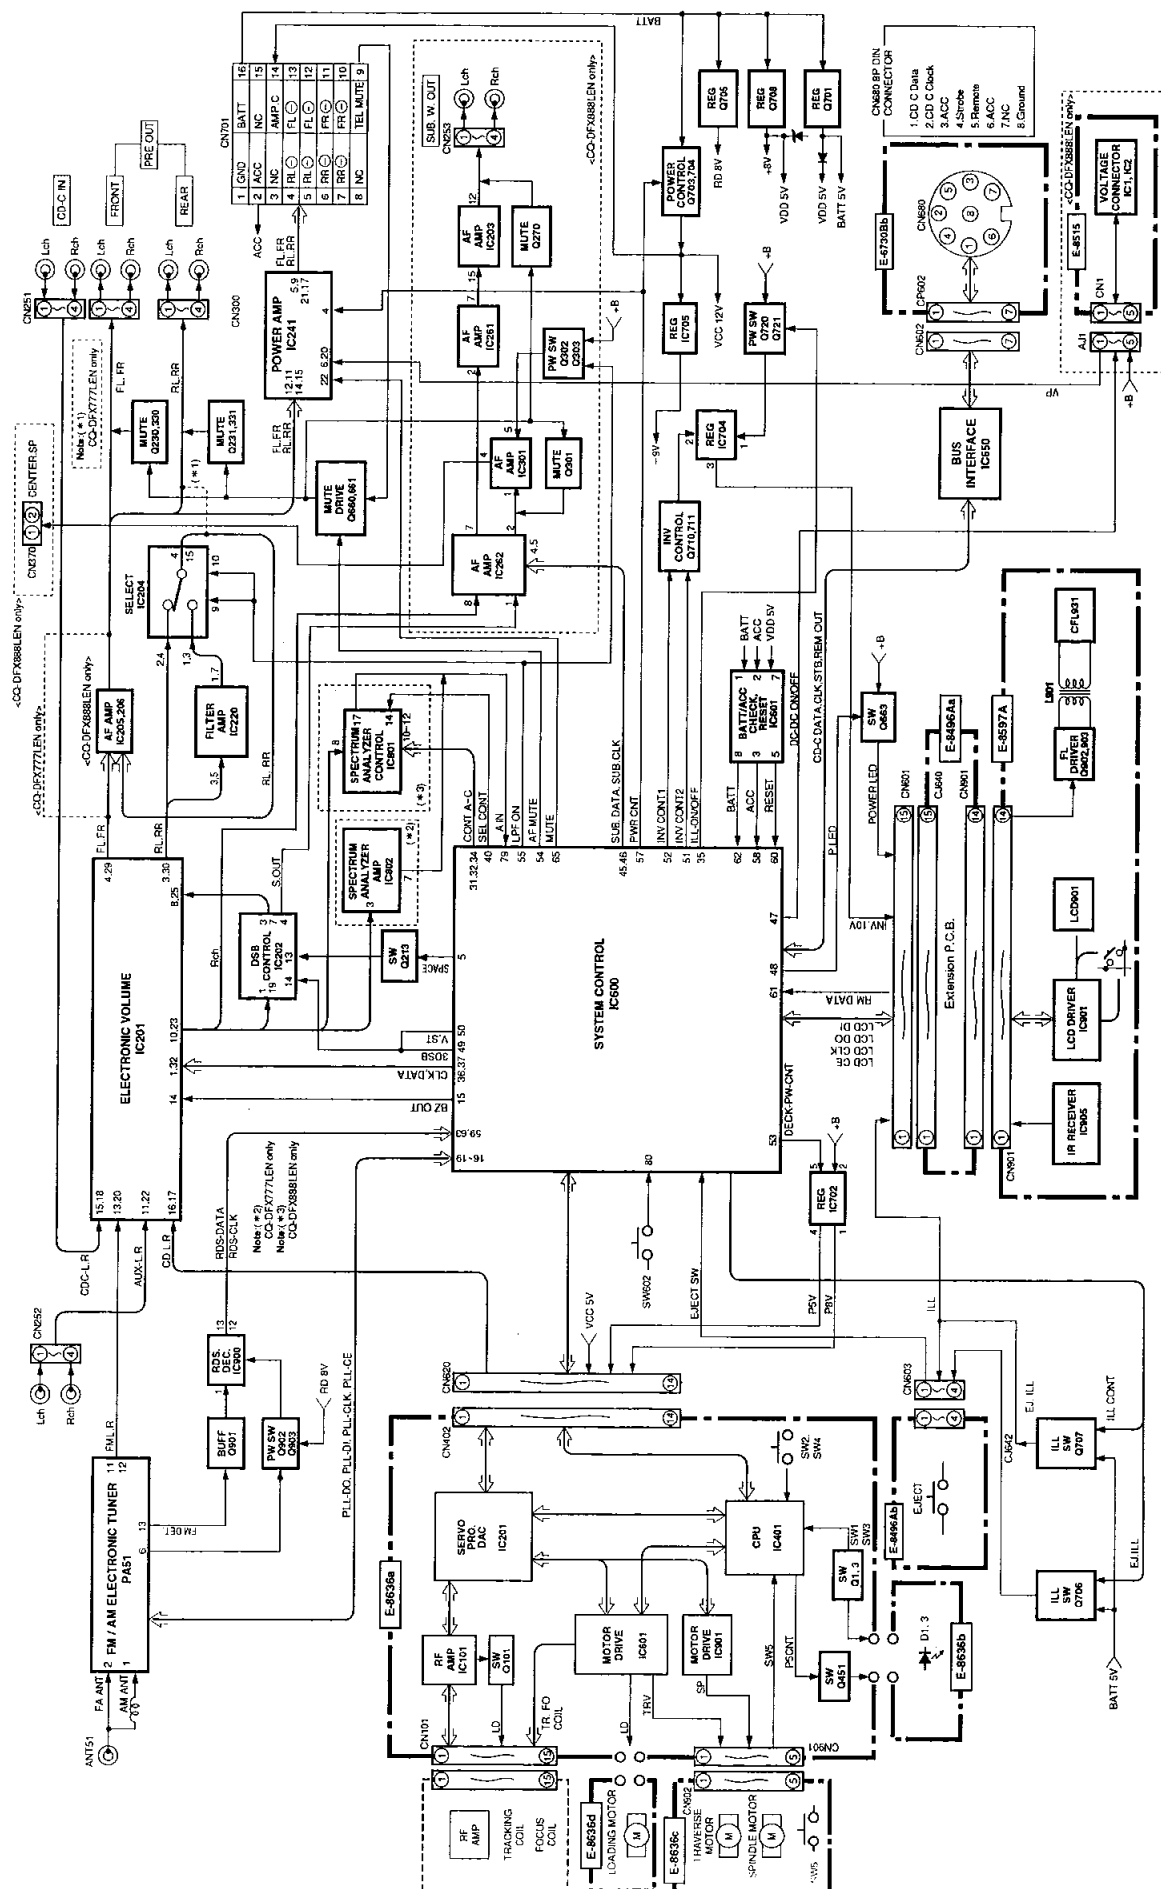


WIRING DIAGRAM (Display Block) MODELS CQ-DFX888/777LEN


[E-8597A]




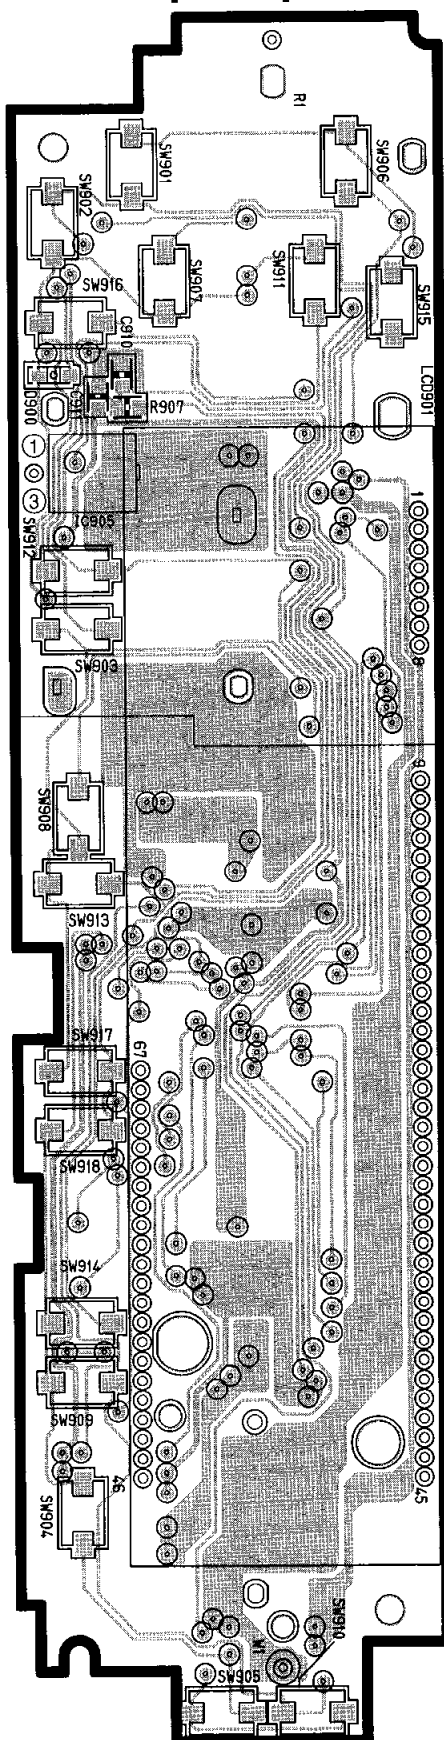


<TOP VIEW>



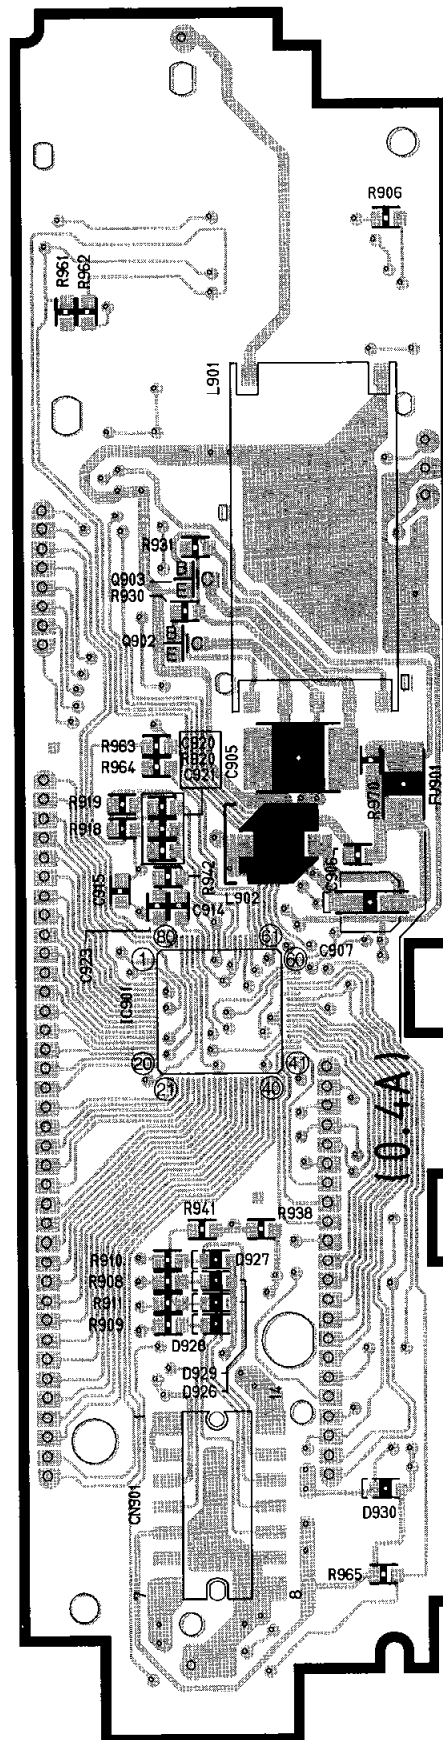


<BOTTOM VIEW>

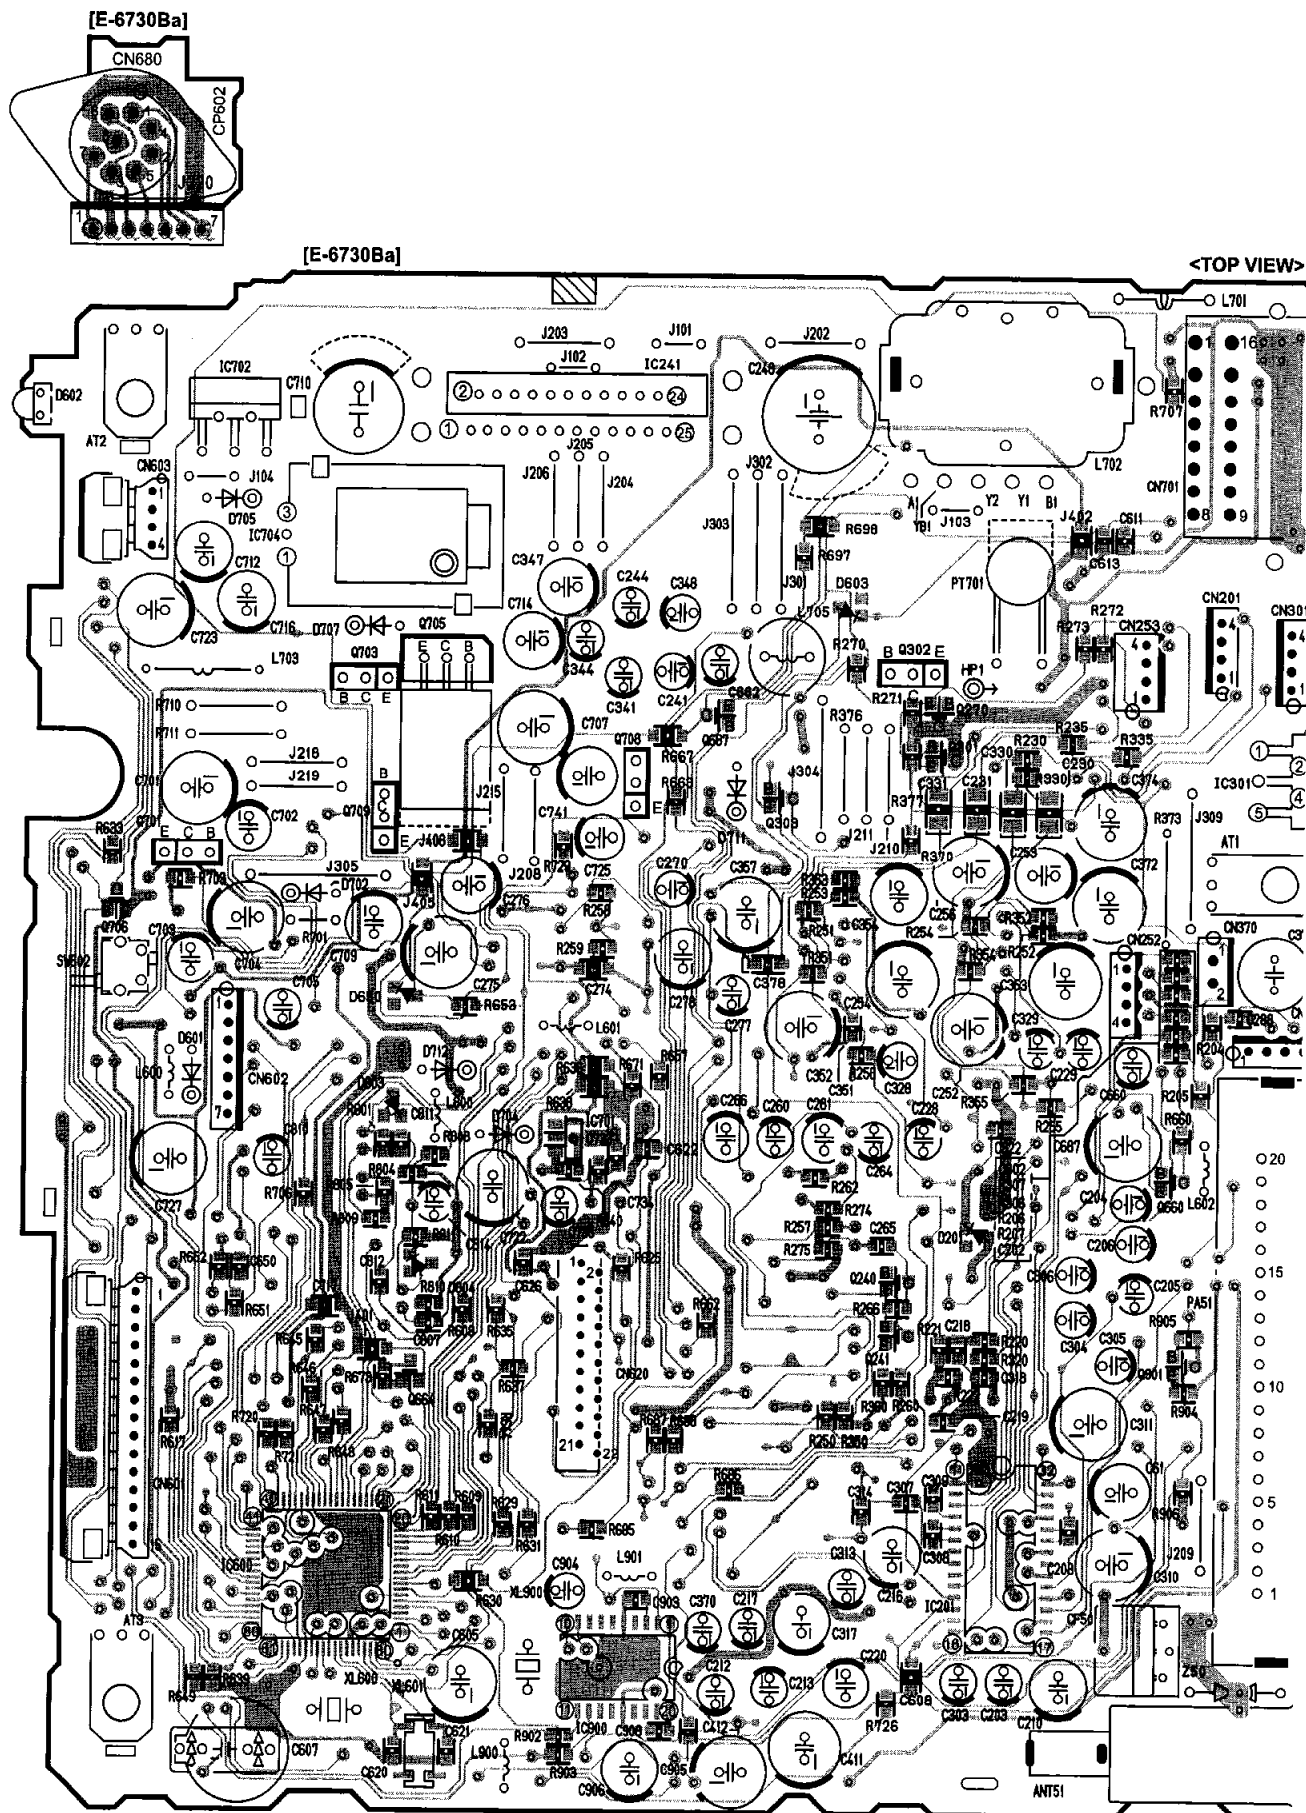


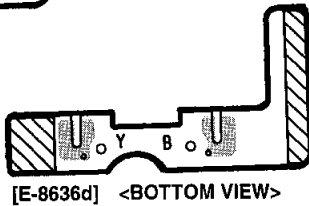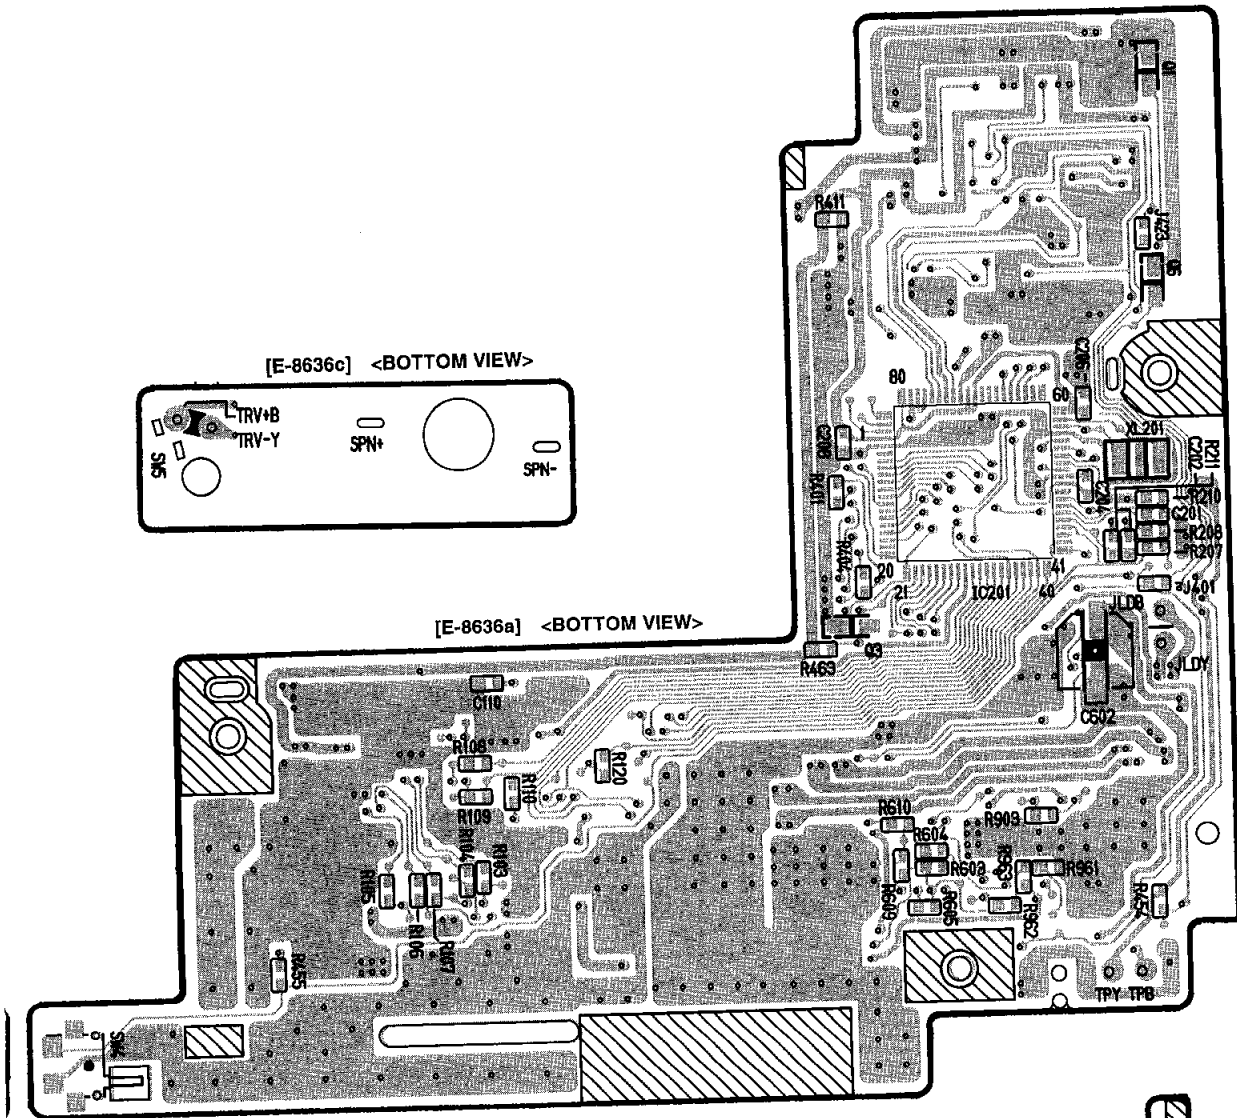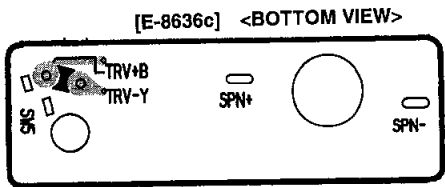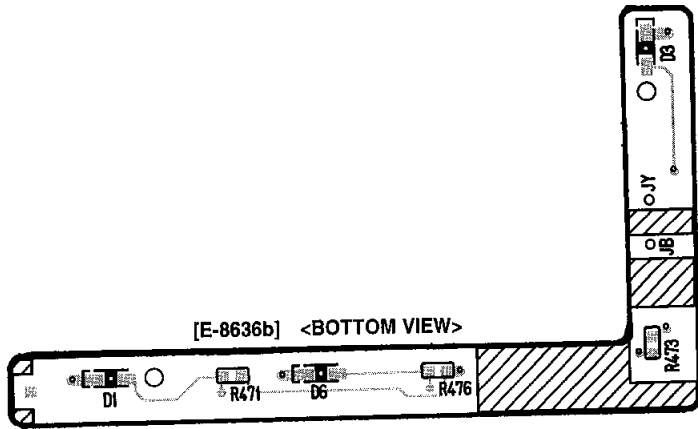


WIRING DIAGRAM (CD Servo Block) MODELS CQ-DFX888/777LEN

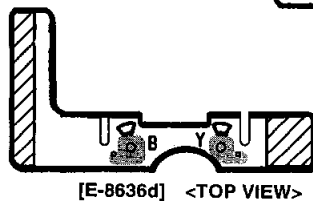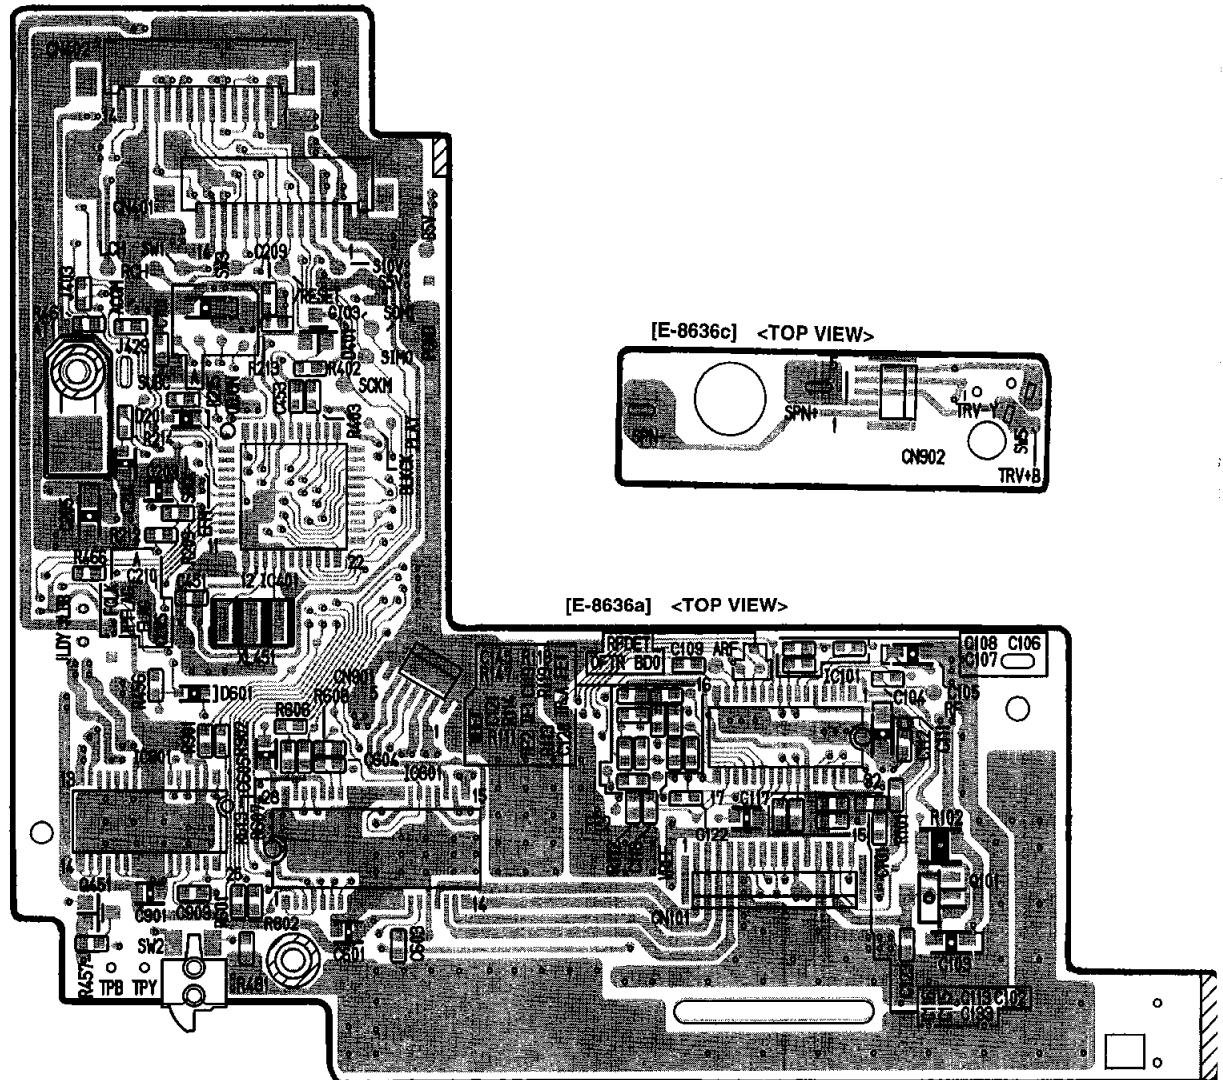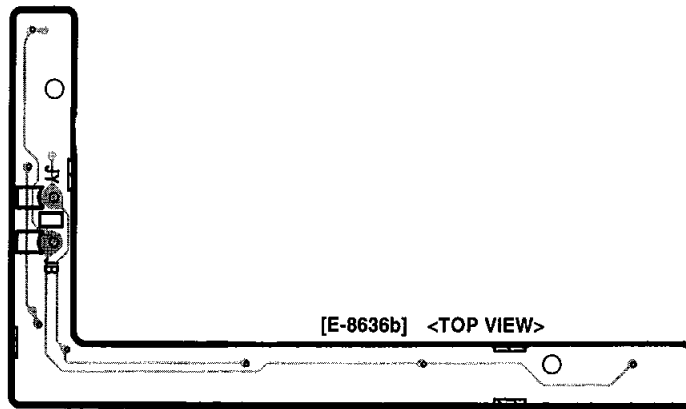

SCHEMATIC DIAGRAM (CD Servo Block) MODELS CQ-DFX888/777LEN

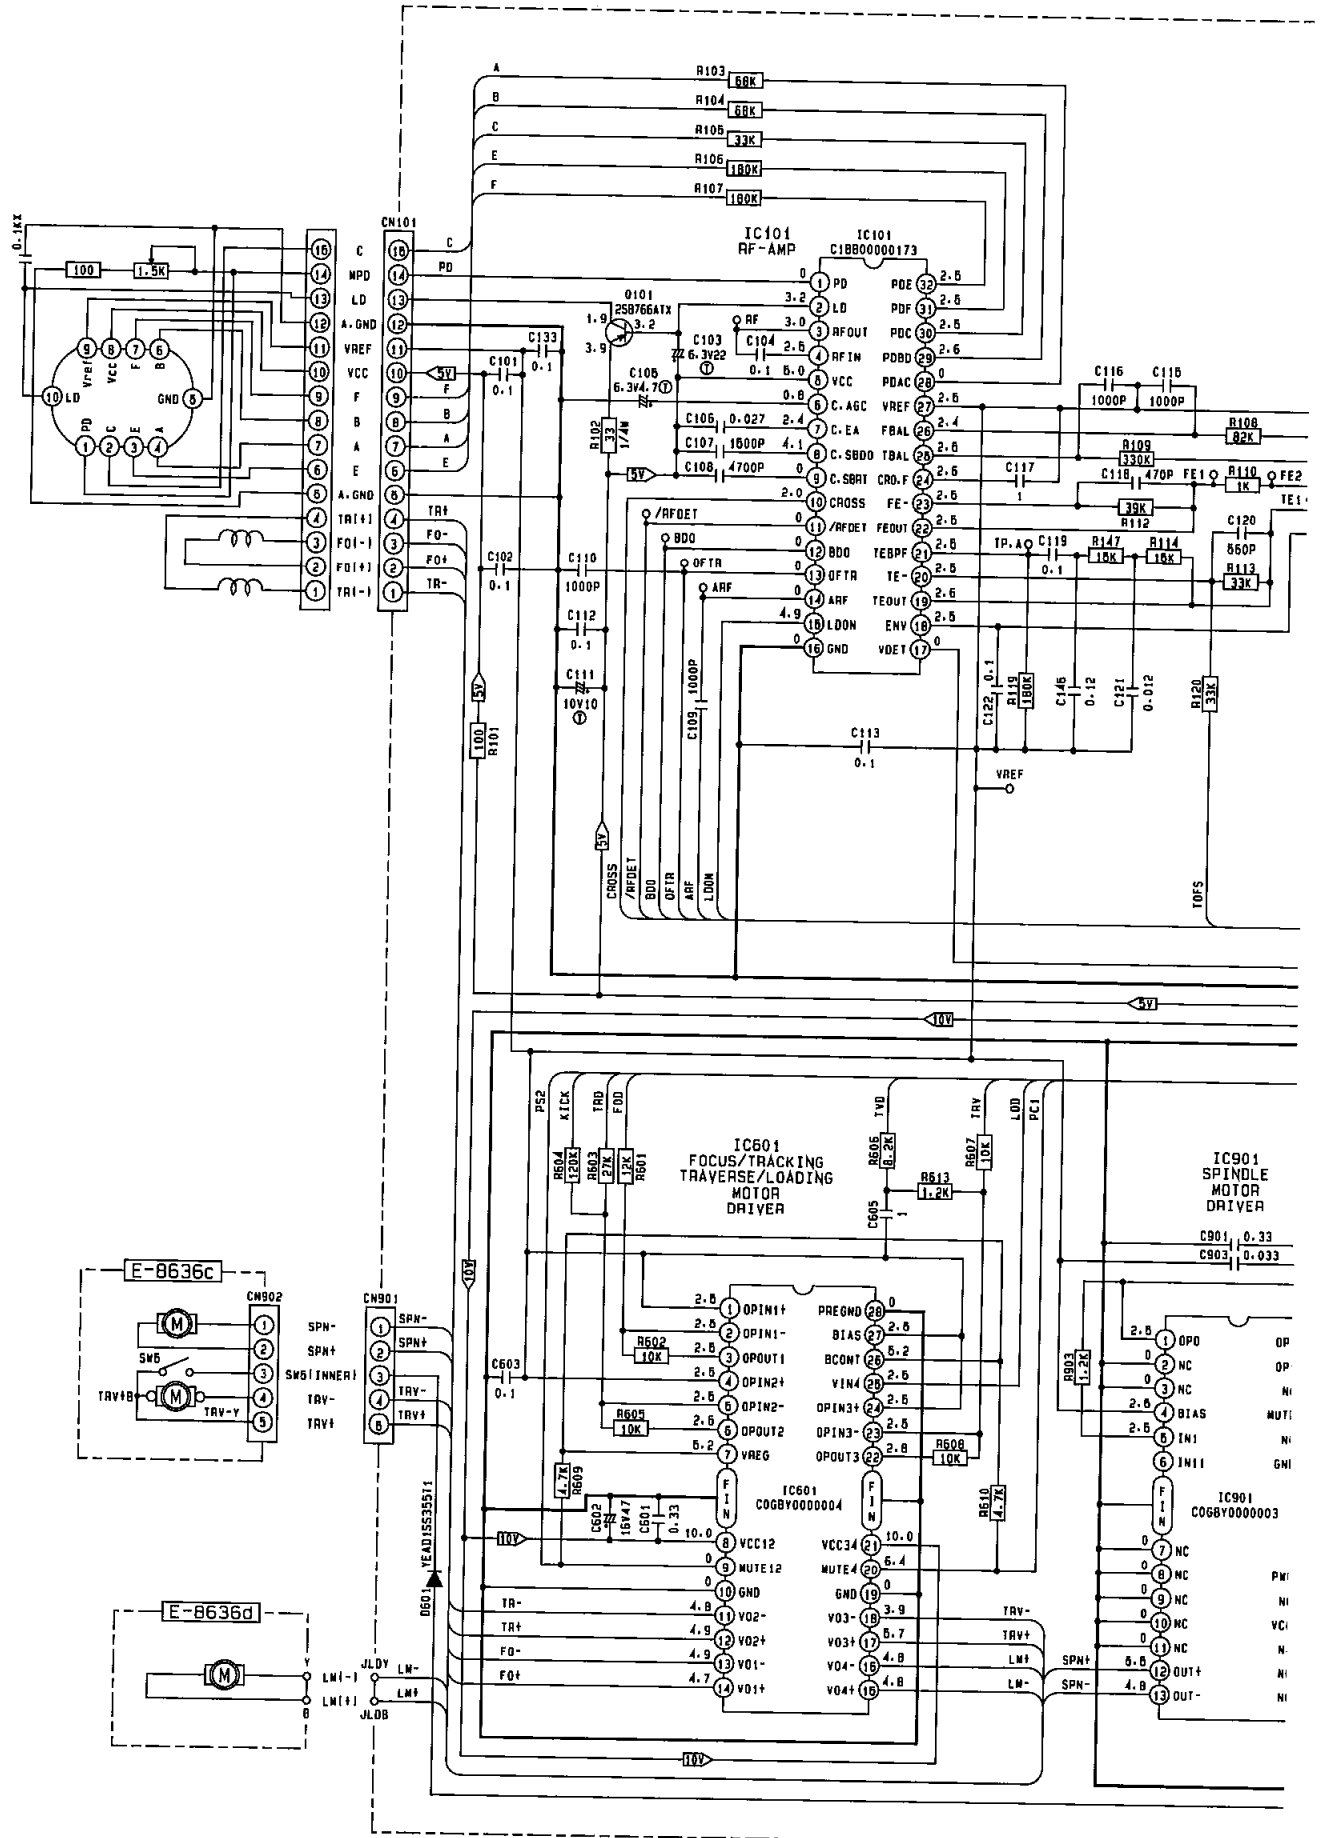



```

:FL931 :
A2CA00000003 <CQ-DFX888LEN>
A2CA00000013 <CQ-DFX777LEN>

```


The following symbols are shown on the schematic diagram.


10V	10V
5V	5V


E-8597A




E-8636a

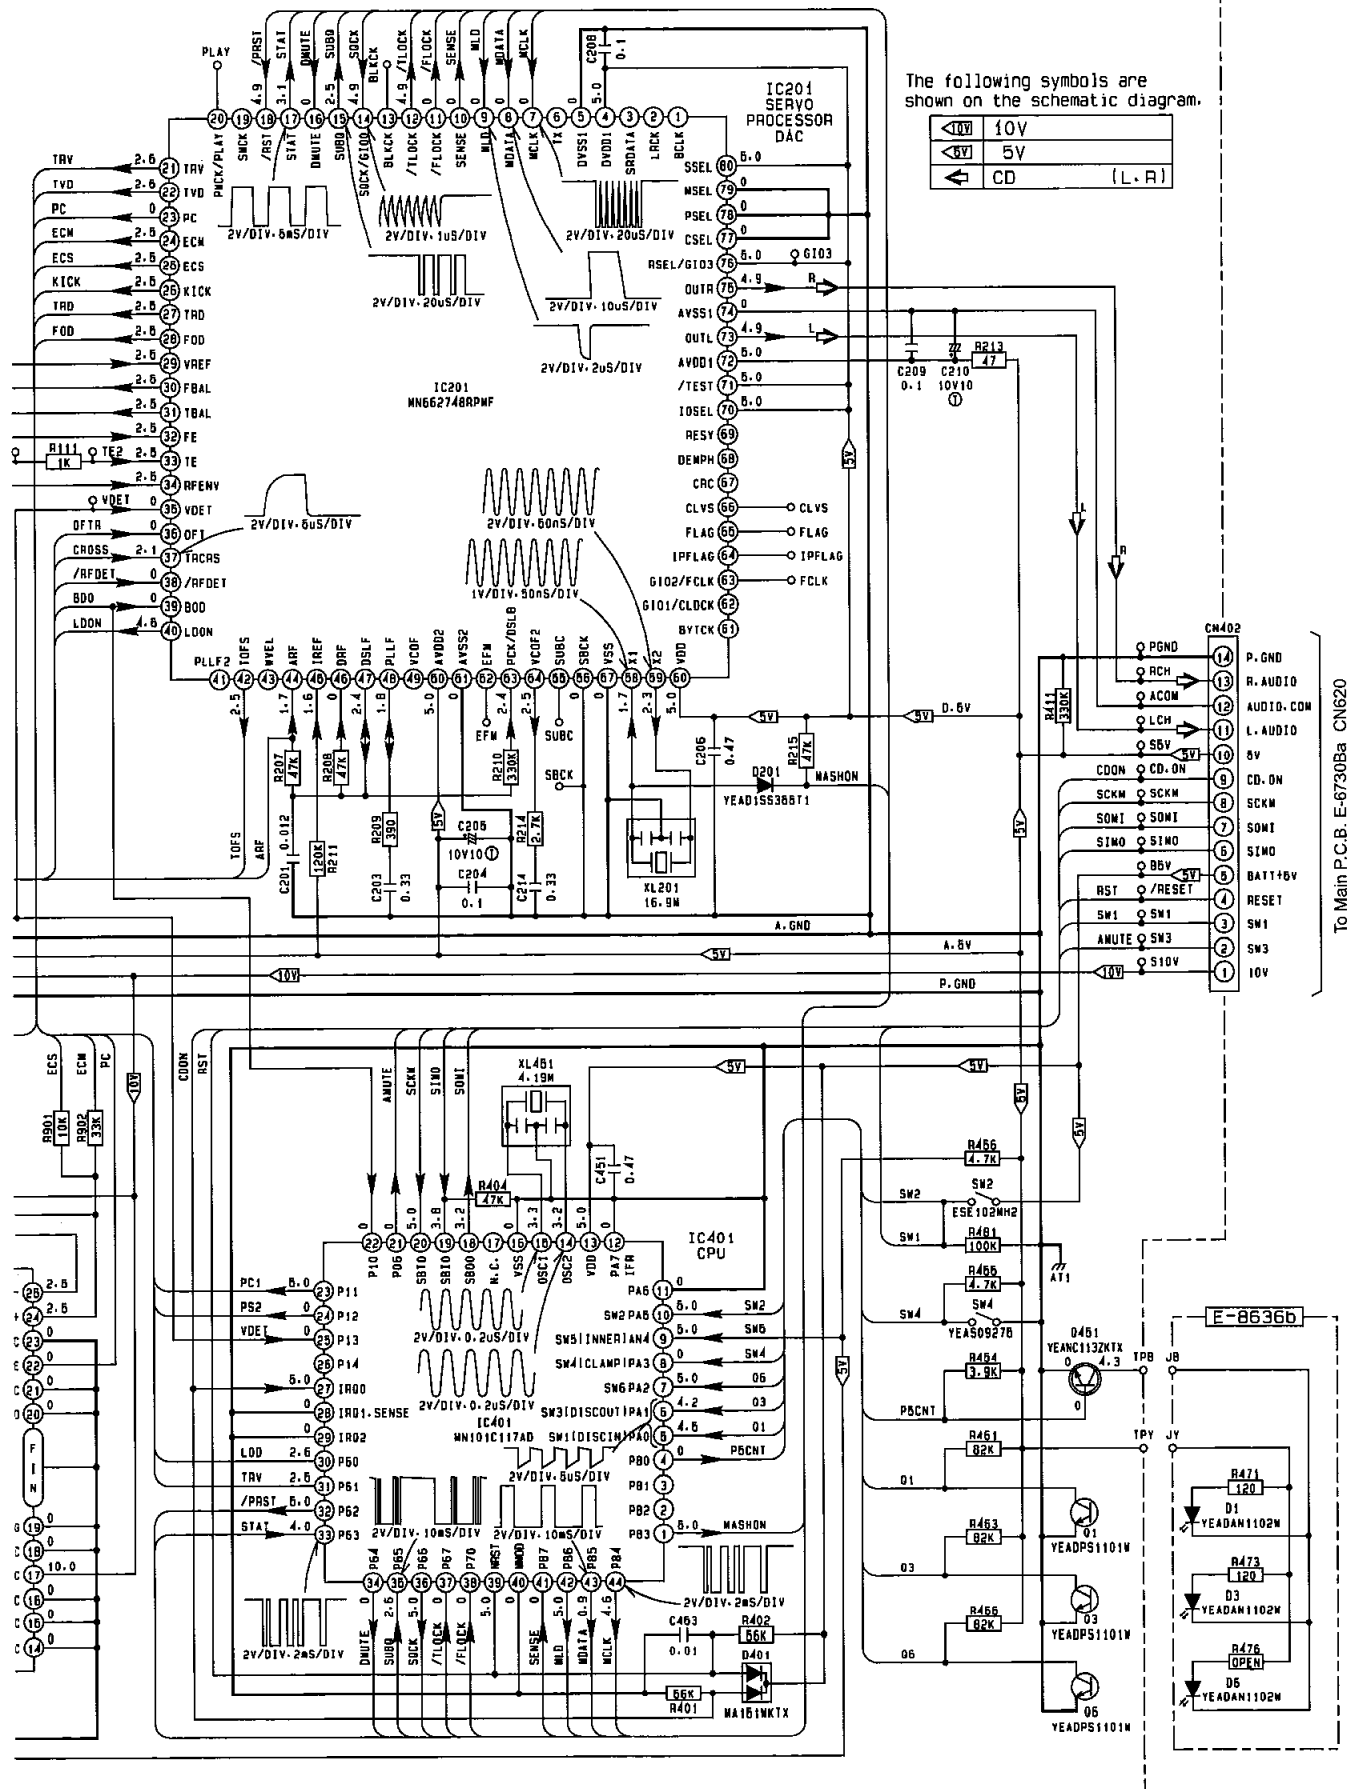


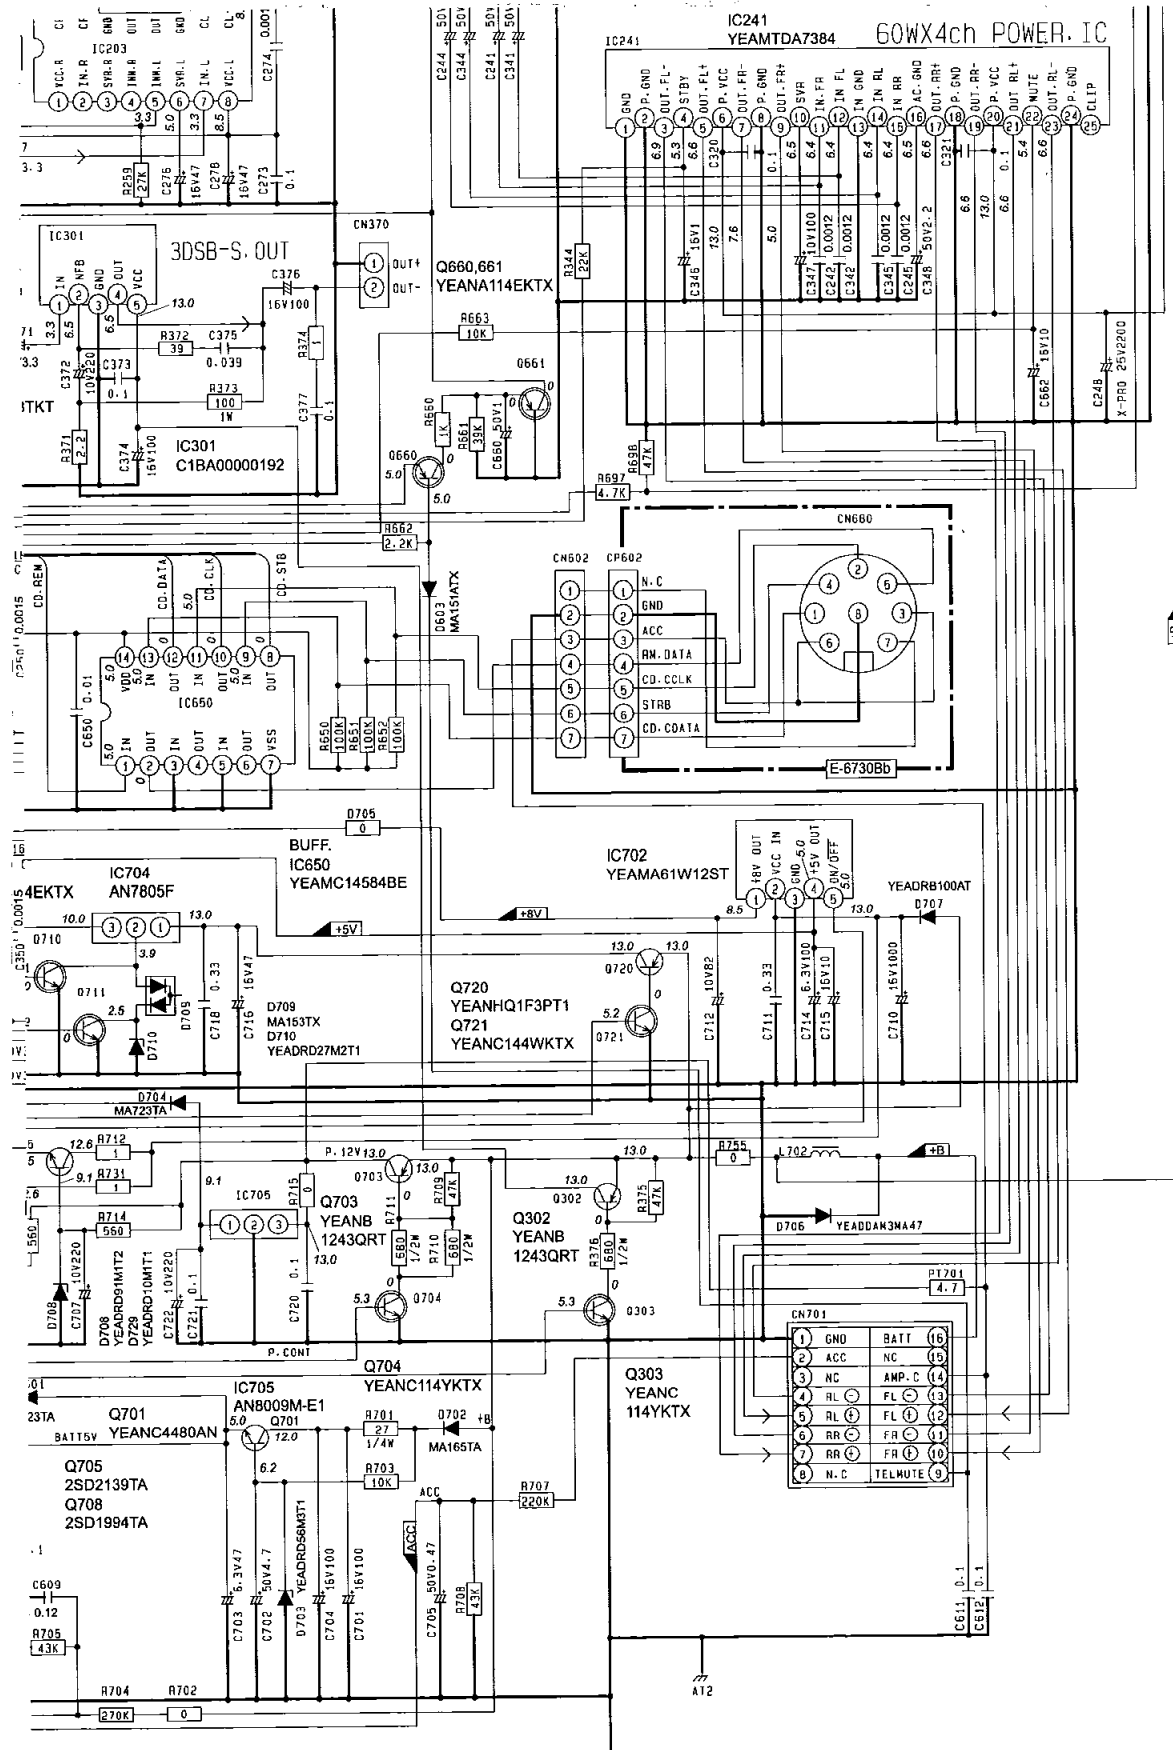



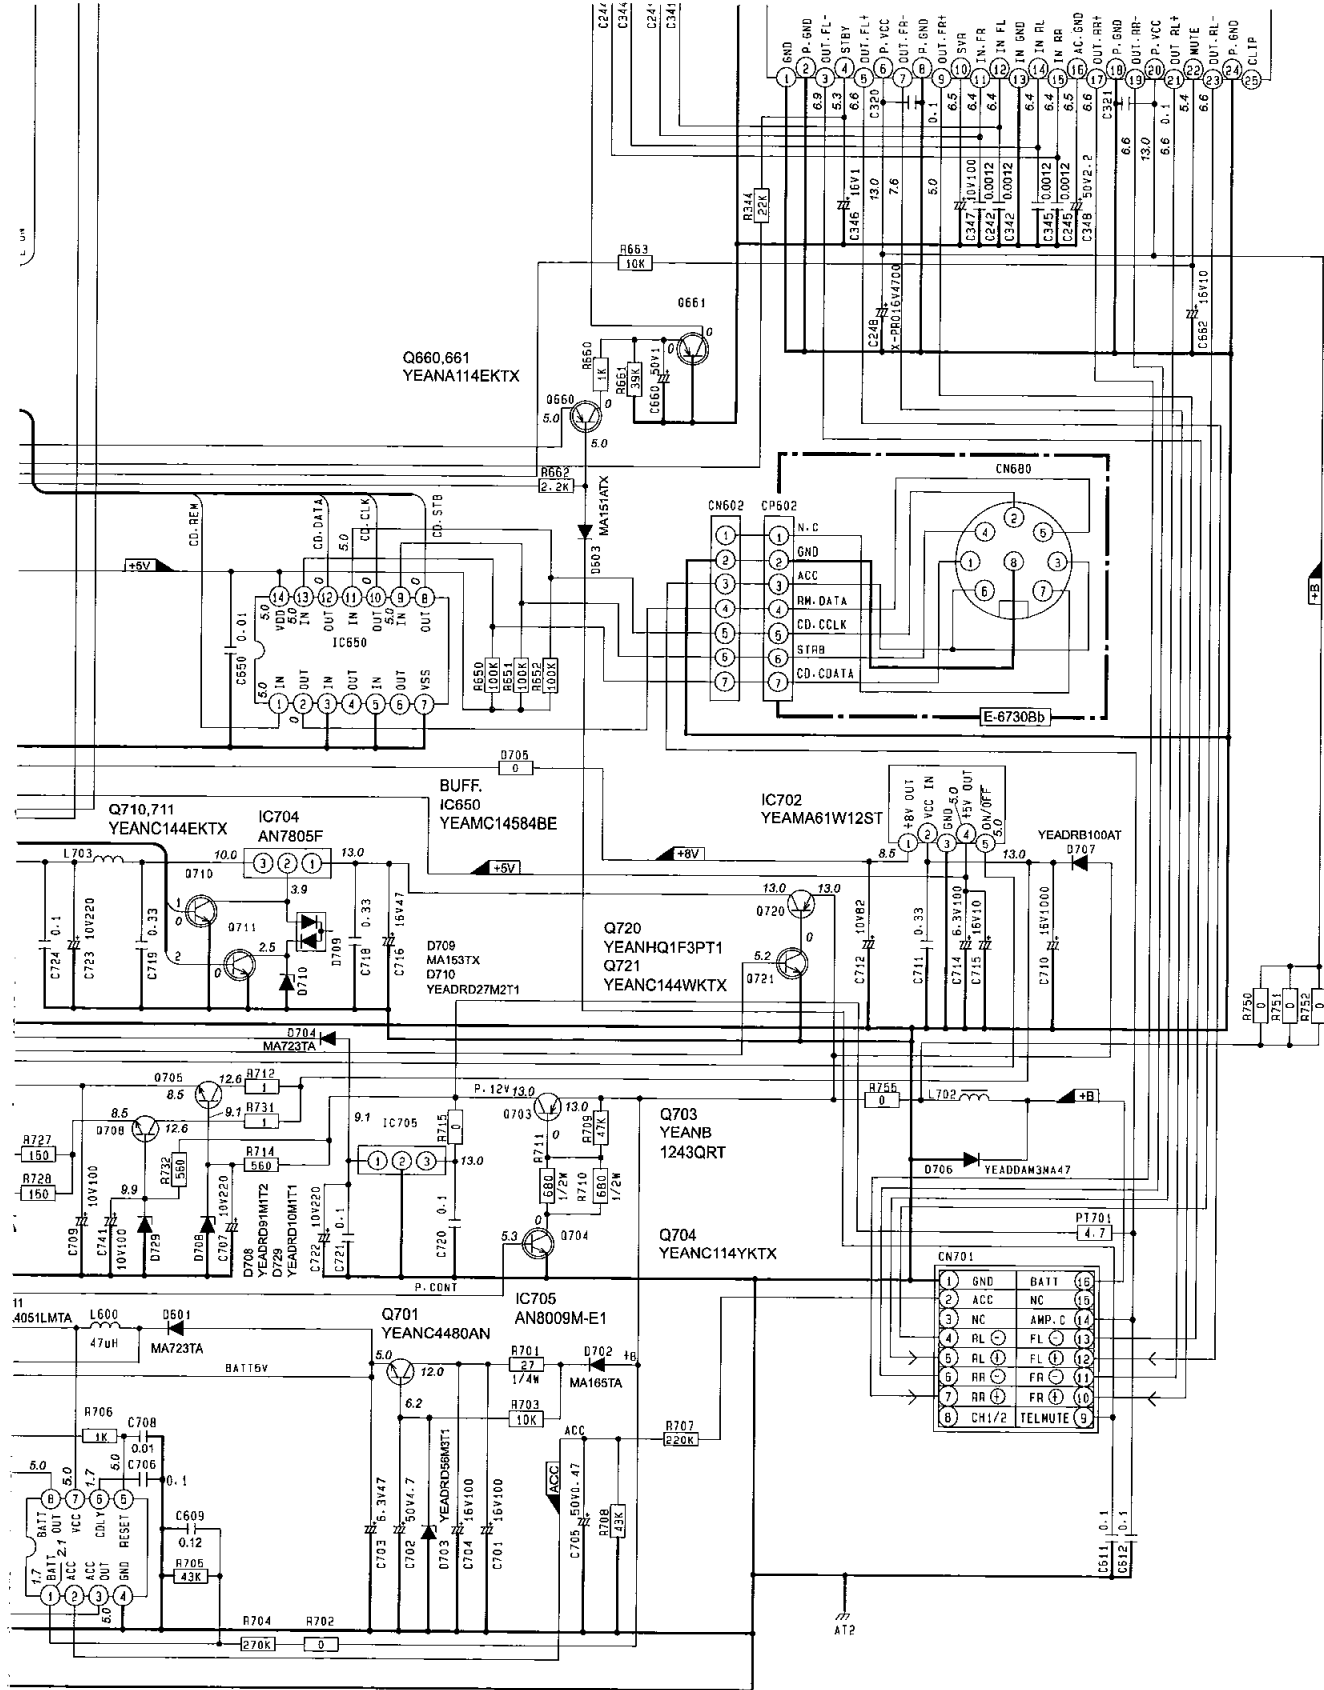


SCHEMATIC DIAGRAM (Main Block) MODEL CQ-DFX888LEN

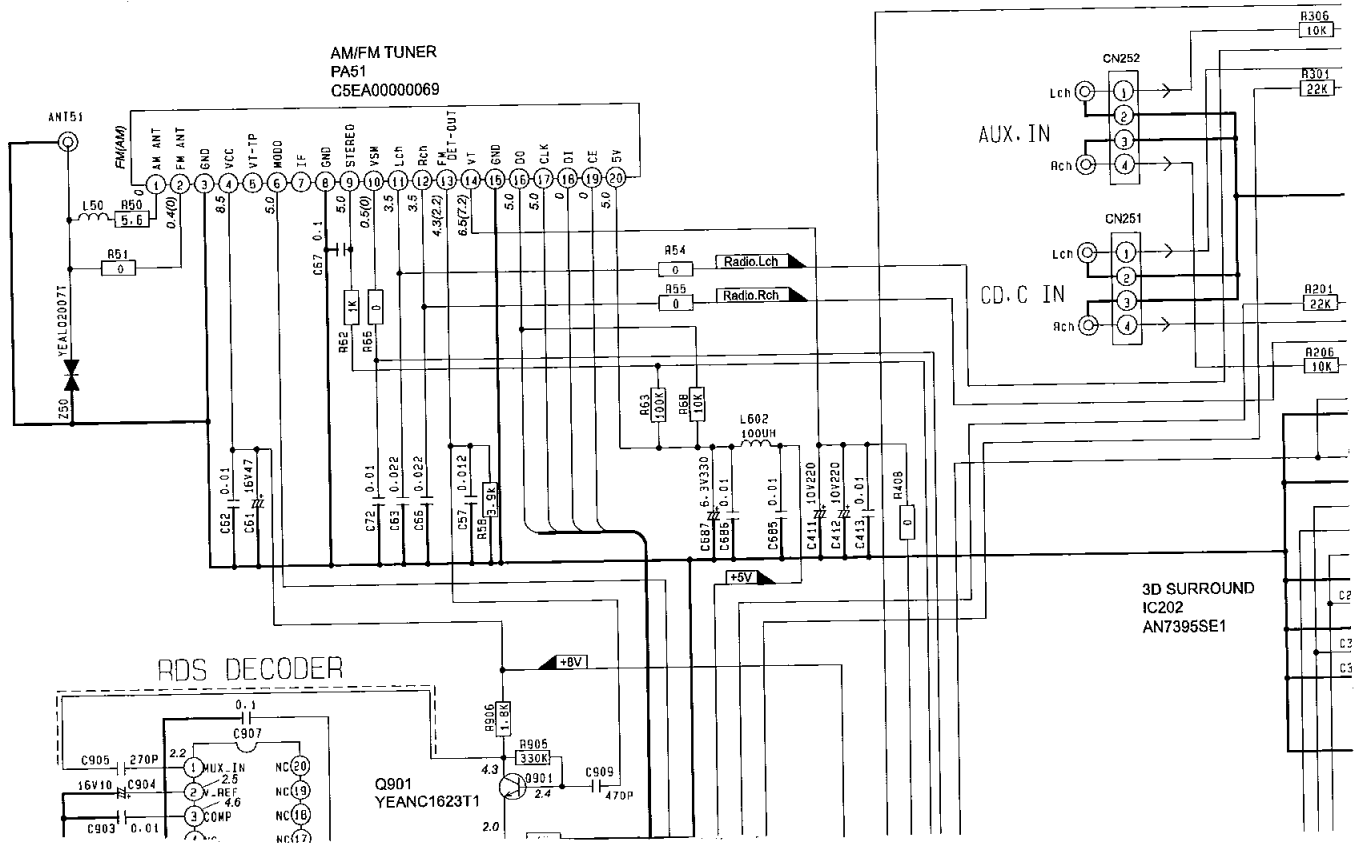

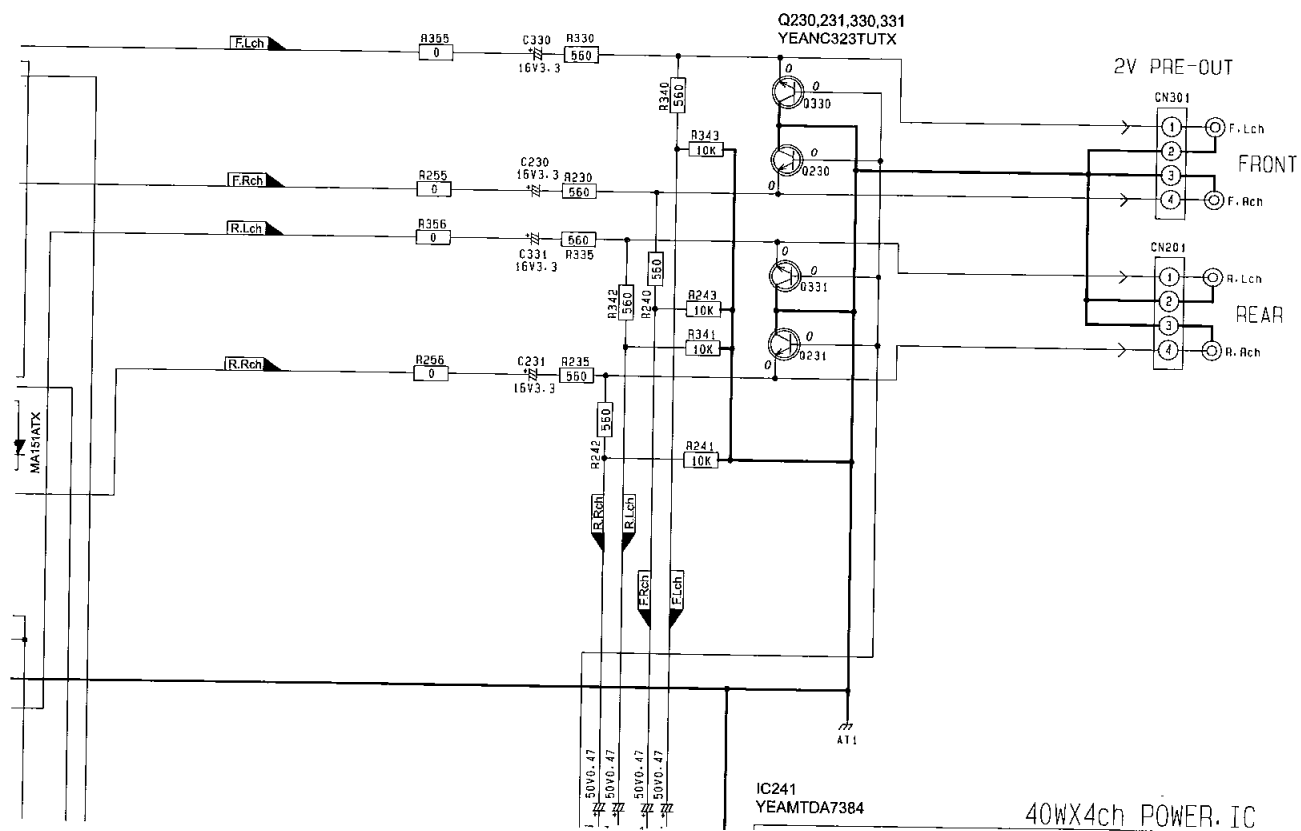

SCHEMATIC/WIRING DIAGRAM (Sub. Block) MODELS CQ-DFX888/777LEN

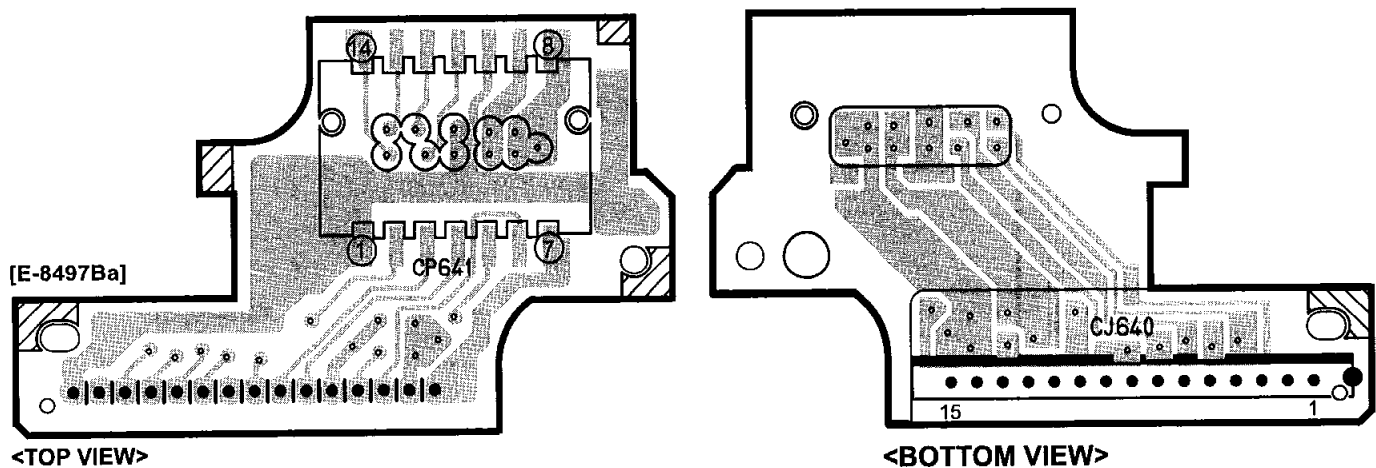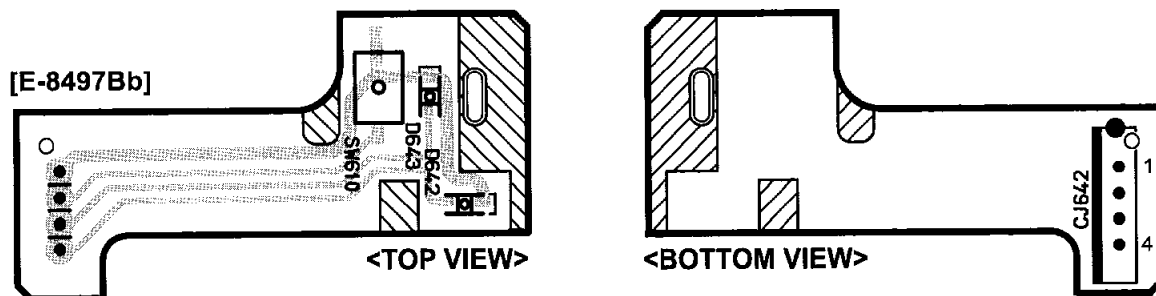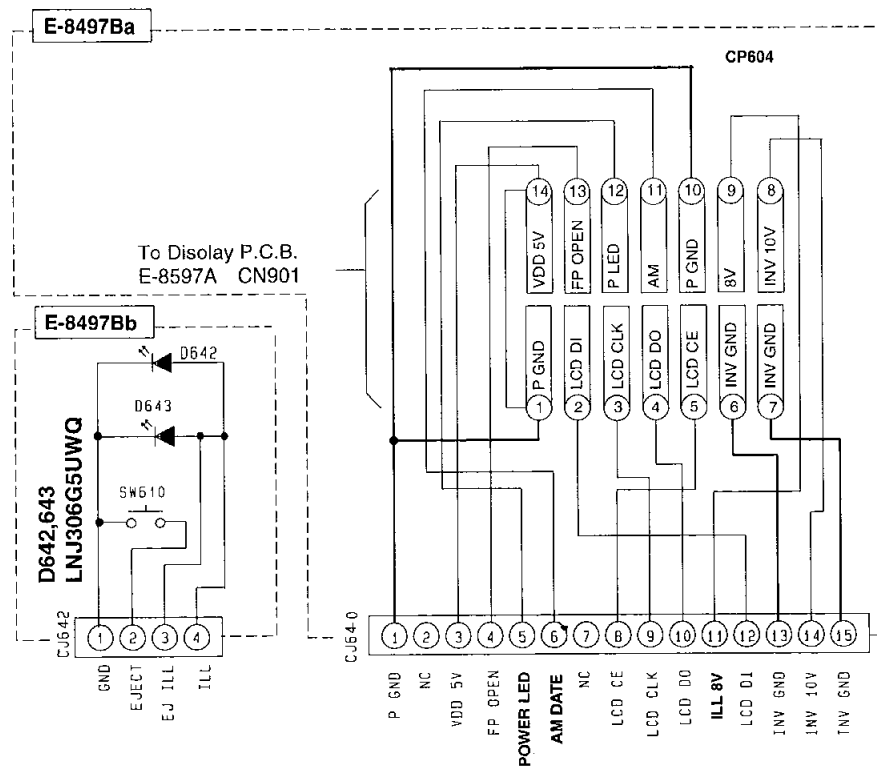

TERMINALS DESCRIPTION

< Main Block >

■ IC600 : C2CBJG000004

Pin No.	Port	Description	I/O	Vol.(V)
1	CDC SENS	Not used	---	---
2	ST	FM Stereo signal	I	5.1
3	/EJECT	EJECT switch	I	5.3
4	AVSS	(Connecting to ground)	---	0
5	SPACE	Specialize effect adjust	O	4.1
6	CH 1/2	Not used	---	---
7	AVREF	Reference voltage (Connecting to VDD)	---	5.3
8	CD-SO	CD data	I	3.1
9	CD-SI	CD data	O	3.7
10	CD-SCK	CD clock	O	5.1
11	CD.C DATA	CD.C data	I	0
12	NC	(No connection)	---	---
13	CD.C CLK	CD.C clock	I	0
14	REM OUT	Remote control data	O	5.3
15	BZ OUT	Buzzer output	O	0
16	PLL DATA/M1	Serial data (from PLL)	I	5.2
17	PLLA DATA/M0	Serial data (to PLL)	O	0
18	PLL CLK	Serial data clock (to PLL)	O	5.3
19	PLL CE	Chip enable (to PLL)	O	0
20	CD.RESET	CD reset	O	5.1
21	N.C.	No connection	---	---
22	N.C.	No connection	---	---
23	N.C.	No connection	---	---
24	N.C.	No connection	---	---
25	N.C.	No connection	---	---
26	CD.ON	CD power on	O	5.1
27	SW2	CD mute	I	0
28	N.C.	No connection	---	---
29	SW3	CD feeder arm SW	I	5.0
30	N.C.	No connection	---	---
31	CONT A	Spectrum analyzer output select A (Note 2)	O	5.3
32	CONT B	Spectrum analyzer output select B (Note 2)	O	5.3
33	VSS	(Connecting to ground)	---	0
34	CONT C	Spectrum analyzer output select C (Note 2)	O	5.3
35	ILL ON/OFF	Button illumination ON/OFF	O	5.3
36	12C CLK	Electronic Volume clock	O	5.2
37	12C DATA	Electronic Volume clock	I/O	5.2
38	/LED	Security LED	O	4.1
39	/EJ. ILL	EJECT Button Illumination control	O	5.6
40	SEL_CNT	Spectrum analyzer IC control (Note 2)	O	0
41	LCD DI (MO)	Serial data (to LCD Driver)	O	0

< Display Block >

■ IC901 : YEAMLC75884W

Pin No.	Port	Description	I/O	Vol.(V)
1~51	S3~53	LCD segment data	O	2.5
52~55	COM1~4	LCD common	O	2.5
56,57	S54,55	LCD segment data	O	2.5
58~61	KS3~6	Key strobe	O	0.9
62~66	KI1~5	Key data	I	0
67	VDD	+5V power supply	---	5.1
68	VLCD	+5V power supply	---	5.1
69	VLCD1	LCD angle	---	3.3

Pin No.	Port	Description	I/O	Vol.(V)
42	LCD DI (MI)	Serial data (from LCD Driver)	I	4.5
43	LCD CLK	LCD Driver clock	O	0
44	LCD CE	LCD Driver Chip Enable	O	0
45	SUBW CLK	Volume (Sub Woofer/Center SD) control clock (Note 2)	O	0
46	SUBW DATA	Volume (Sub Woofer/Center SD) control data (Note 2)	O	0
47	DC/DC ON/OFF	DC/DC Converter control (Note 2)	O	0
48	PWR LED	Power LED control	O	0
49	3DSB	3DSB/V ST control	O	0
50	V.ST	Monaural mode 3DSB	O	0
51	INV CONT2	Inverter Voltage select output 2	O	0
52	INV CONT1	Inverter Voltage select output 1	O	0
53	DECK PW CNT	Deck power control	O	5.0
54	/AF MUTE	Audio mute	O	5.3
55	LPF ON	3DSB rear LPF control	O	5.3
56	ILL CNT	Illumination control	O	5.3
57	PWR CNT (STBY)	Power control	O	5.3
58	ACC	ACC detection	I	5.3
59	RDS.DATA	RDS data	I	2.9
60	/RESET	Reset	I	5.3
61	REM OUT	Remote control data	I	4.2
62	BATT	BATT detection	I	5.3
63	RDS.CLK	RDS clock	I	2.6
64	CD.C STB	CD.C strobe	I	0
65	MUTE	Mute control	O	5.3
66	MODE2	Tape mode SW	I	5.1
67	VSS	(Connecting to ground)	---	0
68	VDD	Connecting to +5V	---	5.3
69	X2	Crystal	O	3.0
70	X1	Crystal	I	2.6
71	VSS	(Connecting to ground)	---	0
72	---	Crystal	---	2.8
73	---	Crystal	---	2.4
74	AVDD	A/D converter +5V	---	5.3
75	AVREF	A/D converter reference voltage	---	5.3
76	SD	FM/AM SD	I	0
77	INT_A	Initialize A (Note 3)	I	(#1)
78	INT_B	Initialize B	I	0
79	A_IN	Spectrum analyzer /Level meter signal detection	I	0
80	PANEL	Panel IN/OUT detection	I	5.4

Note 1 : Voltage measurements are with respect to ground,
with a voltmeter (Internal resistance : 10M ohms).

Note 2 : Only for CQ-DFX888LEN.

Note 3 : (#1)

0V : <CQ-DFX888LEN>

5.3V : <CQ-DFX777LEN>

Pin No.	Port	Description	I/O	Vol.(V)
70	VLCD2	LCD angle	---	1.7
71	VSS	Ground	---	0
72	TEST	(Connecting to ground)	---	0
73	OSC	Oscillator terminal	---	3.9
74	/RESET	(Connecting to VCC)	---	5.1
75	DO	Key data output	O	4.1
76	CE	LCD driver chip enable	I	0

TERMINALS DESCRIPTION (CD Servo Block)

■ IC201 MN662748RPMF

Pin No.	Port	Description	I/O	Vol. (V)
1	BCLK(NG)	—	—	—
2	LRCK(NG)	—	—	—
3	SRDATA(NG)	—	—	—
4	DVDD1	+5V Power Supply for Digital	I	5.0
5	DVSS1	Ground for Digital	I	0
6	TX(NG)	—	—	—
7	MCLK	Command Clock	I	0
8	MDATA	Command Data	I	0
9	MLD	Command Load	I	0
10	SENSE	SENSE Signal	O	0
11	/FLOCK	Focus Servo	O	0
12	/TLOCK	Tracking Servo	O	4.9
13	BLKCK(NG)	—	—	—
14	SQCK/GIOO	EX-clock for Subcode Q	I	4.9
15	SUBQ	Subcode Q-cord	O	2.5
16	DMUTE	DSP Muting	I	0
17	STAT	Status Signal	O	3.1
18	/RST	Reset Input	I	4.9
19	SMCK(NG)	—	—	—
20	PMCK/PLAY(NG)	—	—	—
21	TRV	Traverse Motor Control	O	2.5
22	TVD	Traverse Motor Drive	O	2.5
23	PC	Spindle Motor Control	O	0
24	ECM	Spindle Motor Drive	O	2.5
25	ECS	Spindle Motor Drive	O	2.5
26	KICK	Kick Pulse	O	2.5
27	TRD	Tracking Drive	O	2.5
28	FOD	Focus Drive	O	2.5
29	VREF	Reference Voltage	I	2.5
30	FBAL	Focus Balance	O	2.5
31	TBAL	Tracking Balance	O	2.5
32	FE	Focus Error	I	2.5
33	TE	Tracking Error	I	2.5
34	RFENV	RF Envelope	I	2.5
35	VDET	Vibration Detecting	I	0
36	OFT	OFF Track Signal	I	0
37	TRCRS	Track Cross	I	2.1
38	/RFDET	RF Detecting Signal	I	0
39	BDO	Drop-Out Signal	I	0
40	LDON	Laser ON Signal	O	4.5
41	PLL2(NG)	—	—	—
42	TOFS	TE Offset	O	2.5
43	WVEL(NG)	—	—	—
44	ARF	RF Signal	I	1.7
45	IREF	Reference Current Input	I	1.6
46	DRF	DSL Bias	I	0
47	DSL	Loop Filter for DSL	I/O	2.4
48	PLLF	Loop filter for PLL	I/O	1.8
49	VCOF(NG)	—	—	—
50	AVDD2	Power Supply for Analog	—	5.0
51	AVSS2	Ground for Analog	—	0
52	EFM(NG)	—	—	—
53	PCK/DSLB	DSL Bias	I	2.4
54	VCOF2	Tracking Offset	O	2.5
55	SUBC(NG)	—	—	—
56	SBCK	Connect to Ground	—	—
57	VSS	Ground	—	0
58	X1	Crystal oscillator	I	1.7
59	X2	Crystal oscillator	O	2.3
60	VDD	+5V Power Supply	—	5.0
61	BYTCK(NG)	—	—	—
62	G101/CLDCK(NG)	—	—	—
63	G102/FCLK(NG)	—	—	—
64	IP FLAG(NG)	—	—	—
65	FLAG(NG)	—	—	—
66	CLVS(NG)	—	—	—
67	CRC(NG)	—	—	—
68	DEMPH(NG)	—	—	—
69	RESY(NG)	—	—	—
70	IOSEL	Connect to Ground	I	0
71	/TEST	Connect to Ground	I	0
72	AVDD1	+5V Power Supply for Analog	—	4.9
73	OUTL	Audio Output (Lch)	O	4.9
74	AVSS1	Ground for Analog	—	0
75	OUTR	Audio Output (Rch)	O	4.9
76	RSEL/G103	Connect to Ground	I	0
77	CSEL	Connect to Ground	I	0
78	PSEL	Connect to Ground	I	0
79	MSEL	Connect to Ground	I	0
80	SSEL	Mode select for output	I	5.0


■ IC401 MN101C117AD

Pin No.	Port	Description	I/O	Vol. (V)
1	MASHON	Servo IC OSC Control	O	5.0
2	P82(NG)	—	—	—
3	P81(NG)	—	—	—
4	P5CNT	LED Power Control (Hi-Z:ON L:OFF)	O	0
5	Q1	Photo Sensor Signal (DISC IN)	I	4.5
6	Q3	Photo Sensor Signal (DISC OUT)	I	4.2
7	Q6	Photo Sensor Signal (Option)	I	5.0
8	SW4	Clamp SW Signal (L:Set)	I	0
9	SW5	Inner SW Signal (L:Inner SW ON)	I	5.0
10	SW2	Feeder Arm SW (H:NO DISC L:DISC IN)	I	5.0
11	PA6	Connect to Ground	—	0
12	PA7/IFR	Test Mode Select (H:RFI measurement) Connect to Ground	I	0
13	VDD	+5V Power Supply	—	5.0
14	OSC2	4.19MHz Crystal oscillator	—	5.0
15	OSC1	4.19MHz Crystal oscillator	—	3.3
16	VSS	Ground	—	0
17	(NG)	—	—	—
18	SOMI	Data Output	O	3.2
19	SIMO	Data Input	I	3.8
20	SCKM	Serial Clock	I	5.0
21	AMUTE	Audio Signal Mute (H:Mute ON)	O	0
22	BD0	Drop Out Signal Input	I	0
23	PC1	Loading Motor Drive Control(H:Mute)	O	5.0
24	PS2	Fo and TR Actuator DriveControl (H:Mute)	O	0
25	VDET	Vibration Detecting Signal Input	I	0
26	P14 (NG)	—	—	—
27	CDON	CD ON signal	I	5.0
28	IRQ1.SENSE	Connect to Ground	—	0
29	IRQ2	Connect to Ground	—	0
30	LOD	Loading Motor Control (H:OUT L:IN Hi-Z:Stop)	—	2.6
31	TRV	Traverse Motor Control (H:to Inside L:to Outside Hi-Z:Stop)	—	2.5
32	/PRST	Servo IC Reset Signal (L:Reset)	O	5.0
33	STAT	Status Signal	I	4.0
34	DMUTE	DSP Control (H:Mute)	O	0
35	SUBQ	SubCode Q Data Input	I	2.6
36	SQCK	SubCode Q Data Clock	O	5.0
37	/TLOCK	Tracking Servo (L:Lock)	I	0
38	/FLOCK	Focus Servo (L:Lock)	I	0
39	NRST	Reset Input	I	5.0
40	MMOD	Connect to Ground	—	0
41	SENSE	SENSE Signal	I	0
42	MLD	Command Load	O	5.0
43	MDATA	Command Data	O	0.9
44	MCLK	Command Clock	O	4.6

PACKAGE AND IC BLOCK DIAGRAM


<Main Block>

● PA51 C5EA00000069

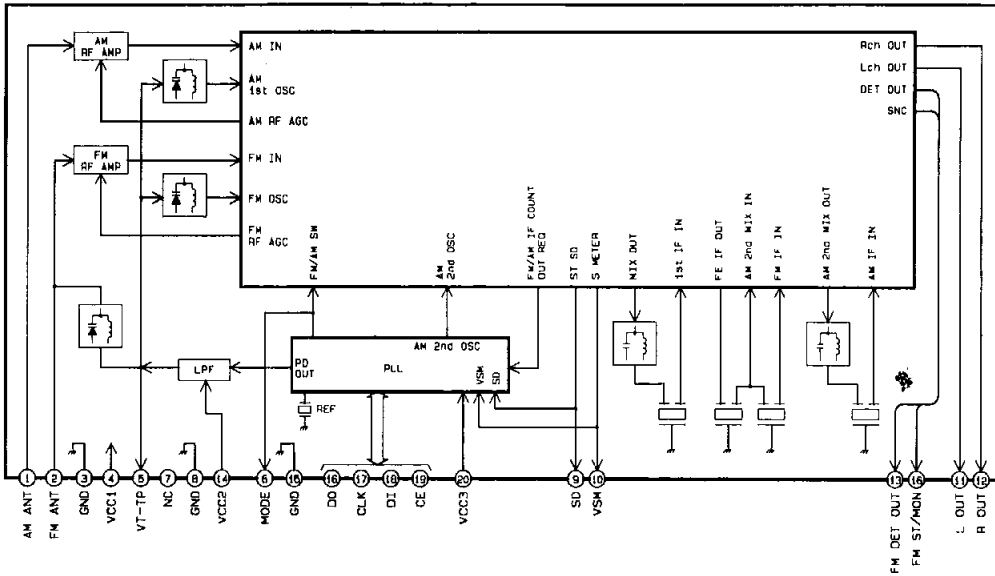


● IC650

YEAMC14584BE

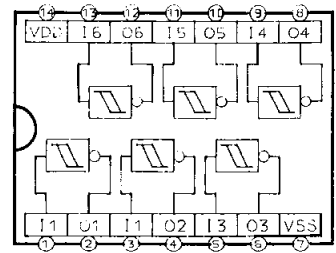


● IC220,261

YEAMM5218AFE

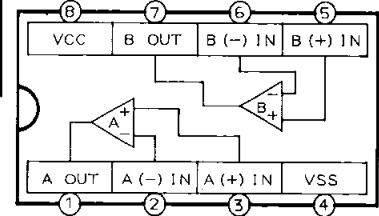


● IC601 AN8065SE1

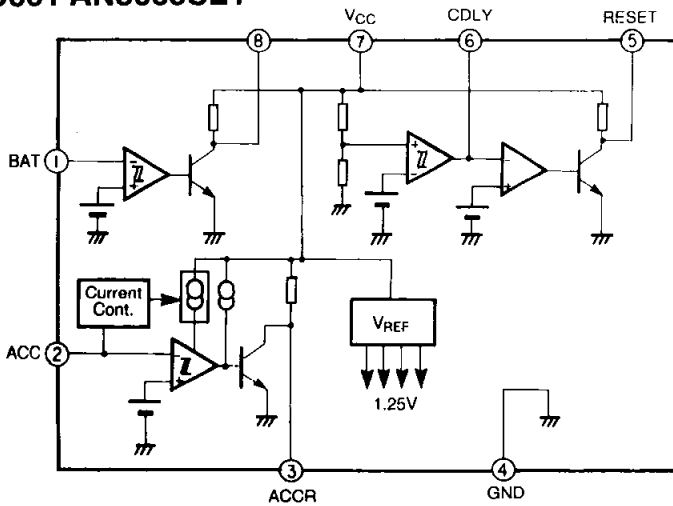


● IC204


YEAMPD4053E2

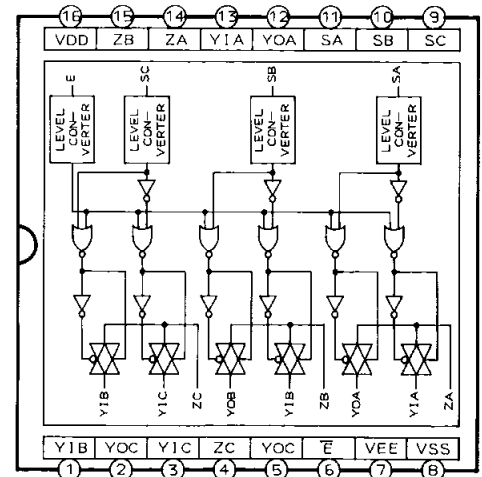


● IC201 YEAMEA6320TT

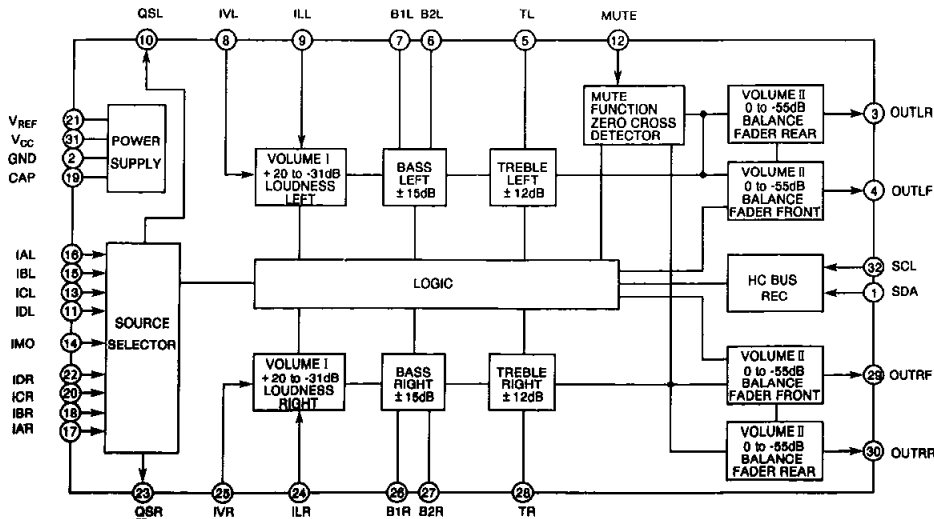


● IC203,205,206
YEAMDA8574TT

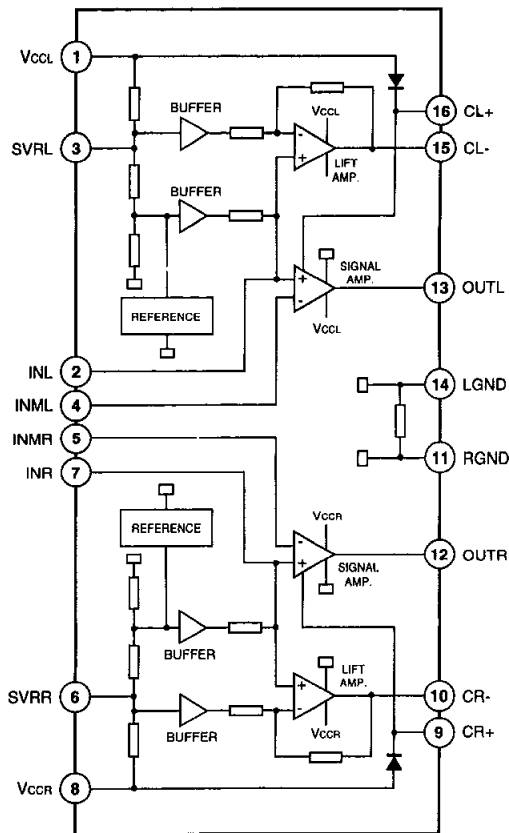



● IC241 YEAMTDA7384

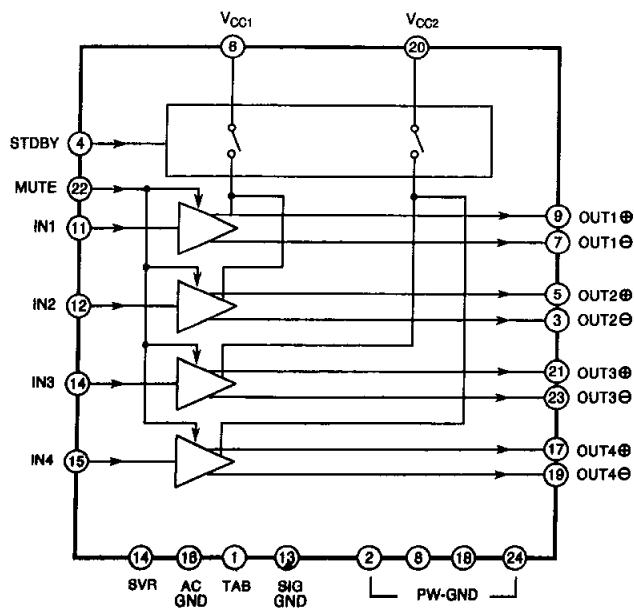

● IC801 YEAMBA3835FE

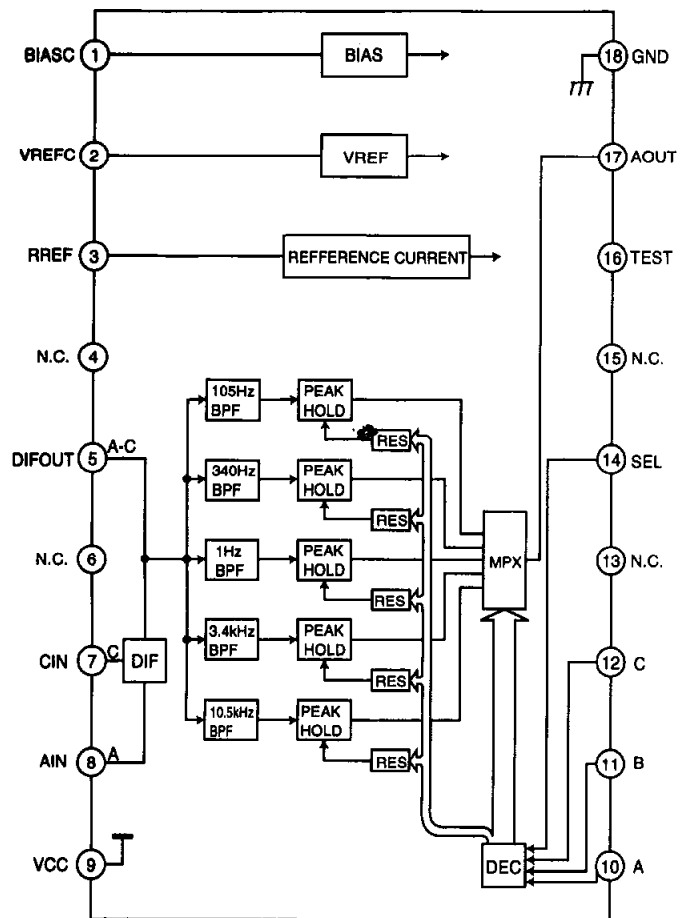


● IC900 YEAMDA7331D

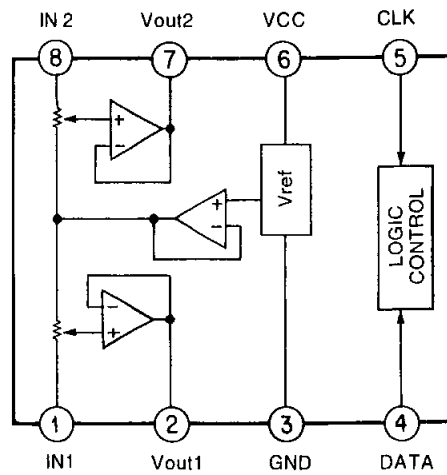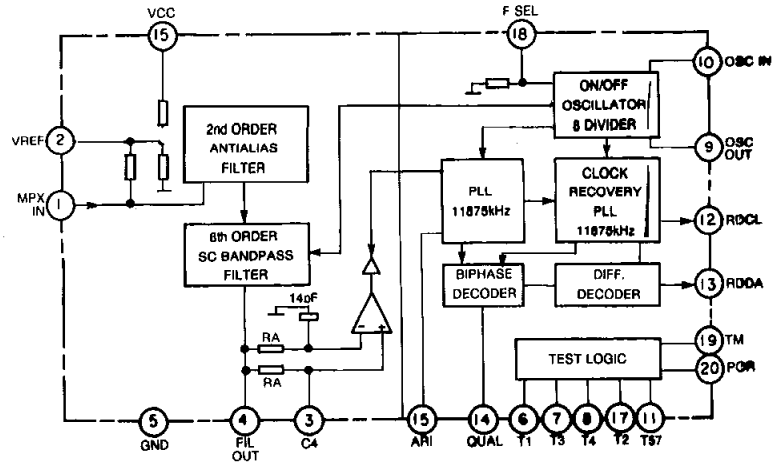


<Display Block>


● IC905 YEAMSBX8035F

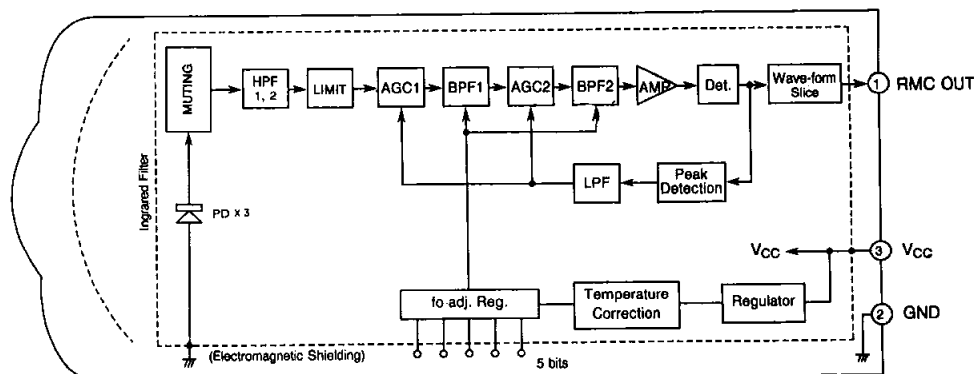


<CD Servo Block> ● IC101 C1BB00000173

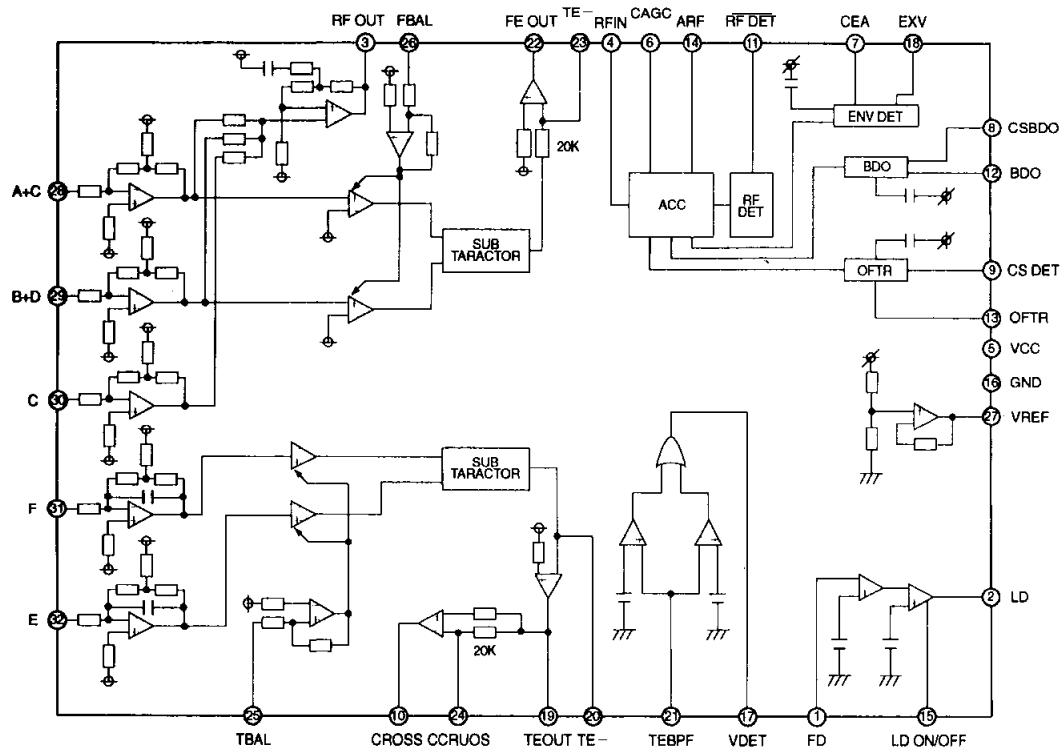

● IC601 C0GBY0000004

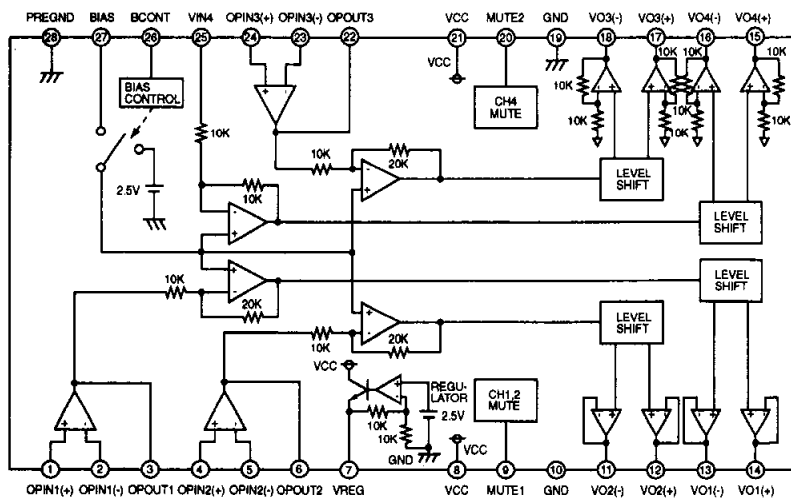

● IC901 C0GBY00000003

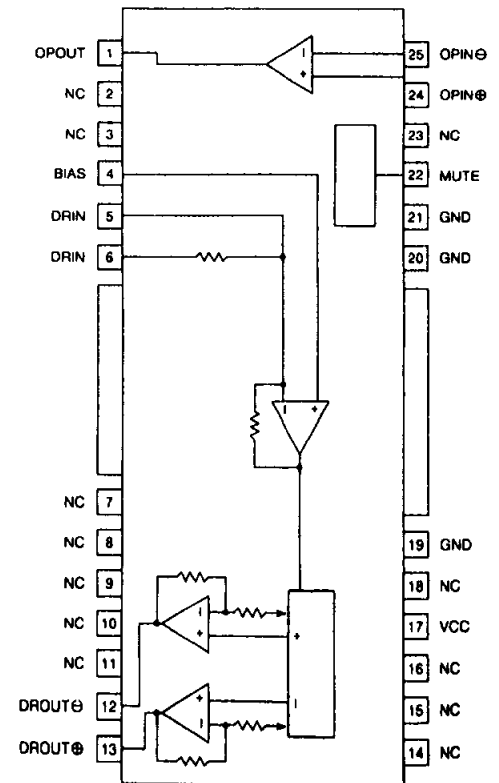

1 REPLACEMENT PARTS LIST <CQ-DFX888LEN>

Notes :

1. Be sure to make your orders of replacement parts according to this list.
2. Important safety notice: Components, identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
3. Location keys in the remarks column indicates the general location of the parts shown in the exploded drawing, as in a road map.
4. The marking (RTL) indicates that Retention Time is limited for this item. After the discontinuation of assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

1.1. IC's and Transistors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
IC201	YEAMEA6320TT	IC	
IC202	AN7395SE1	IC	
IC203	YEAMDA8574TT	IC	
IC204	YEAMPD4053E2	IC	
IC205	YEAMDA8574TT	IC	
IC206	YEAMDA8574TT	IC	
IC220	YEAMM5218AFE	IC	
IC241	YEAMTDA7384	IC	
IC261	YEAMM5218AFE	IC	
IC262	YEAMM62429FP	IC	
IC301	C1BA00000192	IC	
IC600	C2CBJG000004	IC	
IC601	AN8065SE1	IC	
IC650	YEAMC14584BE	IC	
IC702	YEAMA61W12ST	IC	
IC704	AN7805F	IC	
IC705	AN8009M-E1	IC	
IC801	YEAMBA3835FE	IC	
IC900	YEAMDA7331D	IC	
PA51	C5EAC0000069	IC	
Q213	YEANC1623T1	Transistor	
Q230	YEANC323TUTX	Transistor	
Q231	YEANC323TUTX	Transistor	
Q270	YEANC323TKT	Transistor	
Q301	YEANC323TKT	Transistor	
Q302	YEANB1243QRT	Transistor	
Q303	YEANC114YKTX	Transistor	
Q330	YEANC323TUTX	Transistor	
Q331	YEANC323TUTX	Transistor	
Q660	YEANA114EKT	Transistor	
Q661	YEANA114EKT	Transistor	
Q663	YEANA114EKT	Transistor	
Q701	YEANC4480AN	Transistor	
Q703	YEANB1243QRT	Transistor	
Q704	YEANC114YKTX	Transistor	
Q705	2SD2139TA	Transistor	
Q706	YEANA114EKT	Transistor	
Q707	YEANA114EKT	Transistor	
Q708	2SD1994ATA	Transistor	
Q710	YEANC144EUTX	Transistor	
Q711	YEANC144EUTX	Transistor	
Q720	YEANHQ1F3PT1	Transistor	
Q721	YEANC144WKTX	Transistor	

Ref. No.	Part No.	Part Name & Description	Remarks
Q901	YEANC1623T1	Transistor	
Q902	YEANA114EKT	Transistor	
Q903	YEANC144EKT	Transistor	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
IC901	YEAMLC75884W	IC	
IC905	YEAMSBX8035F	IC	
Q902	YEANSSTA06T	Transistor	
Q903	YEANSSTA06T	Transistor	

DC-DC CONV. BLOCK [E8515]

Ref. No.	Part No.	Part Name & Description	Remarks
IC1	C1BA00000150	IC	
IC2	YEAMM51945AF	IC	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
IC101	C1BB00000173	IC	
IC201	MN662748RPMF	IC	
IC401	MN101C117AD	IC	
IC601	COGBY00000004	IC	
IC901	COGBY00000003	IC	
Q1	YEADPS1101W	Transistor	
Q3	YEADPS1101W	Transistor	
Q101	2SB766ATX	Transistor	
Q451	YEANC113ZKTX	Transistor	

1.2. Diodes

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
D201	MA151ATX	Diode	
D601	MA723TA	Diode	
D602	LN25RF	LED	
D603	MA151ATX	Diode	
D702	MA165TA	Diode	
D703	YEARDR56M3T1	Diode	
D704	MA723TA	Diode	
D706	YEADDAM3MA47	Diode	
D707	YEADRB100AT	Diode	
D708	YEARDR91M1T2	Diode	
D709	MA153TX	Diode	
D710	YEARDR27M2T1	Diode	
D711	MA4051LMTA	Diode	
D729	YEARDR10M1T1	Diode	
D901	YEARDR51MBT1	Diode	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
D900	LN1271RAL	LED	
D926	MA8056LMHTX	Diode	
D927	MA8056LMHTX	Diode	
D928	MA8056LMHTX	Diode	
D929	MA8056LMHTX	Diode	
D930	MA8047MTX	Diode	

DC-DC CONV. BLOCK [E8515]

Ref. No.	Part No.	Part Name & Description	Remarks
D1	MA151K	Diode	

SUB BLOCK [E8496A]

Ref. No.	Part No.	Part Name & Description	Remarks
D642	LNJ306G5TUWQ	LED	
D643	LNJ306G5TUWQ	LED	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
D1	YEADAN1102W	Diode	

Ref. No.	Part No.	Part Name & Description	Remarks
D3	YEADAN1102W	Diode	
D201	YEAD1SS355T1	Diode	
D401	MA151WKTX	Diode	
D601	YEAD1SS355T1	Diode	

1.3. Capacitors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
C57	YECUS1H123KX	Ceramic, 0.012µF 50WV	
C61	ECA1CSA470I	Electrolytic, 47µF 16WV	
C62	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C63	YECUS1E223KX	Ceramic, 0.022µF 25WV	
C66	YECUS1E223KX	Ceramic, 0.022µF 25WV	
C67	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C72	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C201	YECUS1H101JM	Ceramic, 100PF 50WV	
C203	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C204	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C205	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C206	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C207	YECUS1C224KX	Ceramic, 0.22µF 16WV	
C208	YECUS1E333KX	Ceramic, 0.033µF 25WV	
C209	YECUS1H562KX	Ceramic, 0.0056µF 50WV	
C210	ECA1CSA470I	Electrolytic, 47µF 16WV	
C211	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C212	ECA0JSA220I	Electrolytic, 22µF 6.3WV	
C213	ECA1HSA010I	Electrolytic, 1µF 50WV	
C214	YECUS1C563KX	Ceramic, 0.056µF 16WV	
C215	YECUS1E273KX	Ceramic, 0.027µF 25WV	
C216	ECA0JSA470I	Electrolytic, 47µF 6.3WV	
C217	ECA1CSA100I	Electrolytic, 10µF 16WV	
C218	YECUS1E273KX	Ceramic, 0.027µF 25WV	
C219	YECUS1H392KX	Ceramic, 0.0039µF 50WV	
C220	ECA1HSA4R7I	Electrolytic, 4.7µF 50WV	
C224	YECUS1C224KX	Ceramic, 0.22µF 16WV	
C227	YECUS1C683KX	Ceramic, 0.068µF 16WV	
C228	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C229	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C230	ECSH1CX335CR	Tantalum, 3.3µF 16WV	
C231	ECSH1CX335CR	Tantalum, 3.3µF 16WV	
C232	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C241	ECA1HSA47I	Electrolytic, 0.47µF 50WV	
C242	YECUS1H122KX	Ceramic, 0.0012µF 50WV	
C244	ECA1HSA47I	Electrolytic, 0.47µF 50WV	
C245	YECUS1H122KX	Ceramic, 0.0012µF 50WV	
C248	ECA1EDT222L	Electrolytic, 2200µF 25WV	
C250	YECUS1H152KX	Ceramic, 0.0015µF 50WV	
C251	YECUS1H152KX	Ceramic, 0.0015µF 50WV	
C252	ECEA1CKS101	Electrolytic, 100µF 16WV	
C253	ECA1CSA470I	Electrolytic, 47µF 16WV	
C254	ECEA1AKS221	Electrolytic, 220µF 10WV	
C255	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C256	ECEA1CKS101	Electrolytic, 100µF 16WV	
C260	ECA1CSA100I	Electrolytic, 10µF 16WV	
C261	ECA0JSA470I	Electrolytic, 47µF 6.3WV	
C262	YECUS1C224KX	Ceramic, 0.22µF 16WV	
C263	YECUS1E223KX	Ceramic, 0.022µF 25WV	
C264	ECEA1HKS2R2I	Electrolytic, 2.2µF 50WV	
C266	ECA0JSA470I	Electrolytic, 47µF 6.3WV	
C270	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C273	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C274	YECUV2A152KX	Ceramic, 0.0015µF 100WV	
C275	ECEA1CKS101	Electrolytic, 100µF 16WV	
C276	ECA1CSA470I	Electrolytic, 47µF 16WV	
C277	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C278	ECA1CSA470I	Electrolytic, 47µF 16WV	
C301	YECUS1H101JM	Ceramic, 100PF 50WV	
C303	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C304	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C305	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C306	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	

Ref. No.	Part No.	Part Name & Description	Remarks
C307	YECUS1C224KX	Ceramic, 0.22µF 16WV	
C308	YECUS1E333KX	Ceramic, 0.033µF 25WV	
C309	YECUS1H562KX	Ceramic, 0.0056µF 50WV	
C310	ECEA0JKS331I	Electrolytic, 330µF 6.3WV	
C311	ECEA1AKS221	Electrolytic, 220µF 10WV	
C313	ECA1CSA100I	Electrolytic, 10µF 16WV	
C314	YECUS1E393KX	Ceramic, 0.039µF 25WV	
C315	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C316	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C317	ECA1CSA470I	Electrolytic, 47µF 16WV	
C318	YECUS1E273KX	Ceramic, 0.027µF 25WV	
C319	YECUS1H392KX	Ceramic, 0.0039µF 50WV	
C320	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C321	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C322	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C324	YECUS1C224KX	Ceramic, 0.22µF 16WV	
C327	YECUS1C683KX	Ceramic, 0.068µF 16WV	
C328	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C329	ECA1HSA3R3I	Electrolytic, 3.3µF 50WV	
C330	ECSH1CX335CR	Tantalum, 3.3µF 16WV	
C331	ECSH1CX335CR	Tantalum, 3.3µF 16WV	
C341	ECA1HSA47I	Electrolytic, 0.47µF 50WV	
C342	YECUS1H122KX	Ceramic, 0.0012µF 50WV	
C344	ECA1HSA47I	Electrolytic, 0.47µF 50WV	
C345	YECUV2A122KX	Ceramic, 0.0012µF 100WV	
C346	YECUV1C105KX	Ceramic, 1µF 16WV	
C347	ECEA1AKS101	Electrolytic, 100µF 10WV	
C348	ECA1HSA2R2I	Electrolytic, 2.2µF 50WV	
C350	YECUS1H152KX	Ceramic, 0.0015µF 50WV	
C351	YECUS1H152KX	Ceramic, 0.0015µF 50WV	
C352	ECEA1CKS101	Electrolytic, 100µF 16WV	
C353	ECEA1AKS221	Electrolytic, 220µF 10WV	
C354	ECA1CSA470I	Electrolytic, 47µF 16WV	
C355	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C357	ECEA1CKS101	Electrolytic, 100µF 16WV	
C366	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C370	ECA1HSA47I	Electrolytic, 0.47µF 50WV	
C371	YECUS1AM335R	Tantalum, 3.3µF 10WV	
C372	ECEA1AKS221	Electrolytic, 220µF 10WV	
C373	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C374	ECEA1CKS101	Electrolytic, 100µF 16WV	
C375	YECUS1H393KX	Ceramic, 0.039µF 50WV	
C376	ECEA1CN101U	Electrolytic, 100µF 16WV	
C377	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C378	ECSH1CY105CR	Tantalum, 1µF 16WV	
C411	ECEA1AKS221	Electrolytic, 220µF 10WV	
C412	ECEA1AKS221	Electrolytic, 220µF 10WV	
C413	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C601	YECUS1H220JM	Ceramic, 22PF 50WV	
C602	YECUS1H220JM	Ceramic, 22PF 50WV	
C603	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C605	ECEA0JKS331I	Electrolytic, 330µF 6.3WV	
C607	ECS5R5H473	Electrolytic, 0.047F 5.5WV	
C608	YECUV1H104KX	Ceramic, 0.1µF 50WV	
C609	YECUS1C124KX	Ceramic, 0.12µF 16WV	
C611	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C612	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C615	YECUV1H151JM	Ceramic, 150PF 50WV	
C616	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C620	YECUS1H150JM	Ceramic, 15PF 50WV	
C621	YECUS1H390JM	Ceramic, 39PF 50WV	
C623	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C624	YECUS1H151JM	Ceramic, 150PF 50WV	
C650	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C660	ECA1HSA010I	Electrolytic, 1µF 50WV	
C662	ECA1CSA100I	Electrolytic, 10µF 16WV	
C685	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C686	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C687	ECEA0JKS331I	Electrolytic, 330µF 6.3WV	
C690	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C701	ECEA1CKS101	Electrolytic, 100µF 16WV	
C702	ECA1HSA47I	Electrolytic, 4.7µF 50WV	
C703	ECA0JSA470I	Electrolytic, 47µF 6.3WV	

Ref. No.	Part No.	Part Name & Description	Remarks
C704	ECEA1CKS101	Electrolytic, 100µF 16WV	
C705	ECA1HSAR47I	Electrolytic, 0.47µF 50WV	
C706	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C707	ECEA1AKS221	Electrolytic, 220µF 10WV	
C708	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C709	ECEA1AKS101	Electrolytic, 100µF 10WV	
C710	ECA1CDT102BQ	Electrolytic, 1000µF 16WV	
C711	YECUV1E334ZF	Ceramic, 0.33µF 25WV	
C712	EEAFC1A820H	Electrolytic, 82µF 10WV	
C714	ECA0JSA101I	Electrolytic, 100µF 6.3WV	
C715	ECSH1CC106CR	Tantalum, 10µF 10WV	
C716	ECA1CSA470I	Electrolytic, 47µF 16WV	
C718	YECUV1E334ZF	Ceramic, 0.33µF 25WV	
C719	YECUV1E334ZF	Ceramic, 0.33µF 25WV	
C720	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C721	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C722	ECEA1AKS221	Electrolytic, 220µF 10WV	
C723	ECEA1AKS221	Electrolytic, 220µF 10WV	
C724	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C725	ECA0JSA470I	Electrolytic, 47µF 6.3WV	
C727	ECEA1CKS101	Electrolytic, 100µF 16WV	
C728	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C741	ECEA1AKS101	Electrolytic, 100µF 10WV	
C805	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C806	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C807	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C808	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C809	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C901	YECUS1H270JM	Ceramic, 27PF 50WV	
C902	YECUS1H470JM	Ceramic, 47PF 50WV	
C903	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C904	ECA1CSA100I	Electrolytic, 10µF 16WV	
C905	YECUS1H271JM	Ceramic, 270PF 50WV	
C906	ECA1CSA470I	Electrolytic, 47µF 16WV	
C907	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C909	YECUS1H471JM	Ceramic, 470PF 50WV	
R209	YECUS1H101JM	Ceramic, 100PF 50WV	
R309	YECUS1H101JM	Ceramic, 100PF 50WV	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
C905	YECUM2A683JN	Plastic Film, 0.068µF 100WV	
C906	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C907	ECEV1CA220SR	Electrolytic, 22µF 16WV	
C910	YECUS1H102KX	Ceramic, 0.001µF 50WV	
C911	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C914	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C915	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C920	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C921	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C923	YECUS1H681JM	Ceramic, 680PF 50WV	

DC-DC CONV. BLOCK [E8515]

Ref. No.	Part No.	Part Name & Description	Remarks
C1	ECA1CM332	Electrolytic, 3300µF 16WV	
C2	ECA1EM332B	Electrolytic, 3300µF 25WV	
C3	ECA1HM3R3B	Electrolytic, 3.3µF 50WV	
C5	ECEA1HKS2R2	Electrolytic, 2.2µF 50WV	
C6	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C8	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C9	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C10	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C11	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C12	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C13	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C14	YECUS1H103ZF	Ceramic, 0.01µF 50WV	
C15	YECUS1H103ZF	Ceramic, 0.01µF 50WV	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
C101	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C102	YECUZ1C104KX	Ceramic, 0.1µF 16WV	

Ref. No.	Part No.	Part Name & Description	Remarks
C103	YECSW0J226MA	Tantalum, 22µF 6.3WV	
C104	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C105	ECSH0JY475CR	Tantalum, 4.7µF 6.3WV	
C106	YECUZ1E273KX	Ceramic, 0.027µF 25WV	
C107	YECUZ1H152KX	Ceramic, 0.0015µF 50WV	
C108	YECUZ1H472KX	Ceramic, 0.0047µF 50WV	
C109	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C110	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C111	YECSW1A106MA	Tantalum, 10µF 10WV	
C112	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C113	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C115	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C116	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C117	YECUS1A105KX	Ceramic, 1pF 10WV	
C118	YECUZ1H471KX	Ceramic, 470pF 50WV	
C119	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C120	YECUZ1H561KX	Ceramic, 560pF 50WV	
C121	YECUZ1E123KX	Ceramic, 0.012µF 25WV	
C122	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C133	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C145	YECUZ1A124KX	Ceramic, 0.12µF 10WV	
C201	YECUZ1E123KX	Ceramic, 0.012µF 25WV	
C203	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C204	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C205	YECSW1A106MA	Tantalum, 10µF 10WV	
C206	FLH1A4740004	Ceramic, 0.47µF	
C208	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C209	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C210	YECSW1A106MA	Tantalum, 10µF 10WV	
C214	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C451	FLH1A4740004	Ceramic, 0.47µF	
C453	YECUZ1H103KX	Ceramic, 0.01µF 50WV	
C601	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C602	ECEV1CA470SF	Electrolytic, 47µF 16WV	
C603	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C605	YECUS1A105KX	Ceramic, 1pF 10WV	
C901	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C903	YECUZ1C333KX	Ceramic, 0.033µF 16WV	

1.4. Resistors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
J402	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J403	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J404	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J405	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J406	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J408	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J410	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J411	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J413	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J414	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J415	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J416	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J417	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J418	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J419	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J420	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J421	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J422	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J423	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J452	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
J453	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
J454	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R50	ERJ6GEYJ5R6	Chip, 5.6Ω 1/10W	
R51	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R54	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R55	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R58	ERJ6GEYJ392	Chip, 3.9kΩ 1/10W	
R62	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R63	ERJ6GEYJ104	Chip, 100kΩ 1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R66	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R68	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R201	ERJ6GEYJ223	Chip, 22kΩ 1/10W	
R202	ERJ6GEYJ223	Chip, 22kΩ 1/10W	
R204	ERJ6GEYJ912	Chip, 9.1kΩ 1/10W	
R205	ERJ6GEYJ392	Chip, 3.9kΩ 1/10W	
R206	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R207	ERJ6GEYJ682	Chip, 6.8kΩ 1/10W	
R210	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R212	ERJ6GEYJ154	Chip, 150kΩ 1/10W	
R213	ERJ6GEYJ221	Chip, 220Ω 1/10W	
R215	ERJ6GEYJ472	Chip, 4.7kΩ 1/10W	
R216	ERJ6GEYJ105	Chip, 1MΩ 1/10W	
R219	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R220	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R221	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R222	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R225	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R226	ERJ6GEYJ333	Chip, 33kΩ 1/10W	
R230	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R235	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R240	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R241	ERJ6GEYJ272	Chip, 2.7kΩ 1/10W	
R242	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R243	ERJ6GEYJ272	Chip, 2.7kΩ 1/10W	
R250	ERJ6GEYJ154	Chip, 150kΩ 1/10W	
R251	ERJ6GEYJ393	Chip, 39kΩ 1/10W	
R252	ERJ6GEYJ273	Chip, 27kΩ 1/10W	
R253	ERJ6GEYJ273	Chip, 27kΩ 1/10W	
R254	ERJ6GEYJ393	Chip, 39kΩ 1/10W	
R257	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R258	ERJ6GEYJ393	Chip, 39kΩ 1/10W	
R259	ERJ6GEYJ273	Chip, 27kΩ 1/10W	
R260	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R261	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R262	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R263	ERJ6GEYJ822	Chip, 8.2kΩ 1/10W	
R264	ERJ6GEYJ433	Chip, 43kΩ 1/10W	
R265	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R267	ERJ6GEYJ123	Chip, 12kΩ 1/10W	
R268	ERJ6GEYJ223	Chip, 22kΩ 1/10W	
R270	ERJ6GEYJ471	Chip, 470Ω 1/10W	
R271	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R272	ERJ6GEYJ101	Chip, 100Ω 1/10W	
R273	ERJ6GEYJ101	Chip, 100Ω 1/10W	
R274	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R275	ERJ6GEYJ393	Chip, 39kΩ 1/10W	
R301	ERJ6GEYJ223	Chip, 22kΩ 1/10W	
R302	ERJ6GEYJ223	Chip, 22kΩ 1/10W	
R304	ERJ6GEYJ912	Chip, 9.1kΩ 1/10W	
R305	ERJ6GEYJ392	Chip, 3.9kΩ 1/10W	
R306	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R307	ERJ6GEYJ682	Chip, 6.8kΩ 1/10W	
R310	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R319	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R320	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R321	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R322	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R330	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R335	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R340	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R341	ERJ6GEYJ272	Chip, 2.7kΩ 1/10W	
R342	ERJ6GEYJ561	Chip, 560Ω 1/10W	
R343	ERJ6GEYJ272	Chip, 2.7kΩ 1/10W	
R344	ERJ8GEYJ223V	Chip, 22kΩ 1/8W	
R350	ERJ6GEYJ154	Chip, 150kΩ 1/10W	
R351	ERJ6GEYJ393	Chip, 39kΩ 1/10W	
R352	ERJ6GEYJ273	Chip, 27kΩ 1/10W	
R353	ERJ6GEYJ273	Chip, 27kΩ 1/10W	
R354	ERJ6GEYJ393	Chip, 39kΩ 1/10W	
R360	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R370	ERJ6GEYJ101	Chip, 100Ω 1/10W	
R371	ERJ6GEYJ2R2	Chip, 2.2Ω 1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R372	ERJ6GEYJ390	Chip, 39Ω 1/10W	
R373	ERG1SJ101	Metal Oxid, 100Ω 1W	
R374	ERJ6GEYJ1R0	Chip, 1Ω 1/10W	
R375	ERJ8GEYJ473V	Chip, 47kΩ 1/8W	
R376	ERDS1FJ681	Carbon, 680Ω 1/2W	
R377	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R405	ERJ6GEYJ331	Chip, 330Ω 1/10W	
R408	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R600	ERJ6GEYJ330	Chip, 33Ω 1/10W	
R601	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R603	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R605	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R606	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R608	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R609	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R610	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R611	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R614	ERJ6GEYJ681	Chip, 680Ω 1/10W	
R615	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R617	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R618	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R619	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R620	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R621	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R622	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R624	ERJ6GEYJ222	Chip, 2.2kΩ 1/10W	
R629	ERJ6GEYJ222	Chip, 2.2kΩ 1/10W	
R630	ERJ8GEYJ222V	Chip, 2.2kΩ 1/8W	
R631	ERJ6GEYJ222	Chip, 2.2kΩ 1/10W	
R632	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R633	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R634	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R639	ERJ6GEYJ184	Chip, 180kΩ 1/10W	
R640	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R641	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R642	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R643	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R645	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R646	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R647	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R648	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R649	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R650	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R651	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R652	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R660	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R661	ERJ6GEYJ393	Chip, 39kΩ 1/10W	
R662	ERJ6GEYJ222	Chip, 2.2kΩ 1/10W	
R663	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R666	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R671	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R673	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R677	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R680	ERJ6GEYJ331	Chip, 330Ω 1/10W	
R681	ERJ6GEYJ331	Chip, 330Ω 1/10W	
R685	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R686	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R687	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R688	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R690	ERJ6GEYJ184	Chip, 180kΩ 1/10W	
R692	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R694	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R697	ERJ6GEYJ472	Chip, 4.7kΩ 1/10W	
R698	ERJ8GEYJ473V	Chip, 47kΩ 1/8W	
R701	ERDS2FJ270	Carbon, 27Ω 1/4W	
R702	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R703	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R704	ERJ6GEYJ274	Chip, 270kΩ 1/10W	
R705	ERJ6GEYJ433	Chip, 43kΩ 1/10W	
R706	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R707	ERJ6GEYJ224	Chip, 220kΩ 1/10W	
R708	ERJ6GEYJ433	Chip, 43kΩ 1/10W	
R709	ERJ6GEYJ473	Chip, 47kΩ 1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R710	ERDS1FJ681	Carbon, 680Ω 1/2W	
R711	ERDS1FJ681	Carbon, 680Ω 1/2W	
R712	ERJ8GEYJ1R0V	Chip, 1.0Ω 1/8W	
R714	ERJ8GEYJ561V	Chip, 560Ω 1/8W	
R715	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R720	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R721	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R724	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R725	ERJ6GEYJ154	Chip, 150kΩ 1/10W	
R726	ERJ6GEYJ472	Chip, 4.7kΩ 1/10W	
R727	ERJ8GEYJ151V	Chip, 150 ohms 1/8W	
R728	ERJ8GEYJ151V	Chip, 150 ohms 1/8W	
R731	ERJ8GEYJ1R0V	Chip, 1.0Ω 1/8W	
R732	ERJ8GEYJ561V	Chip, 560Ω 1/8W	
R755	ERJ8GX0R00V	Chip, 0Ω 1/8W	
R803	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R900	ERJ6GEYJ225V	Chip, 2.2MΩ 1/10W	
R902	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R903	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R904	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R905	ERJ6GEYJ334	Chip, 330kΩ 1/10W	
R906	ERJ6GEYJ182	Chip, 1.8kΩ 1/10W	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
R906	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R907	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R908	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R909	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R910	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R911	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R930	ERJ6GEYJ332	Chip, 3.3kΩ 1/10W	
R931	ERJ6GEYJ332	Chip, 3.3kΩ 1/10W	
R938	ERJ6GEYJ4R7	Chip, 4.7Ω 1/10W	
R941	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R942	ERJ6GEYJ433	Chip, 43kΩ 1/10W	
R961	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R962	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R963	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R964	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R965	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R970	ERJ6GEY0R00V	Chip, 0Ω 1/10W	

DC-DC CONV. BLOCK [E8515]

Ref. No.	Part No.	Part Name & Description	Remarks
C4	ERJ8GEYJ684V	Chip, 680kΩ 1/8W	
R1	ERJ6GEYJ224	Chip, 220kΩ 1/10W	
R2	ERJ6GEYJ562	Chip, 5.6kΩ 1/10W	
R3	ERJ6GEYJ473	Chip, 47kΩ 1/10W	
R4	ERJ8GEYJ560V	Chip, 56Ω 1/8W	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
J401	ERJ3GEY0R00V	Chip, 0Ω 1/16W	
J429	ERJ3GEY0R00V	Chip, 0Ω 1/16W	
R101	ERJ3GEYJ101V	Chip, 100Ω 1/16W	
R102	ERJ14YJ330H	Chip, 33Ω 1/4W	
R103	ERJ3GEYJ683V	Chip, 68kΩ 1/16W	
R104	ERJ3GEYJ683V	Chip, 68kΩ 1/16W	
R105	ERJ3GEYJ333V	Chip, 33kΩ 1/16W	
R106	ERJ3GEYJ184V	Chip, 180kΩ 1/16W	
R107	ERJ3GEYJ184V	Chip, 180kΩ 1/16W	
R108	ERJ3GEYJ823V	Chip, 82kΩ 1/16W	
R109	ERJ3GEYJ334V	Chip, 330kΩ 1/16W	
R110	ERJ3GEYJ102V	Chip, 1kΩ 1/16W	
R111	ERJ3GEYJ102V	Chip, 1kΩ 1/16W	
R112	ERJ3GEYJ393V	Chip, 39kΩ 1/16W	
R113	ERJ3GEYJ333V	Chip, 33kΩ 1/16W	
R114	ERJ3GEYJ153V	Chip, 15kΩ 1/16W	
R119	ERJ3GEYJ184V	Chip, 180kΩ 1/16W	
R120	ERJ3GEYJ333V	Chip, 33kΩ 1/16W	
R147	ERJ3GEYJ153V	Chip, 15kΩ 1/16W	

Ref. No.	Part No.	Part Name & Description	Remarks
R207	ERJ3GEYJ473V	Chip, 47kΩ 1/16W	
R208	ERJ3GEYJ473V	Chip, 47kΩ 1/16W	
R209	ERJ3GEYJ391V	Chip, 390Ω 1/16W	
R210	ERJ3GEYJ334V	Chip, 330kΩ 1/16W	
R211	ERJ3GEYJ124V	Chip, 120kΩ 1/16W	
R213	ERJ3GEYJ470V	Chip, 47Ω 1/16W	
R214	ERJ3GEYJ272V	Chip, 2.7kΩ 1/16W	
R215	ERJ3GEYJ473V	Chip, 47kΩ 1/16W	
R401	ERJ3GEYJ563V	Chip, 56kΩ 1/16W	
R402	ERJ3GEYJ563V	Chip, 56kΩ 1/16W	
R404	ERJ3GEYJ473V	Chip, 47kΩ 1/16W	
R411	ERJ3GEYJ334V	Chip, 330kΩ 1/16W	
R454	ERJ3GEYJ392V	Chip, 3.9kΩ 1/16W	
R455	ERJ3GEYJ472V	Chip, 4.7kΩ 1/16W	
R456	ERJ3GEYJ472V	Chip, 4.7kΩ 1/16W	
R461	ERJ3GEYJ823V	Chip, 82kΩ 1/16W	
R463	ERJ3GEYJ823V	Chip, 82kΩ 1/16W	
R466	ERJ3GEYJ823V	Chip, 82kΩ 1/16W	
R471	ERJ3GEYJ121V	Chip, 120Ω 1/16W	
R473	ERJ3GEYJ121V	Chip, 120Ω 1/16W	
R481	ERJ3GEYJ104V	Chip, 100kΩ 1/16W	
R601	ERJ3GEYJ123V	Chip, 12kΩ 1/16W	
R602	ERJ3GEYJ103V	Chip, 10kΩ 1/16W	
R603	ERJ3GEYJ273V	Chip, 27kΩ 1/16W	
R604	ERJ3GEYJ124V	Chip, 120kΩ 1/16W	
R605	ERJ3GEYJ103V	Chip, 10kΩ 1/16W	
R606	ERJ3GEYJ822V	Chip, 8.8kΩ 1/16W	
R607	ERJ3GEYJ103V	Chip, 10kΩ 1/16W	
R608	ERJ3GEYJ103V	Chip, 10kΩ 1/16W	
R609	ERJ3GEYJ472V	Chip, 4.7kΩ 1/16W	
R610	ERJ3GEYJ472V	Chip, 4.7kΩ 1/16W	
R613	ERJ3GEYJ122V	Chip, 1.2kΩ 1/16W	
R901	ERJ3GEYJ103V	Chip, 10kΩ 1/16W	
R902	ERJ3GEYJ333V	Chip, 33kΩ 1/16W	
R903	ERJ3GEYJ122V	Chip, 1.2kΩ 1/16W	

1.5. Connectors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
CJ620	K92Z00000176	Connector, 14P	
CN201	YEA012504	Connector, RCA Rear-Out	
CN251	YEA012709	Connector, 2P RCA	
CN252	YEA012571	Connector, 2P RCA	
CN253	YEA012785	Connector, 2P RCA S.W.-Out	
CN301	YEA012505	Connector, RCA Front-Out	
CN370	K1PQ02200002	Connector, 2P	
CN601	YEA0115MX	Connector, 15P	
CN602	K1HA149A0001	Connector, 7P	
CN603	YEA0104MX	Connector, 4P	
CN620	YEA012763	Connector, 14P	
CN680	YEA012307	Connector, 8P DIN	
CN701	YEA012748	Connector, 16P	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
CN901	YEA012760	Connector, 14P	

DC-DC CONV. BLOCK [E8515]

Ref. No.	Part No.	Part Name & Description	Remarks
CN1	YEA0PSVH05A	Connector, 5P	

SUB BLOCK [E8496A]

Ref. No.	Part No.	Part Name & Description	Remarks
CJ640	YEA0115MPA	Connector, 15P	
CJ642	YEA0104MPA	Connector, 4P	
CP641	YEA012761	Connector, 14P	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
CN101	YEAESFW15R2E	Connector, 15P	
CN402	K1MN14B00028	Connector, 14P	
CN901	K1MN05B00010	Connector, 5P	
CN902	K1MN05B00009	Connector, 5P	

1.6. Electric Parts

SWITCHES

Ref. No.	Part No.	Part Name & Description	Remarks
SW2	ESE102MH2	Switch	
SW4	YEAS09275	Switch	
SW602	YEAS08042	Switch	
SW610	YEAS09267	Switch	
SW901	YEAS09312	Switch	
SW902	YEAS09312	Switch	
SW903	KOH1BA000285	Switch	
SW904	KOH1BA000285	Switch	
SW905	YEAS09312	Switch	
SW906	YEAS09312	Switch	
SW907	YEAS09312	Switch	
SW908	KOH1BA000285	Switch	
SW909	KOH1BA000285	Switch	
SW910	YEAS09312	Switch	
SW911	YEAS09312	Switch	
SW912	KOH1BA000285	Switch	
SW913	KOH1BA000285	Switch	
SW914	KOH1BA000285	Switch	
SW915	YEAS09312	Switch	
SW916	YEAS09312	Switch	
SW917	KOH1BA000285	Switch	
SW918	KOH1BA000285	Switch	

CRYSTALS

Ref. No.	Part No.	Part Name & Description	Remarks
XL201	H2D169500005	Crystal	
XL451	YEXLSTCC419T	Crystal	
XL600	H0D125500002	Crystal OSC	
XL601	YEXLMC60327	Crystal OSC	
XL900	YEXL4900433T	Crystal OSC	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L1	YETQ022T161	Coil	
L2	YELTB2R2RT	Coil	
L3	YELTB2R2RT	Coil	
L4	YELTB2R2RT	Coil	
L5	YELT03N330JT	Coil	
L50	YELT03A330KT	Coil	
L600	YELT02C470KT	Coil	
L601	YELT02C101KT	Coil	
L602	YELT02C101KT	Coil	
L702	YETQ026T164	Coil	
L703	ELEAT330KA02	Coil	
L900	YELT02C330KT	Coil	
L901	YELT02C330KT	Coil	
L901	YELT216825TG	Coil	
L902	YELTD75F101T	Coil	

LCD

Ref. No.	Part No.	Part Name & Description	Remarks
LCD901	L5ACCLC00003	LCD Display	

LAMPS

Ref. No.	Part No.	Part Name & Description	Remarks
Z50	YEAL02007T	Neon Lamp	
CFL931	A2CA00000003	Display Tube	

THERMISTOR

Ref. No.	Part No.	Part Name & Description	Remarks
PT701	YERT7AR4R7MT	Thermistor	

1.7. Accessories

PRINTING

Ref. No.	Part No.	Part Name & Description	Remarks
	YGF282954	Operating Instructions	

INSTALLATION PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
	YEP9FZ2874	Accessories	
	EAK8H01A	Speaker	
	CR2025/1F	Battery	
	YEP9BS1111	Screws	
	YEA33144	Antenna Accessory	
	YEAJ02815	Power Cord	
	YEAJ04866	Cord w/Plug	
	YEF131302	Removable Face Plate Case	
	YEFX0214198	Mounting Collar	
	YEFX992012	Remote Controller	

1.8. Mechanical Parts

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
F1	YEAFO2015	Fuse, 15A	
AJ1	YEAJ02773	Power Cord	
AJ2	YGAJ071284	Cord w/Plug	
AJ3	YGAJ071285	Cord w/Plug	
AJ252	YEAJ8VW3503	Tube	
ANT51	YEAAL0090	Antenna Receptacle	
AT1-3	K4ZZ01000048	Terminal	
AP2	YEA2711	Flexible Print Circuit	
AT4	YEAT05014	Terminal	
HP1	YEAT03324	Terminal	
1	YEF05594B	Bottom Cover	(1-B)
2	YEF031359D	Upper Cover	(4-C)
3	YEF08493AK	Rear Plate	(3-C)
4	YEF131413	Cover, Detachable	(2-A)
5	YEF09505	Side Plate	(1-C)
6	YEF026243	Escutcheon Ass'y, Unit	(3-A)
7	YEF026117	Escutcheon Ass'y, Detachable	(1-A)
8	YEF05570	Trim Plate	(1-A)
9	YEF135147	Button, EJECT	(3-A)
10	YEF135435	Button, VOL	(1-A)
11	YEF135436	Button, SEL	(1-A)
12	YEF135713	Button, BAND/SOURCE	(1-A)
13	YEF135439	Button, TUNE/TRACK	(1-A)
14	YEF135534	Button, TA/AF	(1-A)
15	YEF135537	Button, PRESET	(1-A)
16	YEF135442	Button, OPEN	(1-A)
17	YEF01922	Heat Sink	(3-A)
18	YEF05030	Color Rivet	(2-A)
19	YEF06835	Holder, LCD	(2-A)
20	YEF04187	Lead Cap	(4-C)
21	YEFV011813	Insulator	(1-B)
22	YEFV021596	Optical Shade	(2-B)
24	YEFV03457	Magnetic Shield	(2-A)
25	YEFV011928	Insulator	(2-A)
26	YEFW04156	Shaft Collar	(2-B)
27	YEFW04157	Shaft Collar	(2-A)
28	YEFX0214422	Bracket, CN701	(3-B)
29	YEFX0011903	Transparent Plate	(2-B)
30	YEFX0213945B	Bracket, IC241	(2-B)
31	YEFX0214625	Bracket, Inverter	(2-A)
32	YEFX0214700	Bracket, Deck	(4-C)
33	YEFX0011904	Transparent Plate, L	(1-A)
34	YEFX0214423	Bracket, IC702	(2-B)
35	YEFX0011905	Transparent Plate	(1-A)

Ref. No.	Part No.	Part Name & Description	Remarks
36	YEFX0214168	Bracket, IC704	(2-B)
37	YEFX025137A	Color Screen	(2-B)
38	YEFX007380	Cord Clamper, CN251	(3-B)
39	YEFX007142	Cord Clamper	(3-C)
40	YEP9FX069	Hook Bracket Ass'y	(3-B)
41	YEFX0052396	Spring, Open	(1-A)
42	YEFX0052253	Spring	(2-A) (2-B)
43	YEFJ05041	Color Rivet	(3-C)
44	YEP9FX088	Front Chassis Ass'y	(3-B)
45	YEFX007146	Cord Clamper	(3-C)
47	YEFA031565	DC-DC Converter Upper Cover	(4-A)
48	YEFA131338	DC-DC Converter Case	(4-A)
49	YEFM031083	Sheet	(4-B)
51	YEJS06092	Screw, 3mm * 10mm	
52	YEJS03020	Screw, 2mm * 4mm	
53	YEJT03009	Tapping Screw, 3mm * 8mm	
54	XTB3+6FFX	Tapping Screw, 3mm * 6mm	
55	YEJT03156	Tapping Screw, 2.6mm * 4mm	
56	YEJT03247	Tapping Screw,	
57	XTN2+8GFZ	Tapping Screw, 2mm * 8mm	
58	XYN2+J4FX	Screw, 2mm * 4mm	
59	XYN3+F14FX	Screw, 3mm * 14mm	

2 REPLACEMENT PARTS LIST <CQ-DFX777LEN>

Notes :

1. Be sure to make your orders of replacement parts according to this list.
2. Important safety notice: Components, identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
3. Location keys in the remarks column indicates the general location of the parts shown in the exploded drawing, as in a road map.
4. The marking (RTL) indicates that Retention Time is limited for this item. After the discontinuation of assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependent on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

2.1 IC's and Transistors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
IC201	YEAMEA6320TT	IC	
IC202	AN7395SE1	IC	
IC204	YEAMPD4053E2	IC	
IC220	YEAMM5218AFE	IC	
IC241	YEAMTDA7384	IC	
IC600	C2CBJG000004	IC	
IC601	AN8065SE1	IC	
IC650	YEAMC14584BE	IC	
IC702	YEAMA61W12ST	IC	
IC704	AN7805F	IC	
IC705	AN8009M-E1	IC	
IC802	YEAMM5218AFE	IC	
IC900	YEAMDA7331D	IC	
PA51	C5EA00000069	IC	
Q213	YEANC1623T1	Transistor	
Q230	YEANC323TUTX	Transistor	
Q231	YEANC323TUTX	Transistor	
Q330	YEANC323TUTX	Transistor	
Q331	YEANC323TUTX	Transistor	
Q660	YEANA114EKT	Transistor	
Q661	YEANA114EKT	Transistor	
Q663	YEANA114EKT	Transistor	
Q701	YEANC4480AN	Transistor	
Q703	YEANB1243QRT	Transistor	
Q704	YEANC114YKTX	Transistor	
Q705	2SD2139TA	Transistor	
Q706	YEANA114EKT	Transistor	
Q707	YEANA114EKT	Transistor	
Q708	2SD1994ATA	Transistor	
Q710	YEANC144EUTX	Transistor	
Q711	YEANC144EUTX	Transistor	
Q720	YEANHQ1F3PT1	Transistor	
Q721	YEANC144WKTX	Transistor	
Q901	YEANC1623T1	Transistor	
Q902	YEANA114EKT	Transistor	
Q903	YEANC144EKT	Transistor	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
IC901	YEAMLC75884W	IC	
IC905	YEAMSBX8035F	IC	
Q902	YEANSSTA06T	Transistor	
Q903	YEANSSTA06T	Transistor	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
IC101	C1BB00000173	IC	
IC201	MN662748RPMF	IC	
IC401	MN101C117AD	IC	
IC601	COGBY00000004	IC	
IC901	COGBY00000003	IC	
Q1	YEADPS1101W	Transistor	
Q3	YEADPS1101W	Transistor	
Q101	2SB766ATX	Transistor	
Q451	YEANC113ZKTX	Transistor	

2.2. Diodes

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
D201	MA151ATX	Diode	
D601	MA723TA	Diode	
D602	LN25RP	LED	
D603	MA151ATX	Diode	
D702	MA165TA	Diode	
D703	YEADRD56M3T1	Diode	
D704	MA723TA	Diode	
D706	YEADDAM3MA47	Diode	
D707	YEADRB100AT	Diode	
D708	YEADRD91M1T2	Diode	
D709	MA153TX	Diode	
D710	YEADRD27M2T1	Diode	
D711	MA4051LMTA	Diode	
D729	YEADRD10M1T1	Diode	
D803	MA151ATX	Diode	
D804	YEADRD51MBT1	Diode	
D901	YEADRD51MBT1	Diode	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
D900	LN1271RAL	LED	
D926	MA8056LMHTX	Diode	
D927	MA8056LMHTX	Diode	
D928	MA8056LMHTX	Diode	
D929	MA8056LMHTX	Diode	
D930	MA8047MTX	Diode	

SUB BLOCK [E8496A]

Ref. No.	Part No.	Part Name & Description	Remarks
D642	LNJ306G5TUWQ	LED	
D643	LNJ306G5TUWQ	LED	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
D1	YEADAN1102W	Diode	
D3	YEADAN1102W	Diode	
D201	YEAD1SS355T1	Diode	
D401	MA151WKTX	Diode	
D601	YEAD1SS355T1	Diode	

2.3. Capacitors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
C57	YECUS1H123KX	Ceramic, 0.012pF 50WV	
C61	ECA1CSA470I	Electrolytic, 47pF 16WV	
C62	YECUS1H103KX	Ceramic, 0.01pF 50WV	
C63	YECUS1E223KX	Ceramic, 0.022pF 25WV	
C66	YECUS1E223KX	Ceramic, 0.022pF 25WV	
C67	YECUS1C104KX	Ceramic, 0.1pF 16WV	
C72	YECUS1H103KX	Ceramic, 0.01pF 50WV	
C201	YECUS1H101JM	Ceramic, 100PF 50WV	
C203	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	
C204	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	
C205	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	

Ref. No.	Part No.	Part Name & Description	Remarks
C206	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	
C207	YECUS1C224KX	Ceramic, 0.22pF 16WV	
C208	YECUS1E333KX	Ceramic, 0.033pF 25WV	
C209	YECUS1H562KX	Ceramic, 0.0056pF 50WV	
C210	ECA1CSA470I	Electrolytic, 47pF 16WV	
C211	YECUS1C104KX	Ceramic, 0.1pF 16WV	
C212	ECA0JSA220I	Electrolytic, 22pF 6.3WV	
C213	ECA1HSA010I	Electrolytic, 1pF 50WV	
C214	YECUS1C563KX	Ceramic, 0.056pF 16WV	
C215	YECUS1E273KX	Ceramic, 0.027pF 25WV	
C216	ECA0JSA470I	Electrolytic, 47pF 6.3WV	
C217	ECA1CSA100I	Electrolytic, 10pF 16WV	
C218	YECUS1E273KX	Ceramic, 0.027pF 25WV	
C219	YECUS1H392KX	Ceramic, 0.0039pF 50WV	
C220	ECA1HSA4R7I	Electrolytic, 4.7pF 50WV	
C224	YECUS1C224KX	Ceramic, 0.22pF 16WV	
C227	YECUS1C683KX	Ceramic, 0.068pF 16WV	
C230	ECSH1CX335CR	Tantalum, 3.3pF 16WV	
C231	ECSH1CX335CR	Tantalum, 3.3pF 16WV	
C232	YECUS1C104KX	Ceramic, 0.1pF 16WV	
C241	ECA1HSA47I	Electrolytic, 0.47pF 50WV	
C242	YECUS1H122KX	Ceramic, 0.0012pF 50WV	
C244	ECA1HSA47I	Electrolytic, 0.47pF 50WV	
C245	YECUS1H122KX	Ceramic, 0.0012pF 50WV	
C248	ECA1CDT472Y	Electrolytic, 4700pF 16WV	
C301	YECUS1H101JM	Ceramic, 100PF 50WV	
C303	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	
C304	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	
C305	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	
C306	ECA1HSA3R3I	Electrolytic, 3.3pF 50WV	
C307	YECUS1C224KX	Ceramic, 0.22pF 16WV	
C308	YECUS1E333KX	Ceramic, 0.033pF 25WV	
C309	YECUS1H562KX	Ceramic, 0.0056pF 50WV	
C310	ECEA0JKS331I	Electrolytic, 330pF 6.3WV	
C311	ECEA1AKS221	Electrolytic, 220pF 10WV	
C313	ECA1CSA100I	Electrolytic, 10pF 16WV	
C314	YECUS1E393KX	Ceramic, 0.039pF 25WV	
C315	YECUS1H103KX	Ceramic, 0.01pF 50WV	
C316	YECUS1H103KX	Ceramic, 0.01pF 50WV	
C317	ECA1CSA470I	Electrolytic, 47pF 16WV	
C318	YECUS1E273KX	Ceramic, 0.027pF 25WV	
C319	YECUS1H392KX	Ceramic, 0.0039pF 50WV	
C320	YECUS1E104ZF	Ceramic, 0.1pF 25WV	
C321	YECUS1E104ZF	Ceramic, 0.1pF 25WV	
C322	YECUS1H103KX	Ceramic, 0.01pF 50WV	
C324	YECUS1C224KX	Ceramic, 0.22pF 16WV	
C327	YECUS1C683KX	Ceramic, 0.068pF 16WV	
C330	ECSH1CX335CR	Tantalum, 3.3pF 16WV	
C331	ECSH1CX335CR	Tantalum, 3.3pF 16WV	
C341	ECA1HSA47I	Electrolytic, 0.47pF 50WV	
C342	YECUS1H122KX	Ceramic, 0.0012pF 50WV	
C344	ECA1HSA47I	Electrolytic, 0.47pF 50WV	
C345	YECUV2A122KX	Ceramic, 0.0012pF 100WV	
C346	YECUV1C105KX	Ceramic, 1pF 16WV	
C347	ECEA1AKS101	Electrolytic, 100pF 10WV	
C348	ECA1HSA2R2I	Electrolytic, 2.2pF 50WV	
C411	ECEA1AKS221	Electrolytic, 220pF 10WV	
C412	ECEA1AKS221	Electrolytic, 220pF 10WV	
C413	YECUS1H103KX	Ceramic, 0.01pF 50WV	
C601	YECUS1H220JM	Ceramic, 22PF 50WV	
C602	YECUS1H220JM	Ceramic, 22PF 50WV	
C603	YECUS1C104KX	Ceramic, 0.1pF 16WV	
C605	ECEA0JKS331I	Electrolytic, 330pF 6.3WV	
C607	ECS5R5H473	Electrolytic, 0.047F 5.5WV	
C608	YECUV1H104KX	Ceramic, 0.1pF 50WV	
C609	YECUS1C124KX	Ceramic, 0.12pF 16WV	
C611	YECUS1E104ZF	Ceramic, 0.1pF 25WV	
C612	YECUS1E104ZF	Ceramic, 0.1pF 25WV	
C615	YECUV1H151JM	Ceramic, 150PF 50WV	
C616	YECUS1H103KX	Ceramic, 0.01pF 50WV	
C620	YECUS1H150JM	Ceramic, 15PF 50WV	
C621	YECUS1H390JM	Ceramic, 39PF 50WV	
C623	YECUS1H103KX	Ceramic, 0.01pF 50WV	

Ref. No.	Part No.	Part Name & Description	Remarks
C624	YECUS1H151JM	Ceramic, 150PF 50WV	
C650	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C660	ECA1HSA010I	Electrolytic, 1µF 50WV	
C662	ECA1CSA100I	Electrolytic, 10µF 16WV	
C685	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C686	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C687	ECA1CSA470I	Electrolytic, 47µF 16WV	
C690	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C701	ECEA1CKS101	Electrolytic, 100µF 16WV	
C702	ECA1HSA4R7I	Electrolytic, 4.7µF 50WV	
C703	ECA0JSA470I	Electrolytic, 47µF 6.3WV	
C704	ECEA1CKS101	Electrolytic, 100µF 16WV	
C705	ECA1HSA47I	Electrolytic, 0.47µF 50WV	
C706	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C707	ECEA1AKS221	Electrolytic, 220µF 10WV	
C708	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C709	ECEA1AKS101	Electrolytic, 100µF 10WV	
C710	ECA1CDT102BQ	Electrolytic, 1000µF 16WV	
C711	YECUV1E334ZF	Ceramic, 0.33µF 25WV	
C712	EEAFCA1A820H	Electrolytic, 82µF 10WV	
C714	ECA0JSA101I	Electrolytic, 100µF 6.3WV	
C715	ECSH1CC106CR	Tantalum, 10µF 10WV	
C716	ECA1CSA470I	Electrolytic, 47µF 16WV	
C718	YECUV1E334ZF	Ceramic, 0.33µF 25WV	
C719	YECUV1E334ZF	Ceramic, 0.33µF 25WV	
C720	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C721	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C722	ECEA1AKS221	Electrolytic, 220µF 10WV	
C723	ECEA1AKS221	Electrolytic, 220µF 10WV	
C724	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C725	ECA0JSA470I	Electrolytic, 47µF 6.3WV	
C727	ECEA1CKS101	Electrolytic, 100µF 16WV	
C728	YECUS1E104ZF	Ceramic, 0.1µF 25WV	
C741	ECEA1AKS101	Electrolytic, 100µF 10WV	
C810	ECA1CSA220I	Electrolytic, 22µF 16WV	
C811	YECUS1H102KX	Ceramic, 0.001µF 50WV	
C812	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C813	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C814	ECEA1HKS2R2I	Electrolytic, 2.2µF 50WV	
C901	YECUS1H270JM	Ceramic, 27PF 50WV	
C902	YECUS1H470JM	Ceramic, 47PF 50WV	
C903	YECUS1H103KX	Ceramic, 0.01µF 50WV	
C904	ECA1CSA100I	Electrolytic, 10µF 16WV	
C905	YECUS1H271JM	Ceramic, 270PF 50WV	
C906	ECA1CSA470I	Electrolytic, 47µF 16WV	
C907	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C909	YECUS1H471JM	Ceramic, 470PF 50WV	
R209	YECUS1H101JM	Ceramic, 100PF 50WV	
R309	YECUS1H101JM	Ceramic, 100PF 50WV	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
C905	YECUM2A683JN	Plastic Film, 0.068µF 100WV	
C906	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C907	ECEV1CA220SR	Electrolytic, 22µF 16WV	
C910	YECUS1H102KX	Ceramic, 0.001µF 50WV	
C911	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C914	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C915	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C920	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C921	YECUS1C104KX	Ceramic, 0.1µF 16WV	
C923	YECUS1H681JM	Ceramic, 680PF 50WV	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
C101	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C102	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C103	YECUSWJ226MA	Tantalum, 22µF 6.3WV	
C104	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C105	ECSH0JY475CR	Tantalum, 4.7µF 6.3WV	
C106	YECUZ1E273KX	Ceramic, 0.027µF 25WV	
C107	YECUZ1H152KX	Ceramic, 0.0015µF 50WV	

Ref. No.	Part No.	Part Name & Description	Remarks
C108	YECUZ1H472KX	Ceramic, 0.0047µF 50WV	
C109	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C110	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C111	YECUSW1A106MA	Tantalum, 10µF 10WV	
C112	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C113	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C115	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C116	YECUZ1H102KX	Ceramic, 0.001µF 50WV	
C117	YECUS1A105KX	Ceramic, 1µF 10WV	
C118	YECUZ1H471KX	Ceramic, 470pF 50WV	
C119	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C120	YECUZ1H561KX	Ceramic, 560pF 50WV	
C121	YECUZ1E123KX	Ceramic, 0.012µF 25WV	
C122	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C133	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C145	YECUZ1A124KX	Ceramic, 0.12µF 10WV	
C201	YECUZ1E123KX	Ceramic, 0.012µF 25WV	
C203	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C204	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C205	YECUSW1A106MA	Tantalum, 10µF 10WV	
C206	F1H1A4740004	Ceramic, 0.47µF	
C208	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C209	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C210	YECUSW1A106MA	Tantalum, 10µF 10WV	
C214	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C451	F1H1A4740004	Ceramic, 0.47µF	
C453	YECUZ1H103KX	Ceramic, 0.01µF 50WV	
C601	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C602	ECV1CA470SP	Electrolytic, 47µF 16WV	
C603	YECUZ1C104KX	Ceramic, 0.1µF 16WV	
C605	YECUS1A105KX	Ceramic, 1µF 10WV	
C901	YECUS1C334KX	Ceramic, 0.33µF 16WV	
C903	YECUZ1C333KX	Ceramic, 0.033µF 16WV	

2.4. Resistors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
J402	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J404	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J405	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J406	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J408	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J410	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J411	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J413	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J414	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J415	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J416	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J417	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J418	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J419	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J420	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J421	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J422	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J423	ERJ8GEY0R00V	Chip, 0Ω 1/8W	
J452	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
J453	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
J454	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R50	ERJ6GEYJ5R6	Chip, 5.6Ω 1/10W	
R51	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R54	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R55	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R58	ERJ6GEYJ392	Chip, 3.9kΩ 1/10W	
R62	ERJ6GEYJ102	Chip, 1kΩ 1/10W	
R63	ERJ6GEYJ104	Chip, 100kΩ 1/10W	
R66	ERJ6GEY0R00V	Chip, 0Ω 1/10W	
R68	ERJ6GEYJ103	Chip, 10kΩ 1/10W	
R201	ERJ6GEYJ223	Chip, 22kΩ 1/10W	
R202	ERJ6GEYJ223	Chip, 22kΩ 1/10W	
R204	ERJ6GEYJ912	Chip, 9.1kΩ 1/10W	
R205	ERJ6GEYJ392	Chip, 3.9kΩ 1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R206	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R207	ERJ6GEYJ682	Chip, 6.8k Ω 1/10W	
R210	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R212	ERJ6GEYJ154	Chip, 150k Ω 1/10W	
R213	ERJ6GEYJ221	Chip, 220 Ω 1/10W	
R215	ERJ6GEYJ472	Chip, 4.7k Ω 1/10W	
R216	ERJ6GEYJ105	Chip, 1M Ω 1/10W	
R219	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R220	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R221	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R222	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R225	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R226	ERJ6GEYJ333	Chip, 33k Ω 1/10W	
R230	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R235	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R240	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R241	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R242	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R243	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R250	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R255	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R256	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R301	ERJ6GEYJ223	Chip, 22k Ω 1/10W	
R302	ERJ6GEYJ223	Chip, 22k Ω 1/10W	
R304	ERJ6GEYJ912	Chip, 9.1k Ω 1/10W	
R305	ERJ6GEYJ392	Chip, 3.9k Ω 1/10W	
R306	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R307	ERJ6GEYJ682	Chip, 6.8k Ω 1/10W	
R310	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R319	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R320	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R321	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R322	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R330	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R335	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R340	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R341	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R342	ERJ6GEYJ561	Chip, 560 Ω 1/10W	
R343	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R344	ERJ8GEYJ223V	Chip, 22k Ω 1/8W	
R350	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R355	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R356	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R405	ERJ6GEYJ331	Chip, 330 Ω 1/10W	
R408	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R600	ERJ6GEYJ330	Chip, 33 Ω 1/10W	
R601	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R602	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R605	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R606	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R608	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R609	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R610	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R611	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R614	ERJ6GEYJ681	Chip, 680 Ω 1/10W	
R615	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R617	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R618	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R619	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R620	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R621	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R622	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R624	ERJ6GEYJ222	Chip, 2.2k Ω 1/10W	
R629	ERJ6GEYJ222	Chip, 2.2k Ω 1/10W	
R630	ERJ8GEYJ222V	Chip, 2.2k Ω 1/8W	
R631	ERJ6GEYJ222	Chip, 2.2k Ω 1/10W	
R632	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R633	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R634	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R639	ERJ6GEYJ184	Chip, 180k Ω 1/10W	
R640	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R641	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R642	ERJ6GEYJ473	Chip, 47k Ω 1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R643	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R649	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R650	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R651	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R652	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R660	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R661	ERJ6GEYJ393	Chip, 39k Ω 1/10W	
R662	ERJ6GEYJ222	Chip, 2.2k Ω 1/10W	
R663	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R666	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R671	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R673	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R677	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R680	ERJ6GEYJ331	Chip, 330 Ω 1/10W	
R681	ERJ6GEYJ331	Chip, 330 Ω 1/10W	
R685	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R686	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R687	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R688	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R690	ERJ6GEYJ184	Chip, 180k Ω 1/10W	
R692	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R694	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R701	ERDS2FJ270	Carbon, 27 Ω 1/4W	
R702	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R703	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R704	ERJ6GEYJ274	Chip, 270k Ω 1/10W	
R705	ERJ6GEYJ433	Chip, 43k Ω 1/10W	
R706	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R707	ERJ6GEYJ224	Chip, 220k Ω 1/10W	
R708	ERJ6GEYJ433	Chip, 43k Ω 1/10W	
R709	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R710	ERDS1FJ681	Carbon, 680 Ω 1/2W	
R711	ERDS1FJ681	Carbon, 680 Ω 1/2W	
R712	ERJ8GEYJ1R0V	Chip, 1.0 Ω 1/8W	
R714	ERJ8GEYJ561V	Chip, 560 Ω 1/8W	
R715	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	
R720	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R721	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R724	ERJ6GEYJ272	Chip, 2.7k Ω 1/10W	
R725	ERJ6GEYJ154	Chip, 150k Ω 1/10W	
R726	ERJ6GEYJ472	Chip, 4.7k Ω 1/10W	
R727	ERJ8GEYJ151V	Chip, 150 ohms 1/8W	
R728	ERJ8GEYJ151V	Chip, 150 ohms 1/8W	
R731	ERJ8GEYJ1R0V	Chip, 1.0 Ω 1/8W	
R732	ERJ8GEYJ561V	Chip, 560 Ω 1/8W	
R750	ERJ8GXOR00V	Chip, 0 Ω 1/8W	
R751	ERJ8GXOR00V	Chip, 0 Ω 1/8W	
R752	ERJ8GXOR00V	Chip, 0 Ω 1/8W	
R755	ERJ8GXOR00V	Chip, 0 Ω 1/8W	
R801	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R804	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R805	ERJ6GEYJ104	Chip, 100k Ω 1/10W	
R806	ERJ6GEYJ473	Chip, 47k Ω 1/10W	
R807	ERJ6GEYJ123	Chip, 12k Ω 1/10W	
R808	ERJ6GEYJ222	Chip, 2.2k Ω 1/10W	
R809	ERJ6GEYJ472	Chip, 4.7k Ω 1/10W	
R811	ERJ6GEYJ273	Chip, 27k Ω 1/10W	
R900	ERJ6GEYJ225V	Chip, 2.2M Ω 1/10W	
R902	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R903	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R904	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R905	ERJ6GEYJ334	Chip, 330k Ω 1/10W	
R906	ERJ6GEYJ182	Chip, 1.8k Ω 1/10W	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
R906	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R907	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R908	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R909	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R910	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R911	ERJ6GEYJ102	Chip, 1k Ω 1/10W	
R930	ERJ6GEYJ332	Chip, 3.3k Ω 1/10W	

Ref. No.	Part No.	Part Name & Description	Remarks
R931	ERJ6GEYJ332	Chip, 3.3k Ω 1/10W	
R938	ERJ6GEYJ4R7	Chip, 4.7 Ω 1/10W	
R941	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R942	ERJ6GEYJ433	Chip, 43k Ω 1/10W	
R961	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R962	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R963	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R964	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R965	ERJ6GEYJ103	Chip, 10k Ω 1/10W	
R970	ERJ6GEYOR00V	Chip, 0 Ω 1/10W	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
J401	ERJ3GEYOR00V	Chip, 0 Ω 1/16W	
J429	ERJ3GEYOR00V	Chip, 0 Ω 1/16W	
R101	ERJ3GEYJ101V	Chip, 100 Ω 1/16W	
R102	ERJ14YJ330H	Chip, 33 Ω 1/4W	
R103	ERJ3GEYJ683V	Chip, 68k Ω 1/16W	
R104	ERJ3GEYJ683V	Chip, 68k Ω 1/16W	
R105	ERJ3GEYJ333V	Chip, 33k Ω 1/16W	
R106	ERJ3GEYJ184V	Chip, 180k Ω 1/16W	
R107	ERJ3GEYJ184V	Chip, 180k Ω 1/16W	
R108	ERJ3GEYJ823V	Chip, 82k Ω 1/16W	
R109	ERJ3GEYJ334V	Chip, 330k Ω 1/16W	
R110	ERJ3GEYJ102V	Chip, 1k Ω 1/16W	
R111	ERJ3GEYJ102V	Chip, 1k Ω 1/16W	
R112	ERJ3GEYJ393V	Chip, 39k Ω 1/16W	
R113	ERJ3GEYJ333V	Chip, 33k Ω 1/16W	
R114	ERJ3GEYJ153V	Chip, 15k Ω 1/16W	
R119	ERJ3GEYJ184V	Chip, 180k Ω 1/16W	
R120	ERJ3GEYJ333V	Chip, 33k Ω 1/16W	
R147	ERJ3GEYJ153V	Chip, 15k Ω 1/16W	
R207	ERJ3GEYJ473V	Chip, 47k Ω 1/16W	
R208	ERJ3GEYJ473V	Chip, 47k Ω 1/16W	
R209	ERJ3GEYJ391V	Chip, 390 Ω 1/16W	
R210	ERJ3GEYJ334V	Chip, 330k Ω 1/16W	
R211	ERJ3GEYJ124V	Chip, 120k Ω 1/16W	
R213	ERJ3GEYJ470V	Chip, 47 Ω 1/16W	
R214	ERJ3GEYJ272V	Chip, 2.7k Ω 1/16W	
R215	ERJ3GEYJ473V	Chip, 47k Ω 1/16W	
R401	ERJ3GEYJ563V	Chip, 56k Ω 1/16W	
R402	ERJ3GEYJ563V	Chip, 56k Ω 1/16W	
R404	ERJ3GEYJ473V	Chip, 47k Ω 1/16W	
R411	ERJ3GEYJ334V	Chip, 330k Ω 1/16W	
R454	ERJ3GEYJ392V	Chip, 3.9k Ω 1/16W	
R455	ERJ3GEYJ472V	Chip, 4.7k Ω 1/16W	
R456	ERJ3GEYJ472V	Chip, 4.7k Ω 1/16W	
R461	ERJ3GEYJ823V	Chip, 82k Ω 1/16W	
R463	ERJ3GEYJ823V	Chip, 82k Ω 1/16W	
R466	ERJ3GEYJ823V	Chip, 82k Ω 1/16W	
R471	ERJ3GEYJ121V	Chip, 120 Ω 1/16W	
R473	ERJ3GEYJ121V	Chip, 120 Ω 1/16W	
R481	ERJ3GEYJ104V	Chip, 100k Ω 1/16W	
R601	ERJ3GEYJ123V	Chip, 12k Ω 1/16W	
R602	ERJ3GEYJ103V	Chip, 10k Ω 1/16W	
R603	ERJ3GEYJ273V	Chip, 27k Ω 1/16W	
R604	ERJ3GEYJ124V	Chip, 120k Ω 1/16W	
R605	ERJ3GEYJ103V	Chip, 10k Ω 1/16W	
R606	ERJ3GEYJ822V	Chip, 8.8k Ω 1/16W	
R607	ERJ3GEYJ103V	Chip, 10k Ω 1/16W	
R608	ERJ3GEYJ103V	Chip, 10k Ω 1/16W	
R609	ERJ3GEYJ472V	Chip, 4.7k Ω 1/16W	
R610	ERJ3GEYJ472V	Chip, 4.7k Ω 1/16W	
R613	ERJ3GEYJ122V	Chip, 1.2k Ω 1/16W	
R901	ERJ3GEYJ103V	Chip, 10k Ω 1/16W	
R902	ERJ3GEYJ333V	Chip, 33k Ω 1/16W	
R903	ERJ3GEYJ122V	Chip, 1.2k Ω 1/16W	

2.5. Connectors

MAIN BLOCK [E6730B]

Ref. No.	Part No.	Part Name & Description	Remarks
CJ620	K9Z200000176	Connector, 14P	
CN201	YEAE012504	Connector, RCA Rear-Out	
CN251	YEAE012709	Connector, 2P RCA	
CN252	YEAE012571	Connector, 2P RCA	
CN301	YEAE012505	Connector, RCA Front-Out	
CN601	YEAE0115MX	Connector, 15P	
CN602	K1HA149A0001	Connector, 7P	
CN603	YEAE0104MX	Connector, 4P	
CN620	YEAE012763	Connector, 14P	
CN680	YEAE012307	Connector, 8P DIN	
CN701	YEAE012748	Connector, 16P	

DISPLAY BLOCK [E8597A]

Ref. No.	Part No.	Part Name & Description	Remarks
CN901	YEAE012760	Connector, 14P	

SUB BLOCK [E8496A]

Ref. No.	Part No.	Part Name & Description	Remarks
CJ640	YEAE0115MPA	Connector, 15P	
CJ642	YEAE0104MPA	Connector, 4P	
CP641	YEAE012761	Connector, 14P	

CD SERVO BLOCK [E8636]

Ref. No.	Part No.	Part Name & Description	Remarks
CN101	YEAESFW15R2E	Connector, 15P	
CN402	K1MN14B00028	Connector, 14P	
CN901	K1MN05B00010	Connector, 5P	
CN902	K1MN05B00009	Connector, 5P	

2.6. Electric Parts

SWITCHES

Ref. No.	Part No.	Part Name & Description	Remarks
SW2	RSE102MH2	Switch	
SW4	YEAS09275	Switch	
SW602	YEAS08042	Switch	
SW610	YEAS09267	Switch	
SW901	YEAS09312	Switch	
SW902	YEAS09312	Switch	
SW903	K0H1BA000285	Switch	
SW904	K0H1BA000285	Switch	
SW905	YEAS09312	Switch	
SW906	YEAS09312	Switch	
SW907	YEAS09312	Switch	
SW908	K0H1BA000285	Switch	
SW909	K0H1BA000285	Switch	
SW910	YEAS09312	Switch	
SW911	YEAS09312	Switch	
SW912	K0H1BA000285	Switch	
SW913	K0H1BA000285	Switch	
SW914	K0H1BA000285	Switch	
SW915	YEAS09312	Switch	
SW916	YEAS09312	Switch	
SW917	K0H1BA000285	Switch	
SW918	K0H1BA000285	Switch	

CRYSTALS

Ref. No.	Part No.	Part Name & Description	Remarks
XL201	H2D169500005	Crystal	
XL451	YEXLSTCC419T	Crystal	
XL600	HOD125500002	Crystal OSC	
XL601	YEXLMC60327	Crystal OSC	
XL900	YEXL49U0433T	Crystal OSC	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L50	YELT03A330KT	Coil	

Ref. No.	Part No.	Part Name & Description	Remarks
L600	YELT02C470KT	Coil	
L601	YELT02C101KT	Coil	
L602	YELT02C101KT	Coil	
L702	YETQ026F143	Coil	
L703	ELEAT330KA02	Coil	
L800	YELT02C101KT	Coil	
L900	YELT02C330KT	Coil	
L901	YELT02C330KT	Coil	
L901	YELT216825TG	Coil	
L902	YELTD75F101T	Coil	

LCD

Ref. No.	Part No.	Part Name & Description	Remarks
LCD901	L5ACALC00004	LCD Display	

LAMPS

Ref. No.	Part No.	Part Name & Description	Remarks
Z50	YEAL02007T	Neon Lamp	
CFL931	A2CA00000013	Display Tube	

THERMISTOR

Ref. No.	Part No.	Part Name & Description	Remarks
PT701	YERT7AR4R7MT	Thermistor	

2.7. Accessories

PRINTING

Ref. No.	Part No.	Part Name & Description	Remarks
	YGFM282954	Operating Instructions	

INSTALLATION PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
	YEAJ02815	Power Cord	
	YAAA33144	Antenna Accessory	
	CR2025/1F	Battery	
	YEP9BS1111	Screws	
	YEFA131302	Removable Face Plate Case	
	YEFX0214198	Mounting Collar	
	YEFX9992012	Remote Controller	

Ref. No.	Part No.	Part Name & Description	Remarks
21	YEFV011813	Insulator	(1-B)
22	YEFV021596	Optical Shade	(2-B)
24	YEFV03457	Magnetic Shield	(2-A)
25	YEFV011928	Insulator	(2-A)
26	YEFW04156	Shaft Collar	(2-B)
27	YEFW04157	Shaft Collar	(2-A)
28	YEFX0214422	Bracket, CN701	(3-B)
29	YEFX0011903	Transparent Plate	(2-B)
30	YEFX0213945B	Bracket, IC241	(2-B)
31	YEFX0214625	Bracket, Inverter	(2-A)
32	YEFX0214700	Bracket, Deck	(3-B)
33	YEFX0011904	Transparent Plate, L	(1-A)
34	YEFX0214423	Bracket, IC702	(2-B)
35	YEFX0011905	Transparent Plate, R	(1-A)
36	YEFX0214168	Bracket, IC704	(2-B)
37	YEFX025137A	Color Screen	(2-B)
38	YEFX007380	Cord Clamper, CN251	(3-B)
39	YAFX016027	Cord Clamper	(3-C)
40	YEP9FX069	Hook Bracket Ass'y	(3-B)
41	YEFX0052396	Spring, Open	(1-A)
42	YEFX0052253	Spring	(2-A) (2-B)
44	YEP9FX088	Front Chassis Ass'y	(3-B)
49	YEFM031083	Wheel	(4-B)
51	YEJS06092	Screw, 3mm * 10mm	
52	YEJS03020	Screw, 2mm * 4mm	
53	YEJT03009	Tapping Screw, 3mm * 8mm	
54	XTB3+6FFX	Tapping Screw, 3mm * 6mm	
55	YEJT03156	Tapping Screw, 2.6mm * 4mm	
56	YEJT03247	Tapping Screw,	
57	XTN2+8GFZ	Tapping Screw, 2mm * 8mm	
58	XYN2+J4FX	Screw, 2mm * 4mm	


2.8. Mechanical Parts

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
F1 △	YEAJ02015	Fuse, 15A	
AJ252	YEAJ8VW3503	Tube	
ANT51	YAAA10090	Antenna Receptacle	
ATI-3	K4ZZ01000048	Terminal	
HP1	YEAT03324	Terminal	
1	YEFA05594B	Bottom Cover	(1-B)
2	YEFA031359D	Upper Cover	(4-C)
3	YEFA08494AK	Rear Plate	(3-C)
4	YEFA131413	Cover, Detachable	(2-A)
5	YEFA09505	Side Plate	(1-C)
6	YEF026243	Escutcheon Ass'y, Unit	(3-A)
7	YEF026119	Escutcheon Ass'y, Detachable	(1-A)
8	YEF05570	Trim Plate	(1-A)
9	YEF135147	Button, EJECT	(3-A)
10	YEF135435	Button, VOL	(1-A)
11	YEF135436	Button, SEL	(1-A)
12	YEF135713	Button, BAND/SOURCE	(1-A)
13	YEF135439	Button, TUNE/TRACK	(1-A)
14	YEF135534	Button, TA/AF	(1-A)
15	YEF135537	Button, PRESET	(1-A)
16	YEF135442	Button, OPEN	(1-A)
17	YEFF01922	Heat Sink	(3-A)
18	YEFJ05030	Color Rivet	(2-A)
19	YEFK06835	Holder, LCD	(2-A)
20	YEFR04187	Lead Cap	(4-C)

EXPLODED VIEW (Unit)

Numbers in ○ are indicated REF.NO. in the REPLACEMENT PARTS LIST

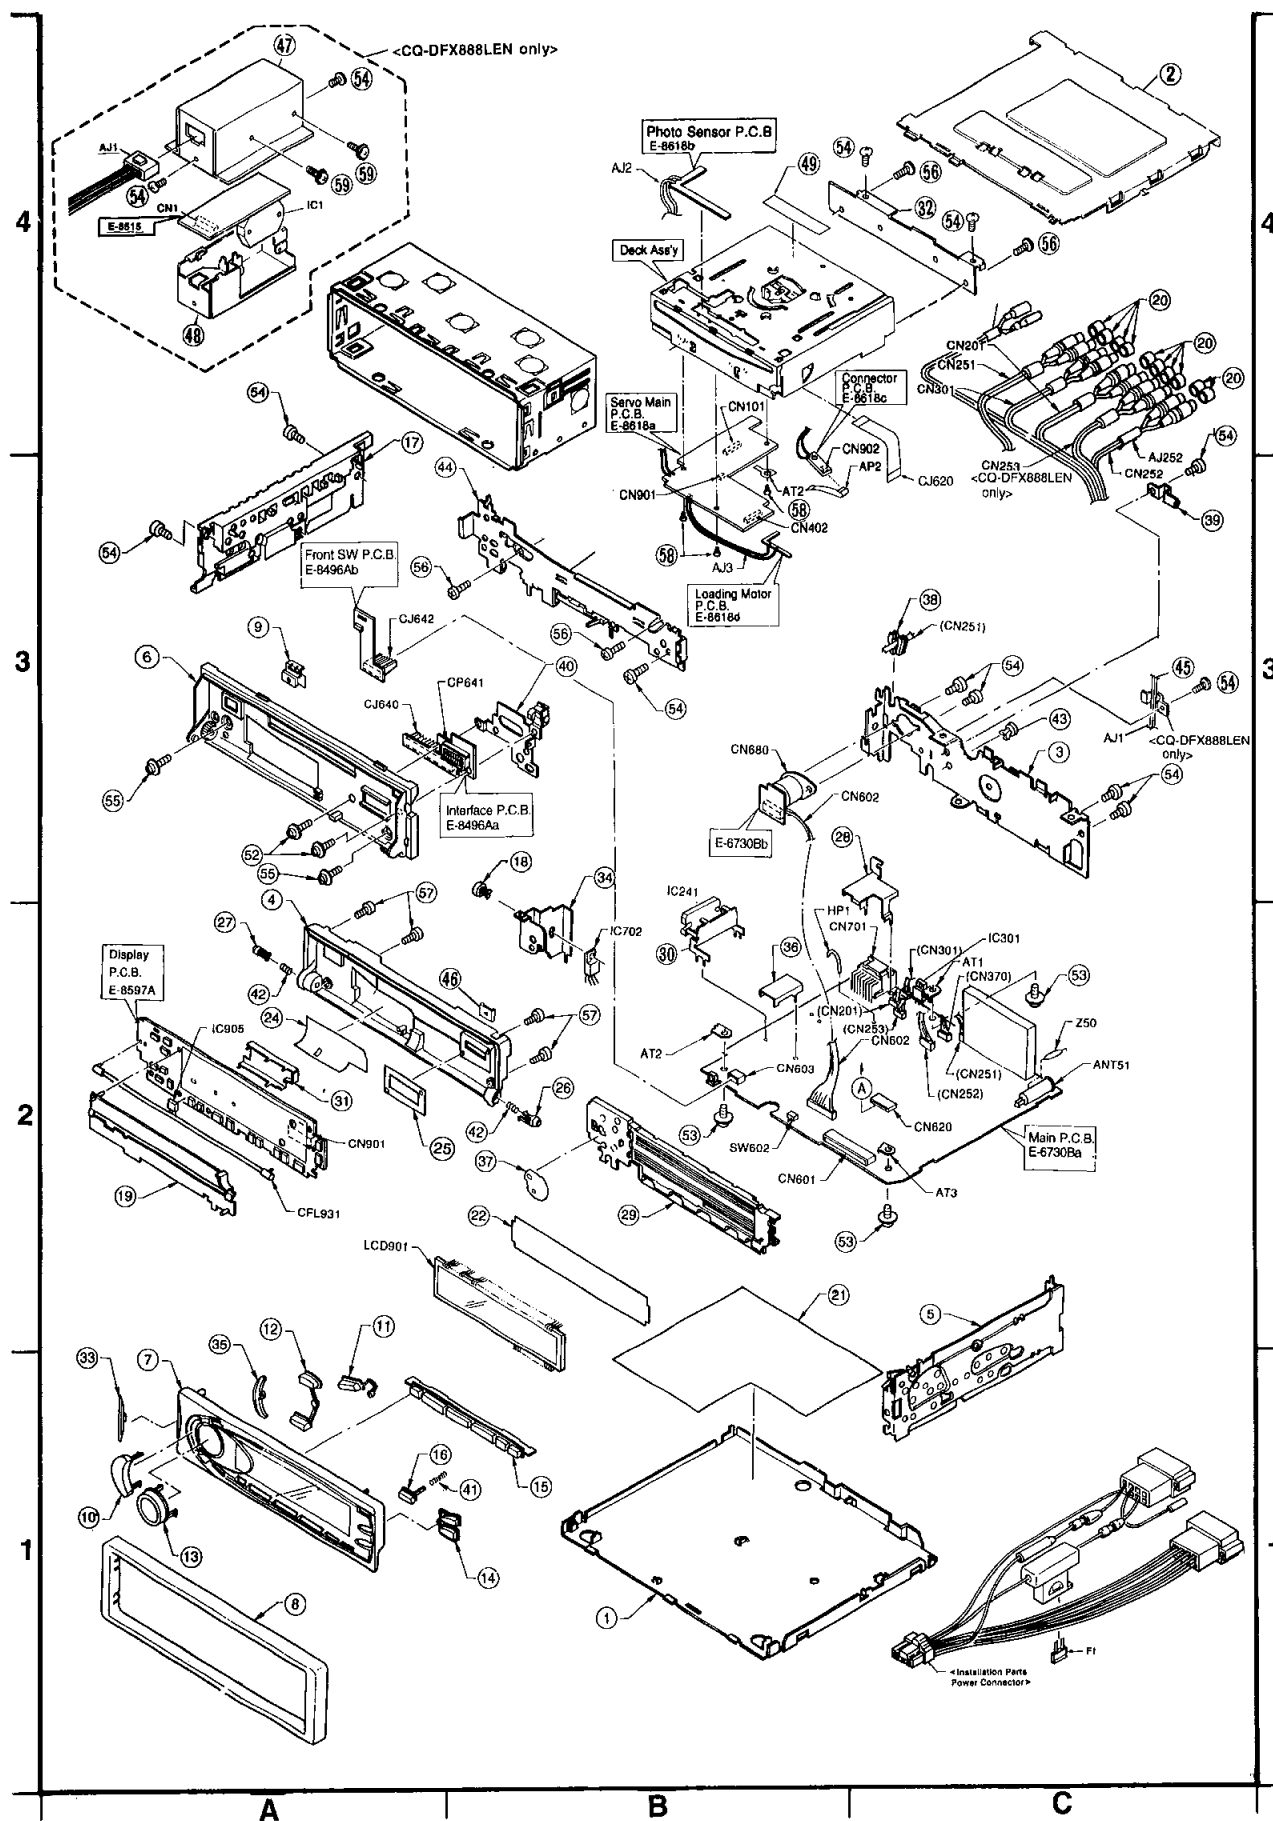


3 CD PLAYER PARTS


MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
1	YGFA011781	Upper Chassis	(4-A)
2	YGFX236153	Disk Guide	(4-A)
3	YGFX0462017	Link Lever	(4-A)
4	YGFX0462018	Detection Lever (2)	(4-B)
5	YGFX0052357	Detection Lever (2) Spring	(4-B)
6	YEJT03131	Tapping Screw, 2.6 mm* 5mm	(2-C) (2-B)
7	YGFX249461	Clamp Arm	(3-A)
8	YGFX007640	Clamper	(3-A)
9	YGFX0052363	Clamper Spring Plate	(3-A)
10	YEFX999957	Ball Bearing	(3-A)
11	YGFX0462013	Detection Lever (1)	(3-A)
12	YGFX0052352	Detection Lever (1) Spring	(3-A)
13	YGFA011795	Suspension Chassis Ass'y	(3-A)
14	YEP0FX3100	Optical Pick-up Ass'y	(3-B)
15	YEFW04150	Feed Screw Housing A	(2-B)
16	YEFW04137A	Feed Screw Housing B	(2-B)
17	YGFX0052386	Thrust Adjusting Spring	(2-B)
18	YEFX236144B	Traverse Guide	(3-A)
19	YGFX9992027	Feed Screw Carrier	(3-B)
20	YEFX9991458A	FPC Holder	(2-A)
21	YGJT03240	Traverse Gear Ass'y	(2-B)
22	YEJS02037	Screw, (Pick-up)	(3-A) (3-B)
23	XYN2+C5FX	Screw, (FPC) 2mm * 5mm	(2-A)
24	XYN2+J10FX	Screw, (Housing) 2mm * 10m	(2-B)
25	YEFX0051590	Spring Washer	(3-A)
26	XUC15V	Retaining Ring, 1.5mm	(3-A)
27	YEFX9991806A	Sealed Plate	(3-B)
28	YGP0FX3503	Traverse Motor Ass'y	(2-B)
29	YEAS23151A	Inner Switch	(2-B)
30	YEFR03080	Rubber Belt	(2-B)
31	YEFX026124A	Idler Pulley	(2-B)
32	YGFX018611	Motor Bracket Ass'y	(2-B)
33	YEJS02018FZ	Screw, (SW)	(2-B)
34	XQN2+A25FX	Screw, 2mm * 25mm	(2-B)
35	YGP0FX3529	Spindle Motor Ass'y	(2-A)
36	YEFX0051991C	Spring (Motor)	(2-A)
37	YGFX0052353	Clamper Spring	(2-A)
38	YGAJ071286	Motor Cable	(2-A)
39	XQN17+A25FX	Screw, 1.7mm * 25mm	(3-A)
40	YGFX0462019	Feeder Arm Ass'y	(1-A)
41	YGP0FX3507	Roller Gear Ass'y	(2-B)
42	YEFW04144	Roller Shaft Collar (1)	(2-A)
43	YEFW04138	Roller Shaft Collar (2)	(2-A)
44	YEFX218282	Rubber Roller	(2-A)
45	YEW04128	Washer	(2-A)
46	YGFX0052362	Spring (Feeder Arm)	(1-A)
47	YGFX0462015	Suspension Lock Plate (L)	(1-A)
48	YGP0FX3504	Suspension Lock Plate (R) Ass'y	(1-B)
49	YGFX0052355	Spring (Rack Gear)	(1-A)
50	YGFX0052356	Spring (Rack Lock Lever)	(1-B)
51	YGFX0052360	Spring (Suspension Lock Plate L)	(1-A)
52	YGFX0052361	Spring (Lock Plate)	(3-C)
53	YGFA011779	Bottom Chassis Ass'y	(3-C)
54	YGFX003940	Driving Gear (1)	(3-C)
55	YGFX003941	Driving Gear (2)	(3-C)
56	YGP0FX3506	Loding Motor Ass'y	(3-C)
57	YGFX018605	Loding Motor Bracket Ass'y	(3-C)
58	XQN2+A25FX	Screw, (Motor) 2mm * 25mm	(3-C)
59	YEJS06188	Screw	(2-C)
60	YEF04693	Oil Dumper	(1-C)
61	YGFX0052358	Suspension Spring (A)	(2-C)
62	YGFX0052359	Suspension Spring (B)	(2-C)

EXPLODED VIEW (CD Deck)

■ Numbers in ○ are indicated REF.NO. in the REPLACEMENT PARTS LIST

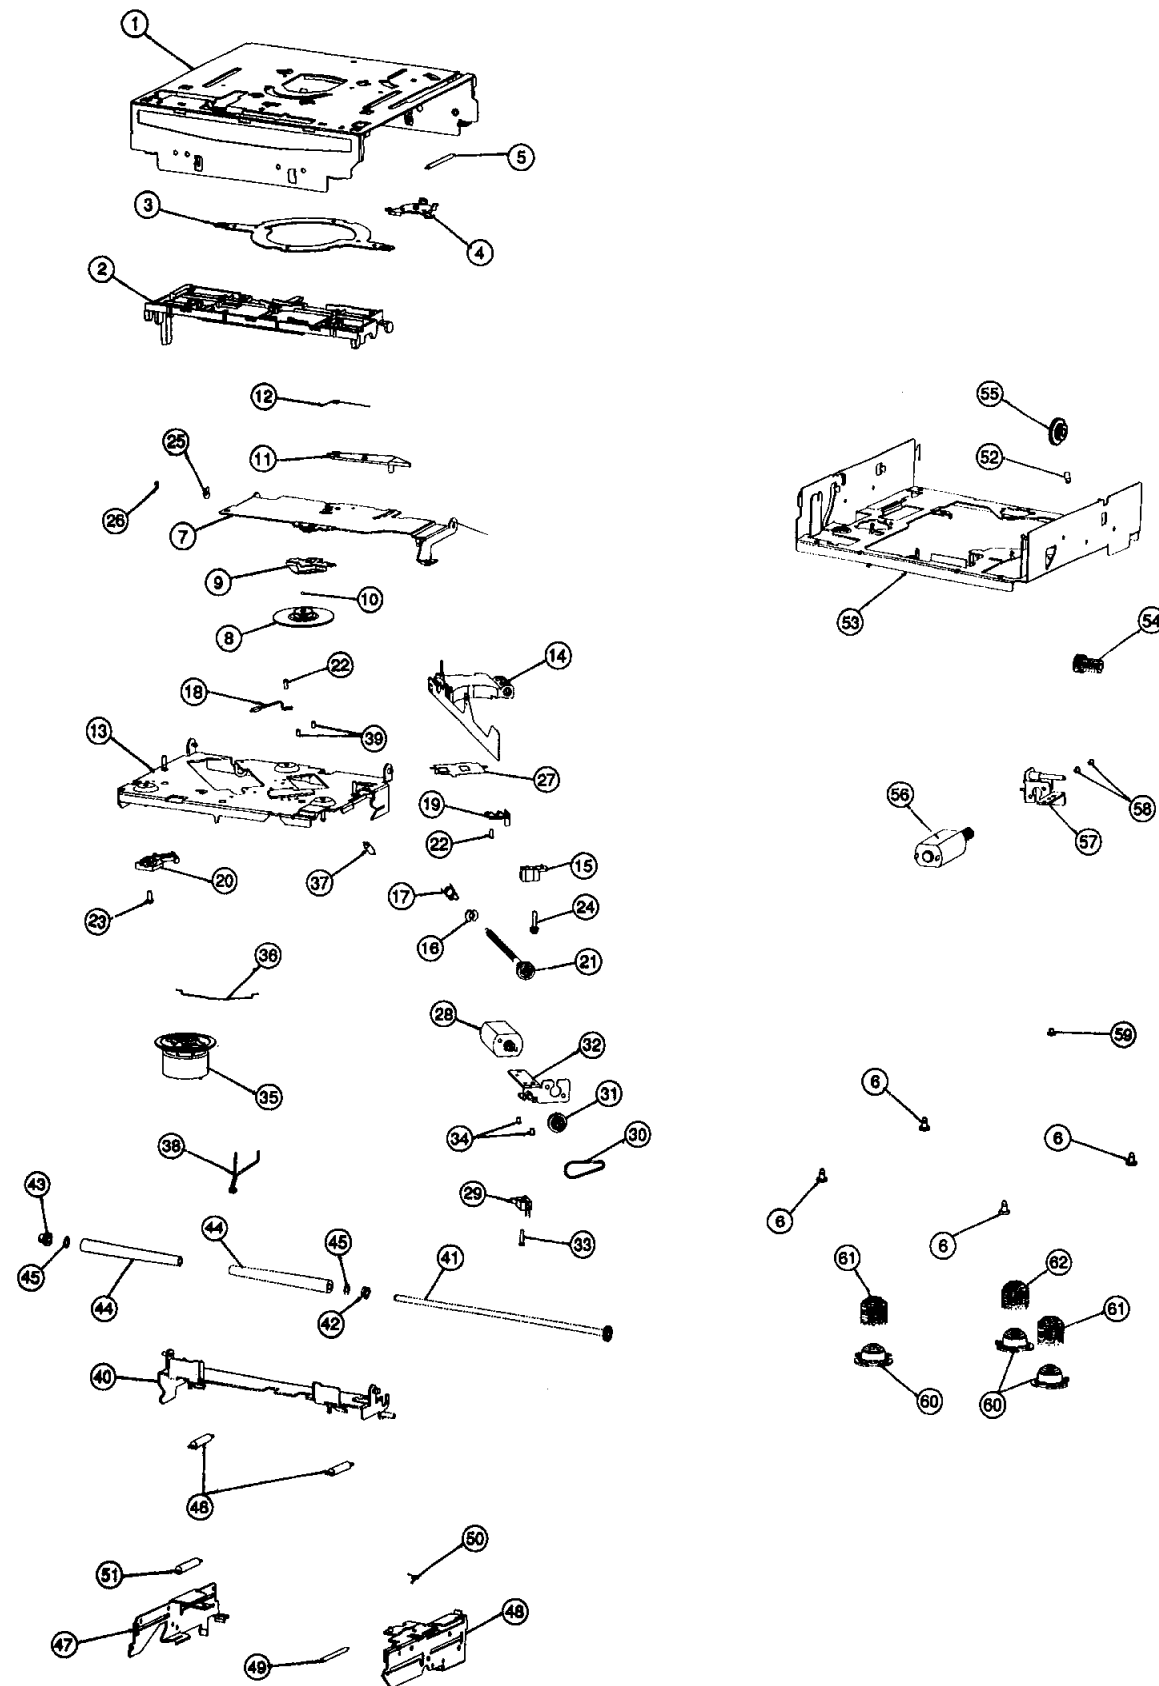

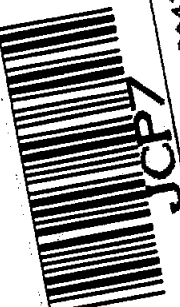		Door No. 2	
		Drop No. 8	
Customer: TECHNICA42			
Load: SP0TH5		Qty: 1	
Model: ACED9903199		29/06/00	
Assemble at: 60			